OMRON

Machine Automation Controller

NJ-series

CPU Unit Hardware

User's Manual

NJ501-1□□□

NJ-P□3001

CJ1W-IDP01

CJ1W-B7A□□

CPU Unit Power Supply Unit Basic I/O Units





© OMRON, 2011 All rights reserved. No part of this publication may be reproduced, stored in a retrieval system, or transmitted, in any form, or by any means, mechanical, electronic, photocopying, recording, or otherwise, without the prior written permission of OMRON. No patent liability is assumed with respect to the use of the information contained herein. Moreover, because OMRON is constantly striving to improve its high-quality products, the information contained in this manual is subject to change without notice. Every precaution has been taken in the preparation of this manual. Nevertheless, OMRON assumes no responsibility for errors or omissions. Neither is any liability assumed for damages resulting from the use of the information contained in this publication.

Introduction

Thank you for purchasing an NJ-series CPU Unit.

This manual contains information that is necessary to use the NJ-series CPU Unit. Please read this manual and make sure you understand the functionality and performance of the NJ-series CPU Unit before you attempt to use it in a control system.

Keep this manual in a safe place where it will be available for reference during operation.

Intended Audience

This manual is intended for the following personnel, who must also have knowledge of electrical systems (an electrical engineer or the equivalent).

- Personnel in charge of introducing FA systems.
- Personnel in charge of designing FA systems.
- Personnel in charge of installing and maintaining FA systems.
- · Personnel in charge of managing FA systems and facilities.

For programming, this manual is intended for personnel who understand the programming language specifications in international standard IEC 61131-3 or Japanese standard JIS B3503.

Applicable Products

This manual covers the following products.

- NJ-series CPU Units
 - NJ501-1300
 - NJ501-1400
 - NJ501-1500


Relevant Manuals

There are three manuals that provide basic information on the NJ-series CPU Units: the NJ-series CPU Unit Hardware User's Manual, the NJ-series CPU Unit Software User's Manual (this manual), and the NJ-series Instructions Reference Manual.

Most operations are performed from the Sysmac Studio Automation Software. Refer to the *Sysmac Studio Version 1 Operation Manual* (Cat. No. W504) for information on the Sysmac Studio.

Other manuals are necessary for specific system configurations and applications.

Read all of the manuals that are relevant to your system configuration and application to make the most of the NJ-series CPU Unit.

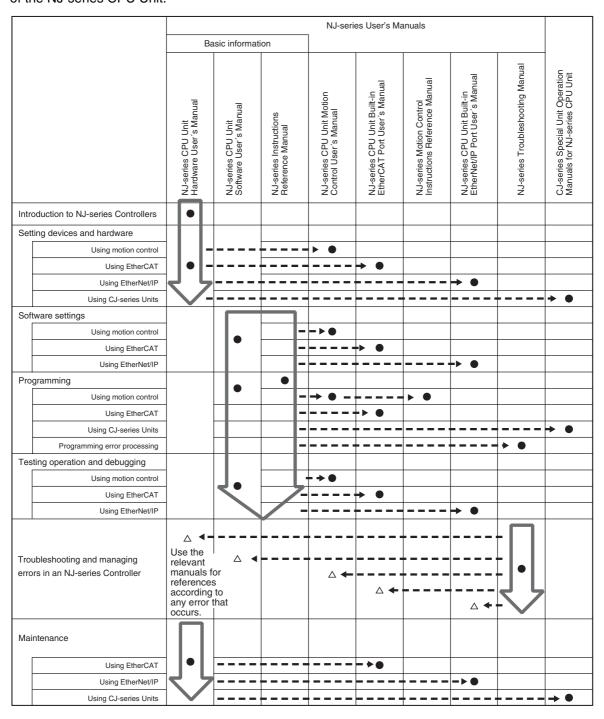

Manual Configuration

NJ-series CPU Unit Hardware User's Manual (Cat. No. W500) (This Manual)

Section	Description
Section 1 Introduction	This section provides an introduction to the NJ-series Controllers and their features, and gives the NJ-series Controller specifications.
Section 2 System Configuration	This section describes the system configuration used for NJ-series Controllers.
Section 3 Configuration Units	This section describes the parts and functions of the configuration devices in the NJ-series Controller configuration, including the CPU Unit and Configuration Units.
Section 4 Installation and Wiring	This section describes where and how to install the CPU Unit and Configuration Units and how to wire them.
Section 5 Troubleshooting	This section describes the event codes, error confirmation methods, and corrections for errors that can occur.
Section 6 Inspection and Maintenance	This section describes the contents of periodic inspections, the service life of the Battery and Power Supply Units, and replacement methods for the Battery and Power Supply Units.
Appendices	The appendices provide the specifications of the Basic I/O Units, Unit dimensions, load short-circuit protection detection, line disconnection detection, and measures for EMC Directives.

NJ-series CPU Unit Software User's Manual (Cat. No. W501)

Section	Description
Section 1 Introduction	This section provides an introduction to the NJ-series Controllers and their features, and gives the NJ-series Controller specifications.
Section 2 CPU Unit Operation	This section describes the variables and control systems of the CPU Unit and CPU Unit status.
Section 3 I/O Ports, Slave Configuration, and Unit Configuration	This section describes how to use I/O ports, how to create the slave configuration and unit configuration and how to assign functions.
Section 4 Controller Setup	This section describes the initial settings of the function modules.
Section 5 Designing Tasks	This section describes the task system and types of tasks.
Section 6 Programming	This section describes programming, including the programming languages and the variables and instructions that are used in programming.
Section 7 Simulation, Transferring Projects to the Physical CPU Unit, and Opera- tion	This section describes simulation of Controller operation and how to use the results of simulation.
Section 8 CPU Unit Status	This section describes CPU Unit status.
Section 9 CPU Unit Functions	This section describes the functionality provided by the CPU Unit.
Section 10 Communications Setup	This section describes how to go online with the CPU Unit and how to connect to other devices.
Section 11 Example of Actual Application Procedures	This section describes the procedures that are used to actually operate an NJ-series Controller.
Section 12 Troubleshooting	This section describes the event codes, error confirmation methods, and corrections for errors that can occur.
Appendices	The appendices provide the CPU Unit specifications, task execution times, system-defined variable lists, data attribute lists, CJ-series Unit memory information, CJ-series Unit memory allocation methods, and data type conversion information.

NJ-series CPU Unit Motion Control User's Manual (Cat. No. W507)

Section	Description
Section 1 Introduction to the Motion Control Function Module	This section describes the features, system configuration, and application flow for the Motion Control Function Module.
Section 2 Motion Control Configuration and Principles	This section outlines the internal structure of the CPU Unit and describes the configuration and principles of the MC Function Module.
Section 3 Configuring Axes and Axes Groups	This section describes the concept of axes and axes groups, the settings for axes that are required for the MC Test Run operations to function on the Sysmac Studio, and the instructions for creating and configuring axes and axes groups using the Sysmac Studio.
Section 4 Checking Wiring from the Sysmac Studio	This section describes the MC Test Run operations of the Sysmac Studio. You can use the MC Test Run operations to monitor sensor signals, check Servomotor wiring, and more, all without any programming.
Section 5 Motion Control Parameters	This section provides information on the axis parameters and axes group parameters that are used for motion control.
Section 6 Motion Control Programming	This section provides the specifications of a motion control program and the operating procedures that are required up through actual program development.
Section 7 Manual Operation	This section describes manual operation when the MC Function Module is used together with an OMRON G5-series Servo Drive.
Section 8 Homing	This section describes homing.
Section 9 Motion Control Functions	This section describes the motion control functions that are used when connected to OMRON G5-series Servo Drives with built-in EtherCAT communications.
Section 10 Sample Programming	This section describes basic application methods for homing, error monitoring, and other functions, and provides programming samples for absolute positioning, cam operation, and other axis operations.
Section 11 Troubleshooting	This section describes the items to check when problems occur in the MC Function Module. It includes error diagnosis and countermeasures for error indications, and error diagnosis and countermeasures for operating conditions.
Appendices	The appendices describe settings and connection methods for OMRON G5-series Servo Drive objects.

NJ-series Instructions Reference Manual (Cat. No. W502)

Section	Description
Section 1 Instruction Set	This section provides a table of the instructions that are described in this manual.
Section 2 Instruction Descriptions	This section describes instruction specifications in detail.
Appendices	The appendices provide a table of error codes and other supplemental information to use instructions.

NJ-series CPU Unit Built-in EtherCAT Port User's Manual (Cat. No. W505)

Section	Description
Section 1 Introduction	This section provides an overview of EtherCAT communications, describes the system configuration and specifications, and provides operating procedures.
Section 2 Part Names and Slave Settings	This section provides the part names and describes the slave settings and Sysmac device functions.
Section 3 EtherCAT Communications	This section describes the different types of EtherCAT communications, EtherCAT settings, and state transitions.
Section 4 EtherCAT Network Wiring	This section describes how to connect and wire an EtherCAT network.
Section 5 Setting Up EtherCAT Communications with the Sysmac Studio	This section describes how to set the network configuration information and how to check EtherCAT communications from the Sysmac Studio.
Section 6 Process Data Communications and SDO Communications	This section describes the timing of communications, response times, and special instructions for process data communications and SDO communications. It also provides sample programming.
Section 7 System-defined Variables That Are Related to the Built-in EtherCAT Port	This section describes the system-defined variables that are related to the built-in EtherCAT port.
Section 8 Example of Operations for EtherCAT Communications	This section provides a series of example operations for when an NJ-series CPU Unit is connected to slaves.
Section 9 Troubleshooting	This section describes the event codes, error confirmation methods, and corrections for errors that can occur for EtherCAT communications. It also describes how to replace slaves.
Appendices	The appendices describe the relation of EtherCAT communications to overall CPU Unit status, packet monitoring functions, and multi-vendor application.

NJ-series CPU Unit Built-in EtherNet/IP Port User's Manual (Cat. No. W506)

Section	Description
Section 1 Introduction	This section provides an overview and the specifications of the built-in EtherNet/IP port on an NJ-series Controller. It introduces EtherNet/IP communications and describes the system configuration and operating procedures.
Section 2 Installing Ethernet Networks	This section describes the Ethernet network configuration devices, network installation, and cable connection methods.
Section 3 System-defined Variables Related to the Built-in EtherNet/IP Port	This section describes the system-defined variables that are related to the built-in EtherNet/IP port.
Section 4 Determining IP Addresses	This section describes how to set IP addresses for built-in EtherNet/IP ports.
Section 5 Sysmac Studio Settings for the Built-in EtherNet/IP Port	This section describes the settings that are required for EtherNet/IP communications.
Section 6 Testing Communications	This section describes how to perform communications test with EtherNet/IP nodes to confirm that the built-in EtherNet/IP port is set correctly.
Section 7 Tag Data Link Functions	This section introduces tag data link communications and describes the settings that are required to use tag data links.
Section 8 Message Communications	This section describes how to use CIP message communications for devices on the EtherNet/IP network, e.g., to read and write data.
Section 9 Socket Service	This section describes how to use socket communications to send and receive data with TCP/UDP.
Section 10 FTP Server	This section describes how to use the FTP server to download and upload files in the SD Memory Card to and from FTP clients.
Section 11 Automatic Clock Adjustment	This section describes how to automatically get clock information from an NTP server to update the clock information in the CPU Unit.
Section 12 SNMP Agent	This section describes how to use the SNMP to manage the built-in EtherNet/IP port as an SNMP agent.
Section 13 Communications Performance and Communications Load	This section describes tag data links communications, adjustment of the communications load, and communications time.
Section 14 Troubleshooting	This section describes how to use event codes and network status to confirm errors and corrections for them.
Appendices	The appendices provide a functional comparison of EtherNet/IP between NJ-series CPU Units and other series, and describe EDS file management, Windows firewall settings for connections from computers, and details on memory used for CJ-series Units.

NJ-series Motion Control Instructions Reference Manual (Cat. No. W508)

Section	Description
Section 1 Introduction to Motion Control Instructions	This section gives an introduction to motion control instructions supported by NJ-series CPU Units.
Section 2 Variables and Instructions	This section describes the variables and instructions for the Motion Control Function Module.
Section 3 Axis Command Instructions	This section describes the instructions that are used to perform single-axis control for the MC Function Module.
Section 4 Axes Group Instructions	This section describes the instructions to perform multi-axes coordinated control for the MC Function Module.
Section 5 Common Command Instructions	This section describes the instructions that are used for both axes and axes groups.
Appendices	The appendices describe the error codes that are generated by the instructions.

NJ-series Troubleshooting Manual (Cat. No. W503)

Section	Description
Section 1 Overview of Errors	This section describes the errors that can occur on an NJ-series Controller, the operation that occurs for errors, and methods to confirm errors.
Section 2 Error Troubleshooting Methods	This section describes how to handle errors.
Section 3 Error Tables	This section lists all of the error events that can occur on NJ-series Controllers.


Sysmac Studio Version 1 Operation Manual (Cat. No. W504)

Section	Description
Section 1 Introduction	This section provides an overview and lists the specifications of the Sysmac Studio and describes its features and components.
Section 2 Installation and Uninstallation	This section describes how to install and uninstall the Sysmac Studio.
Section 3 System Design	This section describes the basic concepts for designing an NJ-series System with the Sysmac Studio and the basic operating procedures.
Section 4 Programming	This section describes how to create programs with the Sysmac Studio.
Section 5 Online Connections to a Controller	This section describes how to go online with a Controller.
Section 6 Debugging	This section describes how to debug the programs online on the Controller or debug it offline with the Simulator.
Section 7 Other Functions	This section describes Sysmac Studio functions other than system design functions.
Section 8 Reusing Programming	This section describes how to reuse the programs that you create with the Sysmac Studio.
Section 9 Support Software Provided with the Sysmac Studio	This section describes the Support Software that is provided with the Sysmac Studio.
Section 10 Troubleshooting	This section describes the error messages that are displayed when you check a program on the Sysmac Studio and how to correct those errors.
Appendices	The appendices describe the following: Driver Installation for Direct USB Cable Connection Specifying One of Multiple Ethernet Interface Cards Online Help Simulation Instructions

Manual Structure

Page Structure

The following page structure is used in this manual.

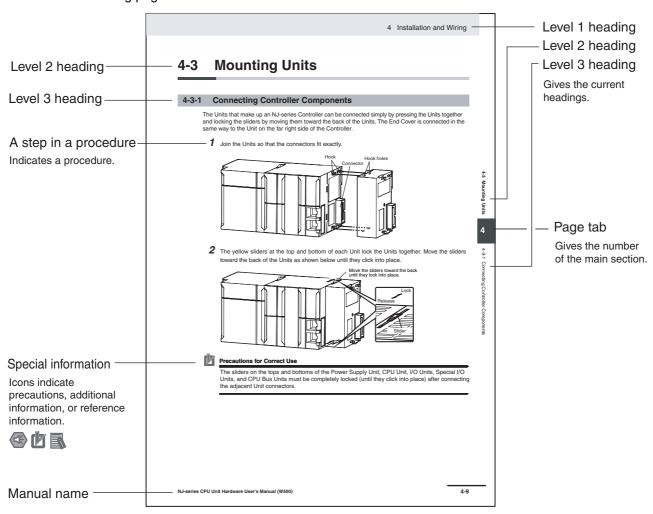

This illustration is provided only as a sample. It may not literally appear in this manual.

Special Information

Special information in this manual is classified as follows:



Precautions for Safe Use

Precautions on what to do and what not to do to ensure safe usage of the product.



Precautions for Correct Use

Precautions on what to do and what not to do to ensure proper operation and performance.



Additional Information

Additional information to read as required.

This information is provided to increase understanding or make operation easier.

Note References are provided to more detailed or related information.


Precaution on Terminology

In this manual, "download" refers to transferring data from the Sysmac Studio to the physical Controller and "upload" refers to transferring data from the physical Controller to the Sysmac Studio.

For the Sysmac Studio, synchronization is used to both upload and download data. Here, "synchronize" means to automatically compare the data for the Sysmac Studio on the computer with the data in the physical Controller and transfer the data in the direction that is specified by the user.

Manual Structure

Sections in this Manual

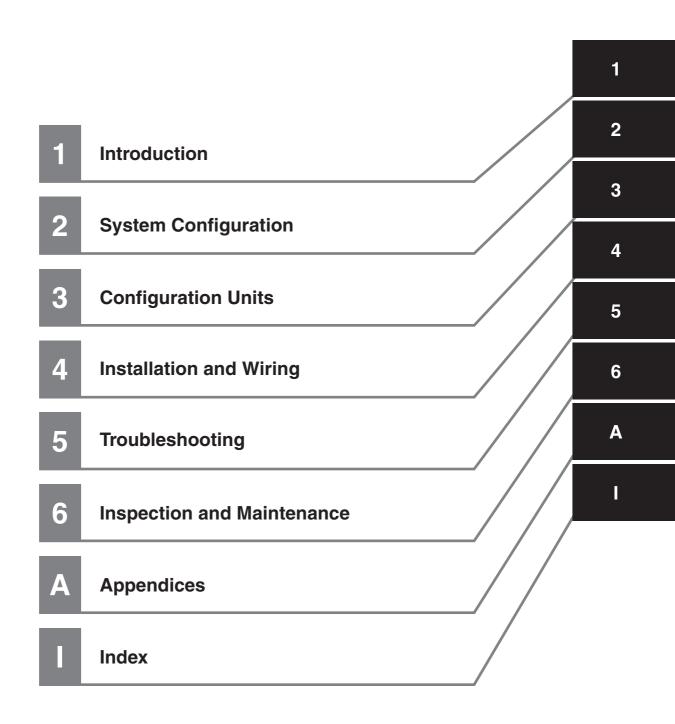

Sections in this Manual

CONTENTS

	Intro	oduction	1
	Rele	evant Manuals	2
	Man	nual Configuration	3
	Man	nual Structure	8
	Sec	tions in this Manual	. 11
	Rea	d and Understand this Manual	. 17
	Safe	ety Precautions	. 21
	Pred	cautions for Safe Use	. 26
	Pred	cautions for Correct Use	. 32
	Reg	julations and Standards	. 35
		t Versions	
	Rela	ated Manuals	. 40
	Terr	minology	. 42
		rision History	
	1101	10.0.1 motor y	0
Section	on 1	Introduction	
	1-1	The NJ-series Controllers	1-2
		1-1-1 Features	
	1-2	Specifications	
	1-3	Overall Operating Procedure for the NJ-series Controller 1-3-1 Overall Procedure 1-3-2 Procedure Details	1-8
Sectio	on 2	System Configuration	
	2-1	Basic System Configuration	2-4
	2-2	Connecting to the Sysmac Studio	
	2-3	Network Configuration	

Section 3 Configuration Units

3-1	CPU Units	3-2
	3-1-1 Models and Specifications	3-2
	3-1-2 Components and Functions	3-2
3-2	SD Memory Cards	3-9
-		
3-3		
	·	
	,	
3-4		
	•	
	3-4-2 Part Names and Functions	3-22
3-5	B7A Interface Ports	3-25
	3-5-1 Overview	
	3-5-2 System Configuration	3-25
	3-5-3 Models	3-25
	3-5-4 B7A Communications Specifications	
	3-5-8 Transmission Error Processing	3-30
3-6	CJ-series I/O Control Units and I/O Interface Units	3-31
	3-6-1 Models and Specifications	3-31
	3-6-2 Component and Functions	
3-7	·	3-33
3-7	Sysmac Studio	
3-7	·	3-32
3-7 on 4	Sysmac Studio 3-7-1 Model Numbers	3-32
	Sysmac Studio	3-32 3-33
on 4	Sysmac Studio 3-7-1 Model Numbers 3-7-2 Connection Installation and Wiring Processing at Power ON and Power OFF	3-32 3-33
on 4	Sysmac Studio 3-7-1 Model Numbers 3-7-2 Connection Installation and Wiring Processing at Power ON and Power OFF	3-32 3-33 4-2
on 4	Sysmac Studio 3-7-1 Model Numbers 3-7-2 Connection Installation and Wiring Processing at Power ON and Power OFF 4-1-1 Power ON Operation	3-32 3-33 4-2 4-3
on 4 - 4-1	Sysmac Studio 3-7-1 Model Numbers 3-7-2 Connection Installation and Wiring Processing at Power ON and Power OFF 4-1-1 Power ON Operation 4-1-2 Power OFF Operation 4-1-3 Resetting the Controller from the Sysmac Studio	3-32 4-2 4-3 4-5
on 4	Sysmac Studio 3-7-1 Model Numbers 3-7-2 Connection Installation and Wiring Processing at Power ON and Power OFF 4-1-1 Power ON Operation 4-1-2 Power OFF Operation 4-1-3 Resetting the Controller from the Sysmac Studio Fail-safe Circuits	
on 4 - 4-1 4-2	Sysmac Studio 3-7-1 Model Numbers 3-7-2 Connection Installation and Wiring Processing at Power ON and Power OFF 4-1-1 Power ON Operation 4-1-2 Power OFF Operation 4-1-3 Resetting the Controller from the Sysmac Studio Fail-safe Circuits 4-2-1 Order of Powering Up the Controller and Controlled System	
on 4 - 4-1	Sysmac Studio 3-7-1 Model Numbers 3-7-2 Connection Installation and Wiring Processing at Power ON and Power OFF 4-1-1 Power ON Operation 4-1-2 Power OFF Operation 4-1-3 Resetting the Controller from the Sysmac Studio Fail-safe Circuits 4-2-1 Order of Powering Up the Controller and Controlled System. Mounting Units	
on 4 - 4-1 4-2	Sysmac Studio 3-7-1 Model Numbers 3-7-2 Connection Installation and Wiring Processing at Power ON and Power OFF 4-1-1 Power ON Operation 4-1-2 Power OFF Operation 4-1-3 Resetting the Controller from the Sysmac Studio Fail-safe Circuits 4-2-1 Order of Powering Up the Controller and Controlled System Mounting Units 4-3-1 Installation in a Control Panel	3-33 4-2 4-3 4-5 4-7 4-9
on 4 - 4-1 4-2	Sysmac Studio	
on 4 - 4-1 4-2	Sysmac Studio 3-7-1 Model Numbers 3-7-2 Connection Installation and Wiring Processing at Power ON and Power OFF 4-1-1 Power ON Operation 4-1-2 Power OFF Operation 4-1-3 Resetting the Controller from the Sysmac Studio Fail-safe Circuits 4-2-1 Order of Powering Up the Controller and Controlled System Mounting Units 4-3-1 Installation in a Control Panel 4-3-2 Connecting Controller Components 4-3-3 DIN Track Installation	3-32 4-2 4-3 4-5 4-7 4-9 4-14
on 4 - 4-1 4-2	Sysmac Studio 3-7-1 Model Numbers 3-7-2 Connection Installation and Wiring Processing at Power ON and Power OFF 4-1-1 Power ON Operation 4-1-2 Power OFF Operation 4-1-3 Resetting the Controller from the Sysmac Studio Fail-safe Circuits 4-2-1 Order of Powering Up the Controller and Controlled System. Mounting Units 4-3-1 Installation in a Control Panel 4-3-2 Connecting Controller Components 4-3-3 DIN Track Installation 4-3-4 Connecting CJ-series Expansion Racks	
on 4 - 4-1 4-2	Sysmac Studio 3-7-1 Model Numbers 3-7-2 Connection Installation and Wiring Processing at Power ON and Power OFF 4-1-1 Power ON Operation 4-1-2 Power OFF Operation 4-1-3 Resetting the Controller from the Sysmac Studio Fail-safe Circuits 4-2-1 Order of Powering Up the Controller and Controlled System Mounting Units 4-3-1 Installation in a Control Panel 4-3-2 Connecting Controller Components 4-3-3 DIN Track Installation 4-3-4 Connecting CJ-series Expansion Racks 4-3-5 Assembled Appearance and Dimensions	
on 4 - 4-1 4-2	Sysmac Studio 3-7-1 Model Numbers 3-7-2 Connection Installation and Wiring Processing at Power ON and Power OFF 4-1-1 Power ON Operation 4-1-2 Power OFF Operation 4-1-3 Resetting the Controller from the Sysmac Studio Fail-safe Circuits 4-2-1 Order of Powering Up the Controller and Controlled System Mounting Units 4-3-1 Installation in a Control Panel 4-3-2 Connecting Controller Components 4-3-3 DIN Track Installation 4-3-4 Connecting CJ-series Expansion Racks 4-3-5 Assembled Appearance and Dimensions Wiring	
on 4 4-1 4-2 4-3	Sysmac Studio	
on 4 4-1 4-2 4-3	Sysmac Studio 3-7-1 Model Numbers 3-7-2 Connection Installation and Wiring Processing at Power ON and Power OFF 4-1-1 Power ON Operation 4-1-2 Power OFF Operation 4-1-3 Resetting the Controller from the Sysmac Studio Fail-safe Circuits 4-2-1 Order of Powering Up the Controller and Controlled System Mounting Units 4-3-1 Installation in a Control Panel 4-3-2 Connecting Controller Components 4-3-3 DIN Track Installation 4-3-4 Connecting CJ-series Expansion Racks 4-3-5 Assembled Appearance and Dimensions Wiring 4-4-1 Power Supply Wiring 4-4-2 Wiring the Built-in EtherCAT Port	
on 4 4-1 4-2 4-3	Sysmac Studio	
on 4 4-1 4-2 4-3	Sysmac Studio	
on 4 4-1 4-2 4-3	Sysmac Studio 3-7-1 Model Numbers 3-7-2 Connection Installation and Wiring Processing at Power ON and Power OFF 4-1-1 Power ON Operation 4-1-2 Power OFF Operation 4-1-3 Resetting the Controller from the Sysmac Studio Fail-safe Circuits 4-2-1 Order of Powering Up the Controller and Controlled System Mounting Units 4-3-1 Installation in a Control Panel 4-3-2 Connecting Controller Components 4-3-3 DIN Track Installation 4-3-4 Connecting CJ-series Expansion Racks 4-3-5 Assembled Appearance and Dimensions Wiring 4-4-1 Power Supply Wiring 4-4-2 Wiring the Built-in EtherCAT Port 4-4-3 Wiring CJ-series Basic I/O Units with Terminal Blocks 4-4-4 Wiring CJ-series Basic I/O Units with Connectors 4-4-5 Connecting to Connector-Terminal Block Conversion Units or I/O Relay Terminals	
on 4 4-1 4-2 4-3	Sysmac Studio	
		3-1-2 Components and Functions 3-2 SD Memory Cards

4-5	Control Panel Installation	4-49
	4-5-1 Temperature	
	4-5-2 Humidity	
	4-5-3 Vibration and Shock	
	4-5-4 Atmosphere	
	4-5-5 Electrical Environment	
	4-5-6 Grounding	4-57
Section 5	Troubleshooting	
5-1	Operation after an Error	
	5-1-1 Overview of NJ-series Status	
	5-1-2 Fatal Errors in the CPU Unit	
	5-1-3 Non-fatal error in CPU Unit	5-4
5-2	Troubleshooting	5-11
	5-2-1 Checking to See If the CPU Unit Is Operating	5-11
	5-2-2 Troubleshooting Flowchart for Non-fatal Errors	
	5-2-3 Error Table	
	5-2-4 Error Descriptions	
	5-2-5 Troubleshooting Errors That Are Not in the CPU Unit	5-43
Section 6	Inspection and Maintenance	
6-1	Periodic Maintenance and Inspection	6-2
	6-1-1 Periodic Inspection	
	6-1-2 Unit Replacement Precautions	6-3
6-2	Replacing the Battery	6-4
0.2	6-2-1 Battery Replacement	
	6-2-2 Operation without a Battery	
Appendic	es	
A-1	Specifications	
	A-1-1 General Specifications	A-3
A-2	Specifications of Basic I/O Units	A-4
	A-2-1 Overview of Units	
	A-2-2 Basic I/O Units	A-6
	A-2-3 Precautions on Contact Output Units	
	A-2-4 Connecting Connector-Terminal Block Conversion Units and I/O Relay Terminals	A-55
A-3	Dimensions	A-93
	A-3-1 NJ-series CPU Units	A-93
	A-3-2 NJ-series Power Supply Units	A-94
	A-3-3 CJ-series Basic I/O Units	
	A-3-4 B7A Interface Unit	
	A-3-5 CJ-series I/O Control Unit and I/O Interface Unit	
A-4	Load Short-circuit Protection and Line Disconnection Detection	
	for CJ-series Basic I/O Units	
	A-4-1 Load Short-circuit Protection and Line Disconnection Detection for CJ1W-OD202	
	A-4-2 Load Short-circuit Protection for CJ1W-OD204/OD212/OD232/MD232	A-102
A-5	EMC Directive Measures for Relay Outputs	A-104

CONTENTS

A-6	System-defined Variables		A-106
	A-6-1	System-defined Variables for the Overall NJ-series Controller (No Category)	A-106
	A-6-2	PLC Function Module, Category Name: _PLC	
	A-6-3	PLC Function Module, Category Name: _CJB	A-11
	A-6-4	Motion Control Function Module, Category Name: _MC	A-113
	A-6-5	EtherCAT Master Function Module, Category Name: _EC	A-114
	A-6-6	EtherNet/IP Function Module, Category Name: _EIP	A-118
	A-6-7	Meanings of Error Status Bits	
A-7	Specifications for Individual System-defined Variables		A-127
	A-7-1	System-defined Variables for the Overall NJ-series Controller (No Category)	
	A-7-2	PLC Function Module, Category Name: _PLC	
	A-7-3	PLC Function Module, Category Name: _CJB	
	A-7-4	Motion Control Function Module, Category Name: _MC	
	A-7-5	EtherCAT Master Function Module, Category Name: _EC	
	A-7-6	EtherNet/IP Function Module, Category Name: _EIP	A-148

Index

Read and Understand this Manual

Please read and understand this manual before using the product. Please consult your OMRON representative if you have any questions or comments.

Warranty and Limitations of Liability

WARRANTY

OMRON's exclusive warranty is that the products are free from defects in materials and workmanship for a period of one year (or other period if specified) from date of sale by OMRON.

OMRON MAKES NO WARRANTY OR REPRESENTATION, EXPRESS OR IMPLIED, REGARDING NON-INFRINGEMENT, MERCHANTABILITY, OR FITNESS FOR PARTICULAR PURPOSE OF THE PRODUCTS. ANY BUYER OR USER ACKNOWLEDGES THAT THE BUYER OR USER ALONE HAS DETERMINED THAT THE PRODUCTS WILL SUITABLY MEET THE REQUIREMENTS OF THEIR INTENDED USE. OMRON DISCLAIMS ALL OTHER WARRANTIES, EXPRESS OR IMPLIED.

LIMITATIONS OF LIABILITY

OMRON SHALL NOT BE RESPONSIBLE FOR SPECIAL, INDIRECT, OR CONSEQUENTIAL DAMAGES, LOSS OF PROFITS OR COMMERCIAL LOSS IN ANY WAY CONNECTED WITH THE PRODUCTS, WHETHER SUCH CLAIM IS BASED ON CONTRACT, WARRANTY, NEGLIGENCE, OR STRICT LIABILITY.

In no event shall the responsibility of OMRON for any act exceed the individual price of the product on which liability is asserted.

IN NO EVENT SHALL OMRON BE RESPONSIBLE FOR WARRANTY, REPAIR, OR OTHER CLAIMS REGARDING THE PRODUCTS UNLESS OMRON'S ANALYSIS CONFIRMS THAT THE PRODUCTS WERE PROPERLY HANDLED, STORED, INSTALLED, AND MAINTAINED AND NOT SUBJECT TO CONTAMINATION, ABUSE, MISUSE, OR INAPPROPRIATE MODIFICATION OR REPAIR.

Application Considerations

SUITABILITY FOR USE

OMRON shall not be responsible for conformity with any standards, codes, or regulations that apply to the combination of products in the customer's application or use of the products.

At the customer's request, OMRON will provide applicable third party certification documents identifying ratings and limitations of use that apply to the products. This information by itself is not sufficient for a complete determination of the suitability of the products in combination with the end product, machine, system, or other application or use.

The following are some examples of applications for which particular attention must be given. This is not intended to be an exhaustive list of all possible uses of the products, nor is it intended to imply that the uses listed may be suitable for the products:

- Outdoor use, uses involving potential chemical contamination or electrical interference, or conditions or uses not described in this manual.
- Nuclear energy control systems, combustion systems, railroad systems, aviation systems, medical
 equipment, amusement machines, vehicles, safety equipment, and installations subject to separate
 industry or government regulations.
- Systems, machines, and equipment that could present a risk to life or property.

Please know and observe all prohibitions of use applicable to the products.

NEVER USE THE PRODUCTS FOR AN APPLICATION INVOLVING SERIOUS RISK TO LIFE OR PROPERTY WITHOUT ENSURING THAT THE SYSTEM AS A WHOLE HAS BEEN DESIGNED TO ADDRESS THE RISKS, AND THAT THE OMRON PRODUCTS ARE PROPERLY RATED AND INSTALLED FOR THE INTENDED USE WITHIN THE OVERALL EQUIPMENT OR SYSTEM.

PROGRAMMABLE PRODUCTS

OMRON shall not be responsible for the user's programming of a programmable product, or any consequence thereof.

Disclaimers

CHANGE IN SPECIFICATIONS

Product specifications and accessories may be changed at any time based on improvements and other reasons.

It is our practice to change model numbers when published ratings or features are changed, or when significant construction changes are made. However, some specifications of the products may be changed without any notice. When in doubt, special model numbers may be assigned to fix or establish key specifications for your application on your request. Please consult with your OMRON representative at any time to confirm actual specifications of purchased products.

DIMENSIONS AND WEIGHTS

Dimensions and weights are nominal and are not to be used for manufacturing purposes, even when tolerances are shown.

PERFORMANCE DATA

Performance data given in this manual is provided as a guide for the user in determining suitability and does not constitute a warranty. It may represent the result of OMRON's test conditions, and the users must correlate it to actual application requirements. Actual performance is subject to the OMRON Warranty and Limitations of Liability.

ERRORS AND OMISSIONS


The information in this manual has been carefully checked and is believed to be accurate; however, no responsibility is assumed for clerical, typographical, or proofreading errors, or omissions.


Read and Understand this Manual

Safety Precautions

Definition of Precautionary Information

The following notation is used in this manual to provide precautions required to ensure safe usage of an NJ-series Controller. The safety precautions that are provided are extremely important to safety. Always read and heed the information provided in all safety precautions. The following notation is used.

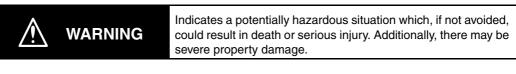

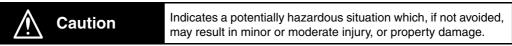

Precautions for Safe Use

Indicates precautions on what to do and what not to do to ensure safe usage of the product.

Precautions for Correct Use Indicates precautions on what to do and what not to do to ensure proper operation and performance.

Symbols



The circle and slash symbol indicates operations that you must not do. The specific operation is shown in the circle and explained in text. This example indicates prohibiting disassembly.



The triangle symbol indicates precautions (including warnings). The specific operation is shown in the triangle and explained in text. This example indicates a precaution for electric shock.



The triangle symbol indicates precautions (including warnings). The specific operation is shown in the triangle and explained in text. This example indicates a general precaution.



The filled circle symbol indicates operations that you must do.

The specific operation is shown in the circle and explained in text.

This example shows a general precaution for something that you must do.

MARNING

During Power Supply

Do not touch any of the terminals or terminal blocks while the power is being supplied. Doing so may result in electric shock.



Do not attempt to take any Unit apart. In particular, high-voltage parts are present in the Power Supply Unit while power is supplied or immediately after power is turned OFF. Touching any of these parts may result in electric shock. There are sharp parts inside the Unit that may cause injury.



Fail-safe Measures

Provide safety measures in external circuits to ensure safety in the system if an abnormality occurs due to malfunction of the CPU Unit, other Units, or slaves or due to other external factors affecting operation. Not doing so may result in serious accidents due to incorrect operation.



Emergency stop circuits, interlock circuits, limit circuits, and similar safety measures must be provided in external control circuits.




The Controller outputs may remain ON or OFF due to deposition or burning of the output relays or destruction of the output transistors. As a countermeasure for such problems, external safety measures must be provided to ensure safe operation of the system.




The CPU Unit will turn OFF all outputs from Basic Output Units in the following cases.






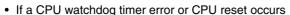

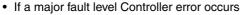

 While the CPU Unit is on standby until RUN mode is entered after the power is turned ON

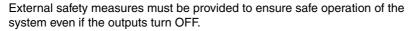

If external power supplies for slaves or other devices are overloaded or short-circuited, the voltage will drop, outputs will turn OFF, and the system may be unable to read inputs. Provide external safety measures in controls with monitoring of external power supply voltage as required so that the system operates safely in such a case.



MARNING

Fail-safe Measures

Unintended outputs may occur when an error occurs in variable memory or in memory used for CJ-series Units. As a countermeasure for such problems, external safety measures must be provided to ensure safe operation of the system.



Provide measures in the communications system and user program to ensure safety in the overall system even if errors or malfunctions occur in data link communications or remote I/O communications.



If there is interference in remote I/O communications or if a major fault level error occurs, output status will depend on the products that are used. Confirm the operation that will occur when there is interference in communications or a major fault level error, and implement safety measures. Correctly set all of the EtherCAT slaves.



The NJ-series Controller continues normal operation for a certain period of time when a momentary power interruption occurs. This means that the NJ-series Controller may receive incorrect signals from external devices that are also affected by the power interruption. Accordingly, take suitable actions, such as external fail-safe measures and interlock conditions, to monitor the power supply voltage of the external device as required.



You must take fail-safe measures to ensure safety in the event of incorrect, missing, or abnormal signals caused by broken signal lines, momentary power interruptions, or other causes. Not doing so may result in serious accidents due to incorrect operation.



Voltage and Current Inputs

Make sure that the voltages and currents that are input to the Units and slaves are within the specified ranges.

Inputting voltages or currents that are outside of the specified ranges may cause accidents or fire.



Downloading

Always confirm safety at the destination before you transfer a user program, configuration data, setup data, device variables, or values in memory used for CJ-series Units from the Sysmac Studio. The devices or machines may perform unexpected operation regardless of the operating mode of the CPU Unit.



⚠ Caution

Application

Do not touch any Unit when power is being supplied or immediately after the power supply is turned OFF. Doing so may result in burn injury.



Wiring

Be sure that all terminal screws and cable connector screws are tightened to the torque specified in the relevant manuals. The loose screws may result in fire or malfunction.



Online Editing

Execute online editing only after confirming that no adverse effects will be caused by deviations in the timing of I/O. If you perform online editing, the task execution time may exceed the task period, I/O may not be refreshed with external devices, input signals may not be read, and output timing may change.



Precautions for Safe Use

Disassembly and Dropping

- Do not attempt to disassemble, repair, or modify any Units. Doing so may result in malfunction or fire.
- Do not drop any Unit or subject it to abnormal vibration or shock. Doing so may result in Unit malfunction or burning.

Mounting

 The sliders on the tops and bottoms of the Power Supply Unit, CPU Unit, I/O Units, Special I/O Unit, and CPU Bus Units must be completely locked (until they click into place) after connecting the adjacent Unit connectors.

Installation

• Always connect to a ground of 100 Ω or less when installing the Units. A ground of 100 Ω or less must be installed when shorting the GR and LG terminals on the Power Supply Unit.

Wiring

- Follow the instructions in this manual to correctly perform wiring.
 Double-check all wiring and switch settings before turning ON the power supply.
- Use crimp terminals for wiring.
 Do not connect bare stranded wires directly to terminals.
- Do not pull on the cables or bend the cables beyond their natural limit.

 Do not place heavy objects on top of the cables or other wiring lines. Doing so may break the cables.
- Mount terminal blocks and connectors only after checking the mounting location carefully.
 Be sure that the terminal blocks, expansion cables, and other items with locking devices are properly locked into place.
- Always remove any dustproof labels that are on the top of the Units when they are shipped before
 you turn ON the power supply. If the labels are not removed, heat will accumulate and malfunctions
 may occur.
- Before you connect a computer to the CPU Unit, disconnect the power supply plug of the computer from the AC outlet. Also, if the computer has an FG terminal, make the connections so that the FG terminal has the same electrical potential as the FG (GR) terminal on the Power Supply Unit. A difference in electric potential between the computer and Controller may cause failure or malfunction.
- If the external power supply to an Output Unit or slave has polarity, connect it with the correct polarity. If the polarity is reversed, current may flow in the reverse direction and damage the connected devices regardless of the operation of the Controller.

Power Supply Design

Do not exceed the rated supply capacity of the Power Supply Units in the NJ-series Controller. The
rated supply capacities are given in the NJ-series CPU Unit Hardware User's Manual
(Cat. No. W500).

If the capacity is exceeded, operation may stop, malfunctions may occur, or data may not be backed up normally for power interruptions.

Use NJ-series Power Supply Units for both the NJ-series CPU Rack and Expansion Racks. Operation is not possible if a CJ-series Power Supply Unit is used with an NJ-series CPU Unit or an NJ-series Power Supply Unit is used with a CJ-series CPU Unit.

- Do not apply voltages or connect loads to the Output Units or slaves in excess of the maximum ratings.
- Surge current occurs when the power supply is turned ON. When selecting fuses or breakers for
 external circuits, consider the above precaution and allow sufficient margin in shut-off performance.
 Refer to the relevant manuals for surge current specifications. Refer to the NJ-series CPU Unit Hardware User's Manual (Cat. No. W500) for surge current specifications.
- If the full dielectric strength voltage is applied or turned OFF using the switch on the tester, the generated impulse voltage may damage the Power Supply Unit. Use the adjustment on the tester to gradually increase and decrease the voltage.
- Apply the voltage between the Power Supply Unit's L1 or L2 terminal and the GR terminal when testing insulation and dielectric strength. You do not have to disconnect the LG and GR terminals to perform these tests.
- Do not supply AC power from an inverter or other device with a square-wave output. Internal temperature rise may result in smoking or burning. Always input a sinusoidal wave with the frequency that is given in the *NJ-series CPU Unit Hardware User's Manual* (Cat. No. W500).
- Install external breakers and take other safety measures against short-circuiting in external wiring.

Turning ON the Power Supply

- It takes up to approximately 10 to 20 s to enter RUN mode after the power is turned ON. During that time, outputs will be OFF or will be the values specified in the Unit or slave settings, and external communications cannot be performed. Use the RUN output on the Power Supply Unit, for example, to implement fail-safe circuits so that external devices do not operate incorrectly.
- Configure the external circuits so that the power supply to the control system turns ON only after the
 power supply to the Controller has turned ON. If the power supply to the Controller is turned ON after
 the control power supply, temporary errors may result in incorrect control system signals because the
 output terminals on Output Units may momentarily turn ON when power supply is turned ON to the
 Controller.

Actual Operation

• Check the user program, data, and parameter settings for proper execution before you use them for actual operation.

Turning OFF the Power Supply

- Never turn OFF the power supply to the Controller when the BUSY indicator is flashing. While the
 BUSY indicator is lit, the user program and settings in the CPU Unit are being backed up in the builtin non-volatile memory. This data will not be backed up correctly if the power supply is turned OFF.
 Also, a major fault level Controller error will occur the next time you start operation, and operation will
 stop.
- Do not turn OFF the power supply or remove the SD Memory Card while SD Memory Card access is
 in progress (i.e., while the SD BUSY indicator flashes). Data may become corrupted, and the Controller will not operate correctly if it uses corrupted data. To remove the SD Memory Card from the CPU
 Unit while the power supply is ON, press the SD Memory Card power supply switch and wait for the
 SD BUSY indicator to turn OFF before you remove the SD Memory Card.
- Do not disconnect the cable or turn OFF the power supply to the Controller when downloading data or the user program from Support Software.
- Always turn OFF the power supply to the Controller before you attempt any of the following.
 - Mounting or removing I/O Units or the CPU Unit
 - · Assembling the Units
 - · Setting DIP switches or rotary switches
 - Connecting cables or wiring the system
 - · Connecting or disconnecting the connectors

The Power Supply Unit may continue to supply power to the rest of the Controller for a few seconds after the power supply turns OFF. The PWR indicator is lit during this time. Confirm that the PWR indicator is not lit before you perform any of the above.

Operation

- Confirm that no adverse effect will occur in the system before you attempt any of the following.
 - Changing the operating mode of the CPU Unit (including changing the setting of the Operating Mode at Startup)
 - · Changing the user program or settings
 - · Changing set values or present values
 - · Forced refreshing
- Always sufficiently check the safety at the connected devices before you change the settings of an EtherCAT slave or Special Unit.
- If two different function modules are used together, such as when you use CJ-series Basic Output Units and EtherCAT slave outputs, take suitable measures in the user program and external controls to ensure that safety is maintained in the controlled system if one of the function modules stops. The relevant outputs will stop if a partial fault level error occurs in one of the function modules.
- Always confirm safety at the connected equipment before you reset Controller errors with an event level of partial fault or higher for the EtherCAT Master Function Module.
 - When the error is reset, all slaves that were in any state other than Operational state due to a Controller error with an event level of partial fault or higher (in which outputs are disabled) will go to Operational state and the outputs will be enabled.
 - Before you reset all errors, confirm that no Controller errors with an event level of partial fault have occurred for the EtherCAT Master Function Module.
- Always confirm safety at the connected equipment before you reset Controller errors for a CJ-series Special Unit. When a Controller error is reset, the Unit where the Controller error with an event level of observation or higher will be restarted.
 - Before you reset all errors, confirm that no Controller errors with an event level of observation or higher have occurred for the CJ-series Special Unit. Observation level events do not appear on the Controller Error Tab Page, so it is possible that you may restart the CJ-series Special Unit without intending to do so.
 - You can check the status of the _CJB_UnitErrSta[0,0] to _CJB_UnitErrSta[3,9] error status variables on a Watch Tab Page to see if an observation level Controller error has occurred.

Battery Backup

• The user program and initial values for the variables are stored in non-volatile memory in the CPU Unit. The present values of variables with the Retain attribute and the values of the Holding, DM, and EM Areas in the memory used for CJ-series Units are backed up by a Battery. If the Battery is not connected or the Battery is exhausted, the CPU Unit detects a Battery-backup Memory Check Error. If that error is detected, variables with a Retain attribute are set to their initial values and the Holding, DM, and EM Areas in memory used for CJ-series Units are cleared to all zeros. Perform thorough verifications and provide sufficient measures to ensure that the devices perform safe operation for the initial values of the variables with Retain attributes and the resulting operation.

Debugging

• Forced refreshing ignores the results of user program execution and refreshes I/O with the specified values. If forced refreshing is used for inputs for which I/O refreshing is not supported, the inputs will first take the specified values, but they will then be overwritten by the user program. This operation differs from the force-set/reset functionality of the CJ-series PLCs.

- You cannot upload or download information for forced refreshing with the Sysmac Studio.
 After downloading data that contains forced refreshing, change to RUN mode and then use the Sysmac Studio to perform the operation for forced refreshing.
 Depending on the difference in the forced status, the control system may operate unexpectedly.
- Do not specify the same address for the AT specification for more than one variable.
 Doing so would allow the same entity to be accessed with different variable names, which would make the user program more difficult to understand and possibly cause programming mistakes.

General Communications

- When you use data link communications, check the error information given in the status flags to make sure that no error has occurred in the source device. Write the user program to use the received data only if there is no error. If there is an error in the source device, the data for the data link may contain incorrect values.
- Unexpected operation may result if inappropriate data link tables are set. Even if appropriate data link tables have been set, confirm that the controlled system will not be adversely affected before you transfer the data link tables. The data links start automatically after the data link tables are transferred.
- All CPU Bus Units are restarted when routing tables are transferred from Support Software to the CPU Unit. Restarting these Units is required to read and enable the new routing tables. Confirm that the system will not be adversely affected by restarting before you transfer the routing tables.
- Tag data links will stop between related nodes while tag data link parameters are transferred during Controller operation. Confirm that the system will not be adversely affected before you transfer the tag data link parameters.

EtherNet/IP Communications

- All related EtherNet/IP nodes are reset when you transfer settings for the built-in EtherNet/IP port
 (including IP addresses and tag data links settings). This is performed to read and enable the settings. Confirm that the system will not be adversely affected by resetting nodes before you transfer
 the settings.
- If EtherNet/IP tag data links (cyclic communications) are used with a repeating hub, the communications load on the network will increase. This will increase collisions and may prevent stable communications. Do not use repeating hubs on networks where tag data links are used. Use an Ethernet switch instead.

EtherCAT Communications

- Make sure that the communications distance, number of nodes connected, and method of connection for EtherCAT are within specifications.
 - Do not connect EtherCAT communications to EtherNet/IP, a standard in-house LAN, or other networks. An overload may cause the network to fail or malfunction.
- Malfunctions or unexpected operation may occur for some combinations of EtherCAT revisions of the
 master and slaves. If you disable the revision check in the network settings, use the Sysmac Studio to
 check the slave revision settings in the master and the actual slave revisions, and then make sure
 that functionality is compatible in the slave manuals or other references. You can check the actual
 slave revisions from the Sysmac Studio or on slave nameplates.
- After you transfer the user program, the CPU Unit is restarted. Communications with the EtherCAT slaves are cut off for up to 45 seconds. During that period, the slave outputs behave according to the slave settings.
 - Before you transfer the user program, confirm that the system will not be adversely affected.
- If the Fail-soft Operation parameter is set to stop operation, process data communications will stop
 for all slaves when an EtherCAT communications error is detected in a slave. For this reason, if Servo
 Drives are connected, the Servos for all axes will be turned OFF. Make sure that the Fail-soft Operation parameter setting results in safe operation when a device error occurs.

- EtherCAT communications are not always established immediately after the power supply is turned ON. Use the system-defined variables in the user program to confirm that communications are established before attempting control operations.
- If frames sent to EtherCAT slaves are lost due to noise or other causes, slave I/O data is not communicated, and the intended operation is sometimes not achieved. If noise countermeasures are required, use the _EC_InDataInvalid (Input Data Disable) system-defined variable as an interlock condition in the user program.
 - Refer to the *NJ-series CPU Unit Built-in EtherCAT Port User's Manual* (Cat. No. W505) for details. The slave outputs behave according to the slave settings. Refer to the manuals for the slaves for details.
- When an EtherCAT slave is disconnected, communications will stop and control of the outputs will be
 lost not only for the disconnected slave, but for all slaves connected after it. Confirm that the system
 will not be adversely affected before you disconnect a slave.
- If you disconnect the cable from an EtherCAT slave to disconnect it from the network, any current communications frames may be lost. If frames are lost, slave I/O data is not communicated, and the intended operation is sometimes not achieved. Perform the following processing for a slave that needs to be replaced.

Program the _EC_InDataInvalid (Input Data Disable) system-defined variable as an interlock condition.

Set the Impermissible Number of Continuous Timeouts setting in the EtherCAT master to at least 2.

Refer to the NJ-series CPU Unit Built-in EtherCAT Port User's Manual (Cat. No. W505) for details.

Motion Control

- Confirm the axis number carefully before you perform an MC Test Run.
- The motor is stopped if communications are interrupted between the Sysmac Studio and the CPU
 Unit during an MC Test Run. Connect the communications cable between the computer and CPU
 Unit securely and confirm that the system will not be adversely affected before you perform an MC
 Test Run.
- Always execute the Save Cam Table instruction if you change any of the cam data from the user program in the CPU Unit or from the Sysmac Studio. If the cam data is not saved, the previous condition will be restored when the power is turned ON again, possibly causing unexpected machine operation.
- The positive drive prohibit input (POT), negative drive prohibit input (NOT), and home proximity input (DEC) of the Servo Drive are used by the MC Function Module as the positive limit input, negative limit input, and home proximity input. Make sure that the signal widths for all of these input signals are longer than the control period of the MC Function Module. If the input signal widths are shorter than the control period, the MC Function Module may not be able to detect the input signals, resulting in incorrect operation.

Battery Replacement

- The Battery may leak, rupture, heat, or ignite. Never short-circuit, charge, disassemble, heat, or incinerate the Battery or subject it to strong shock.
- Dispose of any Battery that has been dropped on the floor or otherwise subjected to excessive shock. Batteries that have been subjected to shock may leak if they are used.
- UL standards require that only an experienced engineer replace the Battery. Make sure that an experienced engineer is in charge of Battery replacement.
- Apply power for at least five minutes before changing the Battery. Install a new Battery within five minutes (at 25°C) of turning OFF the power supply. If power is not supplied for at least 5 minutes, the saved data may be lost.

Unit Replacement

- We recommend replacing the Battery with the power turned OFF to prevent the CPU Unit's sensitive
 internal components from being damaged by static electricity and to prevent malfunctions. The Battery can be replaced without turning OFF the power supply. To do so, always touch a grounded piece
 of metal to discharge static electricity from your body before you start the procedure.
 After you replace the Battery, connect the Sysmac Studio and clear the Low Battery Voltage error.
- Make sure that the required data, including the user program, configurations, settings, variables, and memory used for CJ-series Units, is transferred to a CPU Unit that was replaced and to externally connected devices before restarting operation.
 Be sure to include the routing tables, network parameters, and other CPU Bus Unit data, which are stored in the CPU Unit.

Disposal

· Dispose of the product and Batteries according to local ordinances as they apply.



廢電池請回收

 The following information must be displayed for all products that contain primary lithium batteries with a perchlorate content of 6 ppb or higher when shipped to or transported through the State of California, USA.

Perchlorate Material - special handling may apply. See www.dtsc.ca.gov/hazardouswaste/perchlorate.

The CPU Unit contains a primary lithium battery with a perchlorate content of 6 ppb or higher. Place
the above information on the individual boxes and shipping boxes when shipping finished products
that contain a CPU Unit to the State of California, USA.

Precautions for Correct Use

Storage, Mounting, and Wiring

- Do not operate or store the Controller in the following locations. Operation may stop or malfunctions may occur.
 - Locations subject to direct sunlight
 - · Locations subject to temperatures or humidity outside the range specified in the specifications
 - · Locations subject to condensation as the result of severe changes in temperature
 - Locations subject to corrosive or flammable gases
 - Locations subject to dust (especially iron dust) or salts
 - Locations subject to exposure to water, oil, or chemicals
 - · Locations subject to shock or vibration
- Take appropriate and sufficient countermeasures when installing the Controller in the following locations.
 - · Locations subject to strong, high-frequency noise
 - · Locations subject to static electricity or other forms of noise
 - · Locations subject to strong electromagnetic fields
 - Locations subject to possible exposure to radioactivity
 - · Locations close to power lines
- Before touching a Unit, be sure to first touch a grounded metallic object in order to discharge any static build-up.
- Install the Controller away from sources of heat and ensure proper ventilation. Not doing so may result in malfunction, in operation stopping, or in burning.
- An I/O bus check error will occur and the Controller will stop if an I/O Connecting Cable's connector is disconnected from the Rack. Be sure that the connectors are secure.
- Do not allow foreign matter to enter the openings in the Unit. Doing so may result in Unit burning, electric shock, or failure.
- Do not allow wire clippings, shavings, or other foreign material to enter any Unit. Otherwise, Unit burning, failure, or malfunction may occur. Cover the Units or take other suitable countermeasures, especially during wiring work.
- For EtherCAT and EtherNet/IP, use the connection methods and cables that are specified in the NJ-series CPU Unit Built-in EtherCAT Port User's Manual (Cat. No. W505) and the NJ-series CPU Unit Built-in EtherNet/IP Port User's Manual (Cat. No. W506). Otherwise, communications may be faulty.
- Use the rated power supply voltage for the Power Supply Units. Take appropriate measures to ensure
 that the specified power with the rated voltage and frequency is supplied in places where the power
 supply is unstable.
- Make sure that the current capacity of the wire is sufficient. Otherwise, excessive heat may be generated. When cross-wiring terminals, the total current for all the terminals will flow in the wire. When wiring cross-overs, make sure that the current capacity of each of the wires is not exceeded.
- Do not touch the terminals on the Power Supply Unit immediately after turning OFF the power supply. Residual voltage may cause electrical shock.
- If you use reed switches for the input contacts for AC Input Units, use switches with a current capacity
 of 1 A or greater.
 - If the capacity of the reed switches is too low, surge current may fuse the contacts.

Error Processing

 In applications that use the results of instructions that read the error status, consider the affect on the system when errors are detected and program error processing accordingly. For example, even the detection of a minor error, such as Battery replacement during operation, can affect the system depending on how the user program is written.

Unit Replacement

- If you replace a CPU Bus Unit or Special I/O Unit, refer to operation manual for the Unit for information on the data required for individual Units and redo the necessary settings.
- The absolute encoder home offset is backed up with a Battery in the CPU Unit.
 When you change the combination of the CPU Unit and Servomotor, e.g., when you add or replace a Servomotor, define home again.

To restore the information without changing the CPU Unit-Servomotor combination, remove the absolute encoder home offset from the data to restore.

Task Settings

 If a Task Period Exceeded error occurs, shorten the programs to fit in the task period or increase the setting of the task period.

Motion Control

- Use the system-defined variable in the user program to confirm that EtherCAT communications are established before you attempt to execute motion control instructions. Motion control instructions are not executed normally if EtherCAT communications are not established.
- Use the system-defined variables to monitor for errors in communications with the slaves that are controlled by the motion control function module. Motion control instructions are not executed normally if an error occur in slave communications.
- Before you start an MC Test Run, make sure that the operation parameters are set correctly.
- Do not download motion control settings during an MC Test Run.

EtherCAT Communications

- Do not disconnect the EtherCAT slave cables during operation. The outputs will become unstable.
- Set the Servo Drives to stop operation if an error occurs in EtherCAT communications between the Controller and a Servo Drive.

Battery Replacement

- Be sure to install a replacement Battery within two years of the production date shown on the Battery label.
- Turn ON the power after replacing the Battery for a CPU Unit that has been unused for a long time.
 Leaving the CPU Unit unused again without turning ON the power even once after the Battery is replaced may result in a shorter Battery life.
- · When you replace the Battery, use the CJ1W-BAT01 Battery Set.

SD Memory Cards

- Insert the SD Memory Card all the way.
- Do not turn OFF the power supply to the Controller during SD Memory Card access. The files may be corrupted.

If there is a corrupted file in the SD Memory Card, the file is automatically deleted by the restoration function when the power supply is turned ON.

Regulations and Standards

Conformance to EC Directives

Applicable Directives

- EMC Directives
- Low Voltage Directive

Concepts

EMC Directive

OMRON devices that comply with EC Directives also conform to the related EMC standards so that they can be more easily built into other devices or the overall machine. The actual products have been checked for conformity to EMC standards.*

Whether the products conform to the standards in the system used by the customer, however, must be checked by the customer. EMC-related performance of the OMRON devices that comply with EC Directives will vary depending on the configuration, wiring, and other conditions of the equipment or control panel on which the OMRON devices are installed. The customer must, therefore, perform the final check to confirm that devices and the overall machine conform to EMC standards.

* Applicable EMC (Electromagnetic Compatibility) standards are as follows: EMS (Electromagnetic Susceptibility): EN 61131-2 and EN 61000-6-2 EMI (Electromagnetic Interference): EN 61131-2 and EN 61000-6-4 (Radiated emission: 10-m regulations)

Low Voltage Directive

Always ensure that devices operating at voltages of 50 to 1,000 VAC and 75 to 1,500 VDC meet the required safety standards. The applicable directive is EN 61131-2.

Conformance to EC Directives

The NJ-series Controllers comply with EC Directives. To ensure that the machine or device in which the NJ-series Controller is used complies with EC Directives, the Controller must be installed as follows:

- The NJ-series Controller must be installed within a control panel.
- You must use reinforced insulation or double insulation for the DC power supplies connected to DC Power Supply Units and I/O Units.
- NJ-series Controllers that comply with EC Directives also conform to the Common Emission Standard (EN 61000-6-4). Radiated emission characteristics (10-m regulations) may vary depending on the configuration of the control panel used, other devices connected to the control panel, wiring, and other conditions.

You must therefore confirm that the overall machine or equipment complies with EC Directives.

Conformance to Shipbuilding Standards

The NJ-series Controllers comply with the following shipbuilding standards. Applicability to the shipbuilding standards is based on certain usage conditions. It may not be possible to use the product in some locations. Contact your OMRON representative before attempting to use a Controller on a ship.

Usage Conditions for NK and LR Shipbuilding Standards

- The NJ-series Controller must be installed within a control panel.
- · Gaps in the door to the control panel must be completely filled or covered with gaskets or other
- The following noise filter must be connected to the power supply line.

Noise Filter

Manufacturer	Model
Cosel Co., Ltd.	TAH-06-683

Trademarks

- Sysmac and SYSMAC are trademarks or registered trademarks of OMRON Corporation in Japan and other countries for OMRON factory automation products.
- · Windows, Windows 98, Windows XP, Windows Vista, and Windows 7 are registered trademarks of Microsoft Corporation in the USA and other countries.
- EtherCAT® is a registered trademark of Beckhoff Automation GmbH for their patented technology.
- The SD logo is a trademark of SD-3C, LLC.



Other company names and product names in this document are the trademarks or registered trademarks of their respective companies.

Software Licenses and Copyrights

This product incorporates certain third party software. The license and copyright information associated with this software is available at http://www.fa.omron.co.jp/nj_info_e/.

Unit Versions


Unit Versions

A "unit version" has been introduced to manage CPU Units in the NJ Series according to differences in functionality accompanying Unit upgrades.

Notation of Unit Versions on Products

The unit version is given on the ID information label of the products for which unit versions are managed, as shown below.

Example for NJ-series NJ501-

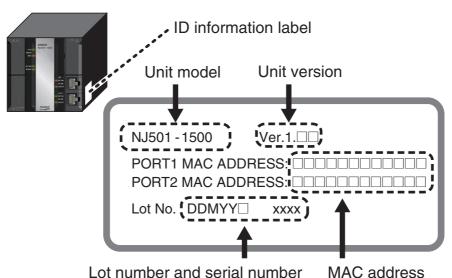

The following information is provided on the ID information label.

Item	Description
Unit model	Gives the model of the Unit.
Unit version	Gives the unit version of the Unit.
Lot number and	Gives the lot number and serial number of the Unit.
serial number	DDMYY: Lot number, □: For use by OMRON, xxxx: Serial number
	"M" gives the month (1 to 9: January to September, X: October, Y: November, Z: December)
MAC address	Gives the MAC address of the built-in port on the Unit.

Confirming Unit Versions with Sysmac Studio


You can use the Unit Production Information on the Sysmac Studio to check the unit version of the CPU Unit, CJ-series Special I/O Units, CJ-series CPU Bus Units, and EtherCAT slaves. The unit versions of CJ-series Basic I/O Units cannot be checked from the Sysmac Studio.


CPU Unit and CJ-series Units

1 Double-click CPU/Expansion Racks under Configurations and Setup in the Multiview Explorer. Or, right-click CPU/Expansion Racks under Configurations and Setup and select *Edit* from the menu.

The Unit Editor is displayed for the Controller Configurations and Setup layer.

2 Right-click any open space in the Unit Editor and select **Production Information**. The Production Information Dialog Box is displayed.

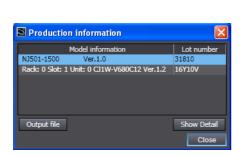

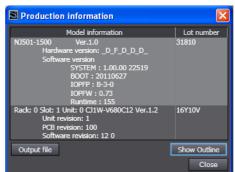

Simple Display

Detailed Display

In this example, "Ver.1.0" is displayed next to the unit model.


The following items are displayed.

CPU Unit	CJ-series Units
Unit model	Unit model
Unit version	Unit version
Lot number	Lot number
	Rack number, slot number, and unit number

EtherCAT Slaves

- 1 Double-click EtherCAT under Configurations and Setup in the Multiview Explorer. Or, right-click EtherCAT under Configurations and Setup and select *Edit* from the menu.
 - The EtherCAT Configuration Tab Page is displayed for the Controller Configurations and Setup layer.
- 2 Right-click the master in the EtherCAT Configurations Editing Pane and select Display Production Information.

The Production Information Dialog Box is displayed.

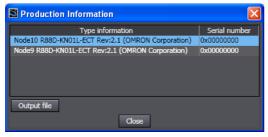

The following items are displayed.

Node address

Type information*

Serial number

* If the model number cannot be determined (such as when there is no ESI file), the vendor ID, product code, and revision number are displayed.

Unit Version Notation

In this manual, unit versions are specified as shown in the following table.

Product nameplate	Notation in this manual	Remarks
"Ver.1.0" or later to the right of the lot number	Unit version 1.0 or later	Unless unit versions are specified, the information in this manual applies to all unit versions.

Related Manuals

The following manuals are related to the NJ-series Controllers. Use these manuals for reference.

Manual name	Cat. No.	Model numbers	Application	Description
NJ-series CPU Unit Hardware User's Manual	W500	NJ501-□□□□	Learning the basic specifications of the NJ-series CPU Units, including introductory information, designing, installation, and maintenance. Mainly hardware information is provided.	An introduction to the entire NJ-series system is provided along with the following information on a Controller built with an NJ501 CPU Unit. • Features and system configuration • Introduction • Part names and functions • General specifications • Installation and wiring • Maintenance and inspection Use this manual together with the NJ-series CPU Unit Software User's Manual (Cat. No. W501).
NJ-series CPU Unit Soft- ware User's Manual	W501	NJ501-□□□□	Learning how to program and set up an NJ-series CPU Unit. Mainly software information is provided.	The following information is provided on a Controller built with an NJ501 CPU Unit. CPU Unit operation CPU Unit features Initial settings Programming based on IEC 61131-3 language specifications Use this manual together with the NJ-series CPU Unit Hardware User's Manual (Cat. No. W500).
NJ-series CPU Unit Motion Control User's Manual	W507	NJ501-□□□□	Learning about motion control settings and programming concepts.	The settings and operation of the CPU Unit and programming concepts for motion control are described. Use this manual together with the NJ-series CPU Unit Hardware User's Manual (Cat. No. W500) and NJ-series CPU Unit Software User's Manual (Cat. No. W501).
NJ-series Instructions Reference Manual	W502	NJ501-□□□□	Learning about the specifications of the instruction set that is provided by OMRON.	The instructions in the instruction set (IEC 61131-3 specifications) are described. When programming, use this manual together with the <i>NJ-series CPU Unit Hardware User's Manual</i> (Cat. No. W500) and <i>NJ-series CPU Unit Software User's Manual</i> (Cat. No. W501).
NJ-series Motion Control Instructions Reference Manual	W508	NJ501-□□□□	Learning about the specifi- cations of the motion con- trol instructions that are provided by OMRON.	The motion control instructions are described. When programming, use this manual together with the <i>NJ-series CPU Unit Hardware User's Manual</i> (Cat. No. W500), NJ-series CPU Unit Software User's Manual (Cat. No. W501) and <i>NJ-series CPU Unit Motion Control User's Manual</i> (Cat. No. W507).
CJ-series Special Unit Manuals for NJ-series CPU Unit	W490 W498 W499 W491 Z317 W492 W494 W497	CJ1W-□□□	Learning how to use CJ- series Units with an NJ- series CPU Unit.	The methods and precautions for using CJ-series Units with an NJ501 CPU Unit are described, including access methods and programming interfaces. Manuals are available for the following Units. Analog I/O Units, Insulated-type Analog I/O Units, Temperature Control Units, ID Sensor Units, High-speed Counter Units, Serial Communications Units, and DeviceNet Units. Use these manuals together with the NJ-series CPU Unit Hardware User's Manual (Cat. No. W500) and NJ-series CPU Unit Software User's Manual (Cat. No. W501).

Manual name	Cat. No.	Model numbers	Application	Description
NJ-series CPU Unit Built- in EtherCAT Port User's Manual	W505	NJ501-□□□□	Using the built-in EtherCAT port on an NJ-series CPU Unit.	Information on the built-in EtherCAT port is provided. This manual provides an introduction and provides information on the configuration, features, and setup. Use this manual together with the <i>NJ-series CPU Unit Hardware User's Manual</i> (Cat. No. W500) and <i>NJ-series CPU Unit Software User's Manual</i> (Cat. No. W501).
NJ-series CPU Unit Built- in EtherNet/IP Port User's Manual	W506	NJ501-□□□□	Using the built-in Ether- Net/IP port on an NJ-series CPU Unit.	Information on the built-in EtherNet/IP port is provided. Information is provided on the basic setup, tag data links, and other features. Use this manual together with the <i>NJ-series CPU Unit Hardware User's Manual</i> (Cat. No. W500) and <i>NJ-series CPU Unit Software User's Manual</i> (Cat. No. W501).
NJ-series Troubleshooting Manual	W503	NJ501-□□□□	Learning about the errors that may be detected in an NJ-series Controller.	Concepts on managing errors that may be detected in an NJ-series Controller and information on individual errors are described. Use this manual together with the NJ-series CPU Unit Hardware User's Manual (Cat. No. W500) and NJ-series CPU Unit Software User's Manual (Cat. No. W501).
Sysmac Studio Version 1 Operation Manual	W504	SYSMAC- SE2□□□	Learning about the operating procedures and functions of the Sysmac Studio.	Describes the operating procedures of the Sysmac Studio.
CX-Integrator CS/CJ/CP/NSJ-series Network Configuration Tool Operation Manual	W464		Learning how to configure networks (data links, rout- ing tables, Communica- tions Unit settings, etc.).	Describes operating procedures for the CX-Integrator.
CX-Designer User's Manual	V099		Learning to create screen data for NS-series Programmable Terminals.	Describes operating procedures for the CX-Designer.
CX-Protocol Operation Manual	W344		Creating data transfer protocols for general-purpose devices connected to CJ-series Serial Communications Units.	Describes operating procedures for the CX-Protocol.

Terminology

Term	Description	
absolute encoder home offset	This data is used to restore in the CPU Unit the actual position of a Servo Drive with an absolute encoder. The offset is the difference between the command position after homing and the absolute data that is read from the absolute encoder.	
array specification	One of the variable specifications. An array variable contains multiple elements of the same data type. The elements in the array are specified by serial numbers called subscripts that start from the beginning of the array.	
AT	One of the attributes of a variable. This attribute allows the user to specify what is assigned to a variable. An I/O port or an address in memory used for CJ-series Units can be specified.	
axes group	A functional unit that groups together axes within the Motion Control Function Module.	
Axes Group Variable	A system-defined variable that is defined as a structure and provides status information and some of the axes parameters for an individual axes group. An Axes Group Variable is used to specify an axes group for motion control instructions and to monitor the command interpolation velocity, error information, and other information for the axes group.	
axis	A functional unit within the Motion Control Function Module. An axis is assigned to the drive mechanism in an external Servo Drive or the sensing mechanism in an external Encoder Input Slave Unit.	
Axis Variable	A system-defined variable that is defined as a structure and provides status information and some of the axis parameters for an individual axis. An Axis Variable is used to specify an axis for motion control instructions and to monitor the command position, error information, and other information for the axis.	
basic data type	Any of the data types that are defined by IEC 61131-3. They include Boolean, bit string, integer, real, duration, date, time of day, date and time, and text string data types. "Basic data type" is used as opposed to derivative data types, which are defined by the user.	
cam data variable	A variable that represents the cam data as a structure array. A cam data variable is an array structure that consists of phases and displacements.	
CJ-series CPU Unit	Any of the CJ-series Units that can be used with an NJ-series Controller.	
Constant	One of the attributes of a variable. If you specify the Constant attribute for a variable, the value of the variable cannot be written by any instructions, ST operators, or CIP message communications.	
Controller	The range of devices that are directly controlled by the CPU Unit. In the NJ-series System, the Controller includes the CPU Rack, Expansion Racks, and EtherCAT slaves (including general-purpose slaves and Servo Drives).	
Controller error	Errors that are defined by the NJ-series System. "Controller error" is a collective term for major fault level, partial fault level, minor fault level, and observation Controller events.	
Controller event	One of the events in the NJ-series System. Controller events are errors and information that are defined by the system for user notification. A Controller event occurs when the system detects a factor that is defined as a Controller event.	
Controller information	Information that is defined by the NJ-series System that is not an error. It represents an information Controller event.	
derivative data type	A data type that is defined by the user. Structures, unions, and enumerations are derivative data types.	
device variable	A variable that is used to access a specific device through an I/O port.	
download	To transfer data from the Sysmac Studio to the Controller with the synchronization operation of the Sysmac Studio.	
edge	One of the attributes of a variable. This attribute makes a BOOL variable pass TRUE to a function block when the variable changes from FALSE to TRUE or when it changes from TRUE to FALSE.	


Term	Description
enumeration	One of the derivative data types. This data type takes one item from a prepared
	name list of enumerators as its value.
enumerator	One of the values that an enumeration can take expressed as a character string. The value of an enumeration is one of the enumerators.
EtherCAT Master Function Module	One of the function modules. This function module controls the EtherCAT slaves as the EtherCAT master.
EtherNet/IP Function Module	One of the function modules. This function module controls the built-in EtherNet/IP port.
event log	A function that recognizes and records errors and other events.
Event Setup	Settings that define user-defined errors and user-defined information.
FB	An acronym for "function block."
forced refreshing	Forcing the refreshing of an input from an external device or an output to an external device, e.g., when the user debugs a program. Addresses that are subject to forced refreshing can still be overwritten from the user program.
FUN	An abbreviation for "function."
function	A POU that is used to create an object that determines a unique output for the same input, such as for data processing.
function block	A POU that is used to create an object that can have a different output for the same input, such as for a timer or counter.
function module	One of the functional units of the software configuration of the CPU Unit.
general-purpose slave	Any of the EtherCAT slaves that cannot be assigned to an axis.
global variable	A variable that can be read or written from all POUs (programs, functions, and function blocks).
I/O map settings	Settings that assign variables to I/O ports. Assignment information between I/O ports and variables.
I/O port	A logical interface that is used by the CPU Unit to exchange data with an external device (slave or Unit).
I/O refreshing	Cyclic data exchange with external devices that is performed with predetermined memory addresses.
information	One of the event levels for Controller events or user-defined events. These are not errors, but appear in the event log to notify the user of specific information.
Initial Value	One of the attributes of a variable. The variable is set to the initial value in the following situations.
	When power is turned ON
	When the CPU Unit changes to RUN mode
	When you specify to initialize the values when the user program is transferred
	When a major fault level Controller error occurs
inline ST	ST programming that is included within a ladder diagram program.
instruction	The smallest unit of the processing elements that are provided by OMRON for use in POU algorithms. There are ladder diagram instructions (program inputs and outputs), function instructions, function block instructions, and ST statements.
literal	A constant expression that is used in a user program.
local variable	A variable that can be accessed only from inside the POU in which it is defined. "Local variable" is used as opposed to "global variable." Local variables include internal variables, input variables, output variables, in-out variables, and external variables.
main memory	The memory inside the CPU Unit that is used by the CPU Unit to execute the OS and user program.
major fault level Controller error	An error for which all NJ-series Controller control operations stop. The CPU Unit immediately stops user program execution and turns OFF the loads for all slaves and Units (including remote I/O).
MC Test Run	A function to check motor operation and wiring from the Sysmac Studio.
memory used for CJ-series units	One type of I/O memory in an NJ-series CPU Unit. It contains addresses that can be directly specified by the user. It can be accessed only with variables with an AT attribute. This memory is used to access CJ-series Units and CJ-series networks.

Term	Description
minor fault level Controller error	An error for which part of the control operations for one of the function modules in
	the NJ-series Controller stop.
	An NJ-series CPU Unit continues operation even after a minor fault level Controller error occurs.
Motion Control Function Module	One of the function modules. The MC Function Module performs motion control
Motion Control Function Module	based on commands from the motion control instructions that are executed in the
	user program.
motion control instruction	A function block instruction that executes motion control.
modern control modern	The Motion Control Function Module supports instructions that are based on func-
	tion blocks for PLCopen motion control as well as instructions developed specifi-
	cally for the Motion Control Function Module.
Network Publish	One of the attributes of a variable.
	This attribute allows you to use CIP message communications or tag data links to
	read/write variables from another Controller or from a host computer.
observation	One of the event levels for Controller events or user-defined events.
	These are minor errors that do not affect control operations, but appear in the event
	log to notify the user of specific information.
partial fault level Controller error	An error for which all of the control operations for one of the function modules in the
	NJ-series Controller stop.
	An NJ-series CPU Unit continues operation even after a partial fault level Controller
PDO communications	An obbreviation for process data communications. Data is evaluated between the
PDO communications	An abbreviation for process data communications. Data is exchanged between the master and slaves on a process data communications cycle. (The process data
	communications cycle is the same as the task period of the primary periodic task.)
periodic task	A tasks for which user program execution and I/O refreshing are performed each
periodic task	period.
PLC Function Module	One of the function modules. This function module executes the user program,
	sends commands to the Motion Control Function Module, and provides an interface
	to the USB and SD Memory Card.
POU	An acronym for "program organization unit." A POU is a unit in a program execution
	model that is defined in IEC 61131-3.
	A POU contains an algorithm and a local variable table and forms the basic unit
	used to build a user program.
	There are three types of POUs: programs, functions, and function blocks.
primary periodic task	The task with the highest priority.
process data communications	One type of EtherCAT communications in which process data objects (PDOs) are
	used to exchange information cyclically and in realtime. Process data communications are also called PDO communications.
program	Along with functions and function blocks, one of the three types of POUs.
program	Programs are assigned to tasks to execute them.
Range Specification	One of the variable specifications. You can specify a range for a variable in
Trange Opcomoditori	advance. The variable can take only values that are in the specified range.
Retain	One of the attributes of a variable. The values of variables with a Retain attribute
	are held at the following times. (Variables without a Retain attribute are set to their
	initial values.)
	When power is turned ON after a power interruption
	When the CPU Unit changes to RUN mode
	When you specify to not initialize the values when the user program is trans-
	ferred
SDO communications	One type of EtherCAT communications in which service data objects (SDOs) are
CDC communications	used to transmit information whenever required.
Servo Drive/encoder input slave	Any of the EtherCAT slaves that is assigned to an axis. In the NJ-series System, it
Taris Emergines del mipat diavo	would be a Servo Drive or Encoder Input Slave Unit.
slave and Unit configurations	A generic term for the EtherCAT configuration and Unit configuration.
Special Unit Setup	A generic term for the settings for a Special Unit, including the settings in allocated
	DM Area words.
structure	One of the derivative data types. It consists of multiple data types placed together
	into a layered structure.

Term	Description
synchronization	A function that automatically compares the information in the NJ-series Controller with the information in the Sysmac Studio, displays any differences and locations in a hierarchical form, and can be used to synchronize the information.
Sysmac Studio	A computer software application for setting, programming, debugging, and trouble-shooting NJ-series Controllers. It also provides operations for motion control and a Simulator.
system common processing	System processing that is performed by the CPU Unit to perform I/O refreshing and the user program execution within a task. Exclusive control of variables between tasks, data trace processing, and other processing is performed.
system service	Processing that is performed by the CPU Unit in unused time between task processing. The system service includes communications processing, SD Memory Card access processing, self-diagnosis processing, and other processing.
system-defined variable	A variable for which all attributes are defined by the system and cannot be changed by the user.
task	An attribute that defines when a program is executed.
task period	The interval at which the primary periodic task or a periodic task is executed.
union	One of the derivative data types. It allows you to handle the same data as different data types.
Unit configuration	The configuration information for the Units that are set on the Sysmac Studio. This information tells what Unit models are connected to the CPU Unit and where they are connected.
upload	To transfer data from the Controller to the Sysmac Studio with the synchronization operation of the Sysmac Studio.
user program	All of the programs in one project.
user-defined event	One of the events in the NJ-series System. These events are defined by the user. "User-defined events" is a generic term for user-defined errors and user-defined information.
user-defined variable	A variable for which all of the attributes are defined by the user and can be changed by the user.
variable	A representation of data, such as a numeric value or character string, that is used in a user program. You can change the value of a variable by assigned the required value. "Variable" is used as opposed to "constant," for which the value does not change.
variable memory	A memory area that contains the present values of variables that do not have AT specifications. It can be accessed only with variables without an AT attribute.

Revision History

A manual revision code appears as a suffix to the catalog number on the front and back covers of the manual.

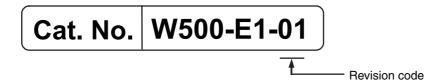

Revision code	Date	Revised content
01	July 2011	Original production

Introduction

This section provides an introduction to the NJ-series Controllers and their features, and gives the NJ-series Controller specifications.


1-1	The NJ-series Controllers			
	1-1-1	Features		
	1-1-2	Introduction to the System Configurations		
1-2	Speci	fications		
1-3	Overa	II Operating Procedure for the NJ-series Controller 1-8		
	1-3-1	Overall Procedure		
	1-3-2	Procedure Details		

The NJ-series Controllers

The SYSMAC NJ-series Controllers are next-generation machine automation controllers that provide the functionality and high-speed performance that are required for machine control. They provide the safety, reliability, and maintainability that are required of industrial controllers.

The NJ-series Controllers provide the functionality of previous OMRON PLCs, and they also provide the functionality that is required for motion control. Synchronized control of I/O devices on high-speed EtherCAT can be applied to vision systems, motion equipment, discrete I/O, and more.

OMRON offers the new Sysmac Series of control devices designed with unified communications specifications and user interface specifications. The NJ-series Machine Automation Controllers are part of the Sysmac Series. You can use them together with EtherCAT slaves, other Sysmac products, and the Sysmac Studio Automation Software to achieve optimum functionality and ease of operation. With a system that is created from Sysmac products, you can connect components and commission the system through unified concepts and usability.

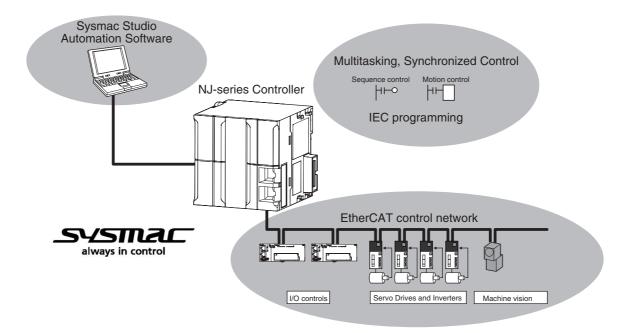

1-1-1 **Features**

Hardware Features

Standard-feature EtherCAT Control Network Support

All CPU Units provide an EtherCAT master port for EtherCAT communications. EtherCAT is an advanced industrial network system that achieves faster, more-efficient communications. It is based on Ethernet. Each node achieves a short fixed communications cycle time by transmitting Ethernet frames at high speed. The standard-feature EtherCAT control network allows you to connect all of the devices required for machine control (e.g., I/O systems, Servo Drives, Inverters, and machine vision) to the same network.

CJ-series Units

In addition to EtherCAT network slaves, you can also mount CJ-series Basic I/O Units and Special Units on the I/O bus.

Standard-feature EtherNet/IP Communications Port

All CPU Units provide an EtherNet/IP port for EtherNet/IP communications. EtherNet/IP is a multi-vendor industrial network that uses Ethernet. You can use it for networks between Controllers or as a field network. The use of standard Ethernet technology allows you to connect to many different types of general-purpose Ethernet devices.

Standard-feature USB Port

You can connect the computer that runs the Support Software directly to the CPU Unit.

Standard-feature SD Memory Card Slot

You can access an SD Memory Card that is mounted in the CPU Unit from the user program.

Highly Reliable Hardware

The NJ-series Controllers provide the hardware reliability and RAS functions that you expect of a PLC.

Software Features

Integrated Sequence Control and Motion Control

An NJ-series CPU Unit can perform both sequence control and motion control. You can simultaneously achieve both sequence control and multi-axes synchronized control. Sequence control, motion control, and I/O refreshing are all executed in the same control period. The same control period is also used for the process data communications cycle for EtherCAT. This enables precise sequence and motion control in a fixed period with very little deviation.

Multitasking

You assign I/O refreshing and programs to tasks and then specify execution conditions and execution order for them to flexibly combine controls that suit the application.

Programming Languages Based on the IEC 61131-3 International Standard

The NJ-series Controllers support language specifications that are based on IEC 61131-3. To these, OMRON has added our own improvements. Motion control instructions that are based on PLCopen standards and an instruction set (POUs) that follows IEC rules are provided.

Programming with Variables to Eliminate Worrying about the Memory Map

You access all data through variables in the same way as for the advanced programming languages that are used on computers. Memory in the CPU Unit is automatically assigned to the variables that you create so that you do not have to remember the physical addresses.

A Wealth of Security Features

The many security features of the NJ-series Controllers include operation authority settings and restriction of program execution with IDs.

Complete Controller Monitoring

The CPU Unit monitors events in all parts of the Controller, including mounted Units and EtherCAT slaves. Troubleshooting information for errors is displayed on the Sysmac Studio or on an NS-series PT. Events are also recorded in logs.

Sysmac Studio Automation Software

The Sysmac Studio provides an integrated development environment that covers not only the Controller, but also covers peripheral devices and devices on EtherCAT. You can use consistent procedures for all devices regardless of the differences in the devices. The Sysmac Studio supports all phases of Controller application, from designing through debugging, simulations, commissioning, and changes during operation.

A Wealth of Simulation Features

The many simulation features include execution, debugging, and task execution time estimates on a virtual controller.

1-1-2 Introduction to the System Configurations

The NJ Series supports the following system configurations.

Basic System Configurations

The NJ-series basic configurations include the EtherCAT network configuration, CJ-series Unit configuration, and the Support Software.

EtherCAT Network Configuration


You can use the built-in EtherCAT master port on the CPU Unit to connect to general-purpose terminals for analog and digital I/O and to Servo Drives and encoder input slaves. An EtherCAT network configuration enables precise sequence and motion control in a fixed cycle with very little deviation.

CJ-series Unit Configuration

In addition to the EtherCAT network, you can mount CJ-series Basic I/O Units and Special Units. CJseries Units can be mounted both to the CPU Rack where the CPU Unit is mounted and to Expansion Racks.


Support Software

The Support Software is connected to the peripheral USB port on the CPU Unit with a commercially available USB cable. You can also connect it to the built-in EtherNet/IP port on the CPU Unit with Ethernet cable.

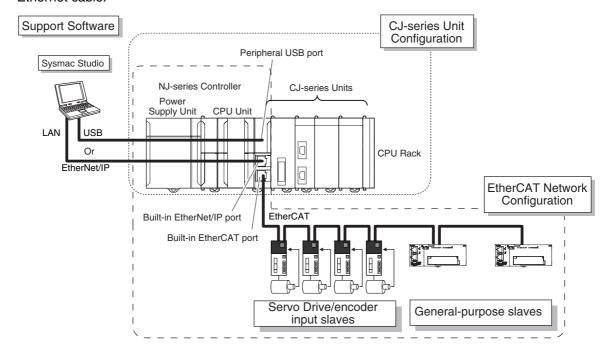

Network Configurations

- Host computers, HMIs, and other NJ-series Controllers are connected to the built-in EtherNet/IP port on the CPU Unit.
- A DeviceNet network is connected to a DeviceNet Unit. A serial communications network is connected to a Serial Communications Unit.

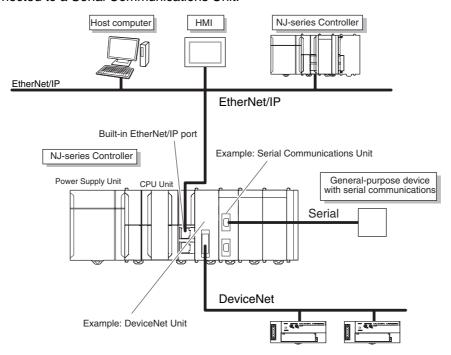

Support Software

You can use the following Support Software to set up, monitor, and debug an NJ-series Controller.

Sysmac Studio

The Sysmac Studio is the main Support Software that you use for an NJ-series Controller. On it, you can set up the Controller configurations, parameters, and programs, and you can debug and simulate operation.

Other Support Software

The following Support Software is also included in the Sysmac Studio Software Package Standard Edition.

Configuration software	Application
Sysmac Studio	The Sysmac Studio is used for sequence control, motion control, and all other operations except those described below.
Network Configurator	The Network Configurator is used for tag data links on the built-in EtherNet/IP port.
CX-Integrator	The CX-Integrator is used for remote I/O communications with a DeviceNet Unit.
CX-Protocol	The CX-Protocol is used for protocol macros with Serial Communications Units.
CX-Designer	The CX-Designer is used to create screens for NS-series PTs.

Specifications 1-2

This section gives the main specifications of the NJ-series Controllers.

ltem		NJ501-1300	NJ501-1400	NJ501-1500		
Program capacity		20 MB (execution objects and variable tables (including variable names))		bles (including vari-		
cap for	Memory capacity	Variables with Retain attribute (Does not include Holding, DM, and EM Area memory for CJ-series Units.)	2 MB			
	for vari- ables	Variables without Retain attribute (Does not include CIO and Work Area memory for CJ-series Units.)	4 MB			
·····g	Memory for	CIO Area	6,144 words (CIO 0	to CIO 6143)		
	CJ-series Units (Can	Work Area	512 words (W0 to W	/511)		
	be speci-	Holding Area	1,536 words (H0 to	H1535)		
	fied with	DM Area	32,768 words (D0 to	D32767)		
AT specifications for variables.)*1	EM Area	32,768 words × 25 t	oanks (E0_00000 to I	E18_32767)		
	Maximum ni	umber of connectable Units		Rack or Expansion R	lack: 10 Units	
			Entire Controller: 40 Units			
Unit con-	The state of the s		3 max.			
figuration	I/O capacity			2,560 points max. plus EtherCAT slave I/O capacity		
Power Sup Expansion		ly Unit for CPU Rack and Racks	NJ-P□3001			
	Controllable Servo Drives		OMRON G5-series Servo Drives with Built-in EtherCAT Communications Recommended unit version: Version 2.1 or later			
	Controllable	encoder input terminals	OMRON GX-series GX-EC0211/EC0241 EtherCAT Remote I/O Terminals			
				Recommended unit version: Version 1.1 or later		
	Control met	hod	Control commands using EtherCAT communications			
Motion	Control mod	des	Position control (Cyclic Synchronous Position Control Mode) Velocity control (Cyclic Synchronous Velocity Control Mode) Torque control (Cyclic Synchronous Torque Control Mode)		ocity Control Mode)	
control		Maximum number of controlled axes	16 axes	32 axes	64 axes	
	Number of controlled	Single-axis control	16 axes max.	32 axes max.	64 axes max.	
	axes	Linear interpolation control	4 axes max. per axes group			
		Circular interpolation control	2 axes per axes gro	2 axes per axes group		
	Number of a	ixes groups	32 axes groups max.			
	Cams	Number of cam data points	65,535 points max. per cam table 1,048,560 points max. for all cam tables			
		Number of cam tables	640 tables max.			

Item			NJ501-1300	NJ501-1400	NJ501-1500	
		Supported s	services	Sysmac Studio con	nection	
	Peripheral USB port	Physical lay	er	USB 2.0-compliant B-type connector		
	OOD port	Transmissio	n distance	5 m max.		
		Communications protocol		TCP/IP, UDP/IP, and	BOOTP client	
		Supported services		Sysmac Studio connection, tag data link, CIP message communications, socket service, FTP server, automatic clock adjustment (NTP client), SNMP agent, and DNS client		
		Physical lay	er	10Base-T or 100Ba	se-TX	
		Media acces	s method	CSMA/CD		
		Modulation		Baseband		
		Topology		Star		
		Baud rate		100 Mbps (100Base	e-TX)	
	Built-in	Transmissio	n media	STP (shielded, twist higher	ted-pair) cable of Eth	ernet category 5 or
	Ether- Net/IP port	Transmissio	n distance	100 m max. (distant	ce between hub and	node)
		Number of o	ascade connec-	There are no restrictions if a switching hub is used		ub is used.
			Tag data links munications)			
Communi- cations			Number of con- nections	32		
			Permissible communications band	1,000 pps ^{*2} includir	ng heartbeat	
			Number of tag sets	32		
		Communica	tions protocol	Special protocol for	EtherCAT	
		Supported s	services	CoE (PDO commun	ications and SDO co	ommunications)
		Synchronize tions	ed communica-	DC (distributed cloc	k)	
		Physical lay	er	100Base-TX		
	.	Modulation		Baseband		
	Built-in EtherCAT	Baud rate		100 Mbps (100Base-TX)		
	port	Duplex mode		Auto		
		Topology		Line, daisy chain, a	nd branching	
		Transmissio	n media		ted-pair cable (doubl uiding) of Ethernet ca	
		Transmissio	n distance	Distance between n	odes: 100 m max.	
		Maximum ni	umber of slaves	192		

^{*1} Timers, counters, index registers, data registers, and Task Flags cannot be specified.

^{*2} Means packets per second, i.e., the number of communications packets that can be sent or received in one second.

1-3 **Overall Operating Procedure for the NJ-series Controller**

This section gives the overall operating procedure of the NJ-series Controllers and then describes it in more detail.

1-3-1 **Overall Procedure**

The overall procedure to use an NJ-series Controller is given below.

Step 1. Software Design

Design the overall system configuration, task configuration, programs, and variables.

Step 1-1 Designing I/O and Processing

Step 1-2 Designing Tasks

Step 1-3 Designing Programs



Step 2. Software Setups and Programming

Create the system configurations that you designed in step 1 on the Support Software and assign the variables. Create the tasks and programs, and debug them, e.g., with simulations.

Step 2-1 Slave and Unit Configurations

Step 2-2 Controller Setup

Step 2-3 Programming

Step 2-4 Offline Debugging



Step 3. Mounting and Setting Hardware

Mount the Units and make the required hardware settings.



Step 4. Wiring

Connect the network cables and wire the I/O.



Step 5. Confirming Operation and Starting Actual System Operation

Connect the Support Software to the physical system and download the project. Check operation on the physical system and then start actual system operation.

1-3-2 Procedure Details

Step 1. Software Design			
Step	Description	Reference	
Step 1-1 Designing I/O and Processing	 External I/O devices and unit configuration Refresh periods for external devices Program contents 	Section 3 Configuration Units	



Step 1-2 Designing Tasks	Task configurationRelationship between tasks and programs	4-2-3 Task Settings in NJ- series CPU Unit Software
	Task periods	User's Manual (Cat. No.
	Slave and Unit refresh times	W501)
	 Exclusive control methods for variables between tasks 	



Step 1-3 Designing Programs		
POU (Program Organization Unit) Design	 Programs Functions and function blocks Determining the algorithm languages 	Section 6 Programming in NJ-series CPU Unit Software User's Manual (Cat. No. W501)
Variable Design	 Defining variables that you can use in more than one POU and variables that you use in only specific POUs Defining the variables names for the device variables that you use to access slaves and Units Defining the attributes of variables, such as the Name and Retain attributes Designing the data types of variables 	6-3 Variables in NJ-series CPU Unit Software User's Manual (Cat. No. W501)



Step 2. Software Setups and Programming				
Step	Description	Sysmac Studio Operations	Reference	
Project Creation	 Create a project in the Sysmac Studio. Insert a Controller. 	New Project Button Insert - Controller	Sysmac Studio Version 1 Operation Manual (Cat. No. W504)	



The following Controller Configurations and Setup and the Programming and Task Settings can be performed in either order.

Step 2-1 Slave and Unit Configurations			
Creating the Slave and Unit Configurations	Creating the slave configuration and Unit configuration either offline or online. (For online configuration, make the online connection that is described in step 5.)	EtherCAT Slave Setting Editor Unit Editor	3-2 Creating the EtherCAT Slave Configuration and 3-3 Creating the Unit Configura- tion in NJ-series CPU Unit Software User's Manual (Cat. No. W501)
•			

I/O Map

Registering device variables in variable

automatically created.)

tables (Variable names are user defined or



2) Assigning Device

Variables to I/O Ports

(The following step is for motion control.)

3) Creating the Axes and Assigning Them to the Servo Drive/Encoder Input Slaves	Creating the axes and setting them as real axes or virtual axes. Creating axes groups to perform interpolated axes control.	Configurations and Setup – Motion Con- trol Setup	3-5 Creating the Axes and Assigning Them to the Servo Drives/Encoder Input Slaves in NJ-series CPU Unit Software User's Manual (Cat. No. W501)
---	---	---	---



3-4 I/O Ports and Device

(Cat. No. W501)

Variables in NJ-series CPU

Unit Software User's Manual

Step 2-2 Controller Setup		ting the following parameters from the mac Studio		Section 4 Controller Setup in NJ-series CPU Unit Soft- ware User's Manual (Cat. No. W501)		
		Setting the initial values for the PLC Function Module	Configurations and Setup – Controller Setup – Operation Settings	4-2 Initial Settings for the PLC Function Module in NJ-series CPU Unit Software User's Manual (Cat. No. W501)		
				Initial settings for Special Units	Configurations and Setup – CPU/Expan- sion Racks	4-3 Initial Settings for Special Units in NJ-series CPU Unit Software User's Manual (Cat. No. W501)
		<u> </u>	Configurations and Setup – EtherCAT	4-5 Initial Settings for the EtherCAT Master Function Module in NJ-series CPU Unit Software User's Manual (Cat. No. W501)		
		Setting the initial values for the Ether- Net/IP Function Module	Configurations and Setup – Controller Setup – Built-in Ether- Net/IP Port Settings	4-6 Initial Settings for the EtherNet/IP Function Mod- ule in NJ-series CPU Unit Software User's Manual (Cat. No. W501)		



Step 2-3 Programming			
1) Registering Variables	 Registering the variables used by more than one POU in the global variable table with Sysmac Studio Registering the local variable table for each program Registering the local variable table for each function block and function 	Global Variable Table Editor Local Variable Table Editor	Sysmac Studio Version 1 Operation Manual (Cat. No. W504) 6-3 Variables in NJ-series CPU Unit Software User's Manual (Cat. No. W501)
2) Writing Algorithms for POUs	Writing the algorithms for the POUs (programs, function blocks, and functions) in the required languages	Programming Editor	Section 6 Programming in NJ-series CPU Unit Soft- ware User's Manual (Cat. No. W501) NJ-series Instructions Ref- erence Manual (Cat. No. W502) and NJ-series Motion Control Instructions Reference Manual (Cat. No. W508)
3) Setting the Tasks	Making task settings	Configurations and Setup – Task Settings	4-2-3 Task Settings in NJ- series CPU Unit Software User's Manual (Cat. No. W501)



Step 2-4 Offline Debugging	Checking the algorithms and task execution times on the Simulator (virtual controller)	Section 7 Simulation, Transferring Projects to the Physical CPU Unit, and Operation in NJ-series CPU Unit Software User's Manual (Cat. No. W501)
		No. W501)



Step 3. Mounting and Setting Hardware					
Step	Description	Reference			
1. Mounting	Connecting adjacent Units Mounting to DIN Track	4-3 Mounting Units			
2. Setting Hardware	 Setting the node addresses of the EtherCAT slaves Setting unit numbers on the rotary switches on the front of the Special Units 	Operation manuals for the EtherCAT slaves and Special Units			



Step 4. Wiring)	
Step	Description	Reference
1. Connecting Ethernet Cable	Connecting the built-in EtherCAT port Connecting the built-in EtherNet/IP port	4-4 Wiring
2. Wiring I/O	Wiring I/O to EtherCAT slaves Wiring Basic I/O Units and Special Units	4-4 Wiring
	Checking wiring	6-4-2 Performing Online Debugging in Sysmac Stu- dio Version 1 Operation Manual (Cat. No. W504)
3. Connecting the Computer That Runs the Sysmac Studio	Connecting USB Cable Connecting the built-in EtherNet/IP port	Sysmac Studio Version 1 Operation Manual (Cat. No. W504)



Step 5. Confir	Step 5. Confirming Operation and Starting Actual System Operation						
Step	Description	Sysmac Studio Operations	Reference				
Online Connection to Controller and Project Download	Make the settings for communications with the Controller, connect online, and download the user program, Controller Configurations, and Controller Setup. (Perform this step before you create the slave configuration or Unit configuration from the mounted Units in step 2-1.) Note Use the Synchronize Menu of the	Controller – Commu- nications Setup Controller – Synchro- nization	Section 7 Simulation, Transferring Projects to the Physical CPU Unit, and Operation in NJ-series CPU Unit Software User's Manual (Cat. No. W501)				
	Sysmac Studio to download the project.						
	Cycle the power supply.						



2. Operation Check on Controller	 Example: Check the wiring by perform- ing forced-refreshing with user-speci- fied values from the I/O Map or Ladder Editor. 	Section 7 Simulation, Trans- ferring Projects to the Physi- cal CPU Unit, and Operation in NJ-series CPU Unit Soft-
	2. Example (for motion control): Use the	ware User's Manual (Cat.
	MC Test Run operations in PROGRAM	No. W501)
	mode to check wiring, motor rotation	
	directions for jogging, travel distances	
	for relative positioning (e.g., for elec-	
	tronic gear settings), and homing operation.	
	Perform manual operation in RUN mode.	
	4. Debug the actual control system.	



3. Actual Controller Operation Perform automatic mode.	operation in RUN Section 7 Simulation, Transferring Projects to the Physical CPU Unit, and Operation in NJ-series CPU Unit Software User's Manual (Cat. No. W501)
--	--



System Configuration

This section describes the basic system configuration and devices used for NJ-series Controllers.

2-1	Basic	System Configuration	2-2
	2-1-1	EtherCAT Network Configuration	. 2-4
	2-1-2	CJ-series Unit Configuration	. 2-5
2-2	Conne	cting to the Sysmac Studio	2-18
2-3	Netwo	rk Configuration	2-19

Basic System Configuration 2-1

System Configuration

An NJ-series Controller supports the following two types of configurations.

(1) Basic Configurations

The basic configurations include the CPU Unit and the Configuration Units that are controlled directly by the CPU Unit. There are two basic configurations.

- EtherCAT network configuration
- · CJ-series Unit configuration

(2) Other Network Configurations

These are the configurations of the systems that are connected to the CPU Unit's built-in Ether-Net/IP port and Communications Units.

EtherCAT Network Configuration

With an NJ-series CPU Unit, you can use an EtherCAT network as a basic system.

With the EtherCAT network system of the NJ-series CPU Unit, the period for sequence processing and motion processing in the CPU Unit is the same as the EtherCAT communications period. This enables high-precision sequence control and motion control with a constant period and little fluctuation.

For information on EtherCAT, refer to the NJ-series CPU Unit Built-in EtherCAT Port User's Manual (Cat. No. W505).

CJ-series Unit Configuration

CPU Rack

The CPU Rack consists of the following items.


- NJ-series CPU Unit
- NJ-series Power Supply Unit
- CJ-series Configuration Units* CJ-series Basic I/O Units, Special I/O Units, and CPU Bus Units
- I/O Control Unit

An I/O Control Unit is required to connect an Expansion Rack.

- * Some CJ-series Configuration Units cannot be used with an NJ-series CPU Unit. Refer to CJ-series Configuration Units on page 2-11 for information on the models you can use with an NJseries CPU Unit.

Expansion Racks

You can connect an Expansion Rack to an NJ-series CPU Rack or to another Expansion Rack. A CPU Unit cannot be mounted to an Expansion Rack. The rest of the configuration is the same as for an NJ-series CPU Rack.

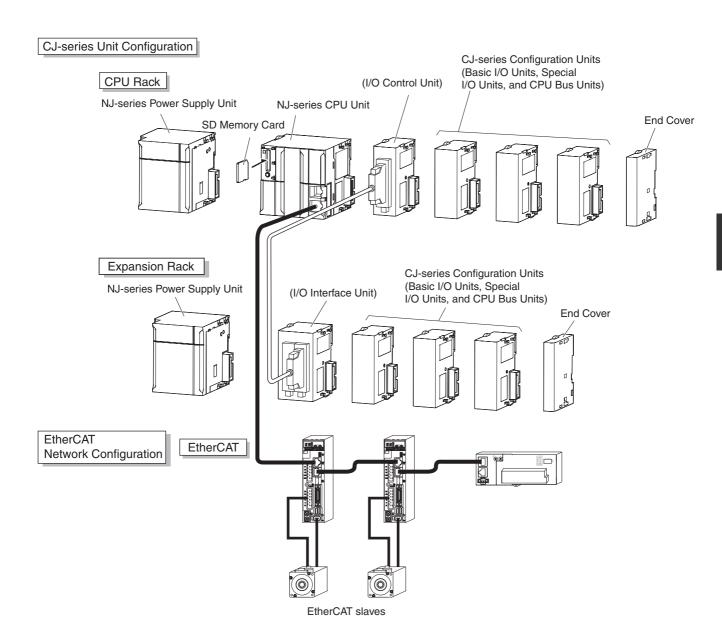


2-1-1 **EtherCAT Network Configuration**

The EtherCAT network configuration consists of an NJ-series CPU Unit, an NJ-series Power Supply Unit, a CJ-series End Cover, and the EtherCAT slaves.

You use the built-in EtherCAT master port on the NJ-series CPU Unit to connect EtherCAT slaves. For information on the system configuration of an EtherCAT network, refer to the NJ-series CPU Unit Built-in EtherCAT Port User's Manual (Cat. No. W505).

EtherCAT Network Configuration

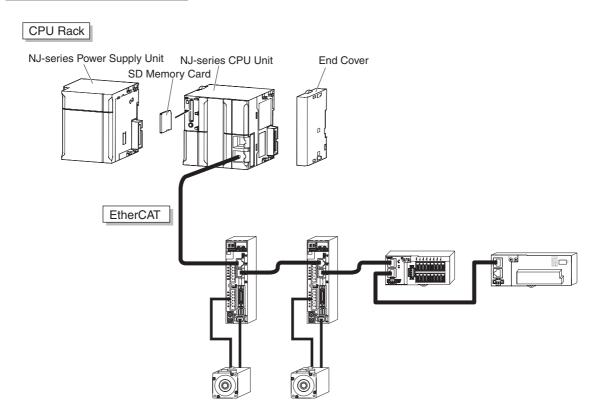


EtherCAT slaves

2-1-2 CJ-series Unit Configuration

The CJ-series Unit configuration consists of the CJ-series Units that are connected. It includes the CJ-series Units on the CPU Rack and Expansion Racks.

CPU Rack

The CPU Rack consists of an NJ-series CPU Unit, an NJ-series Power Supply Unit, CJ-series Configuration Units, and a CJ-series End Cover. Up to 10 Configuration Units can be connected.

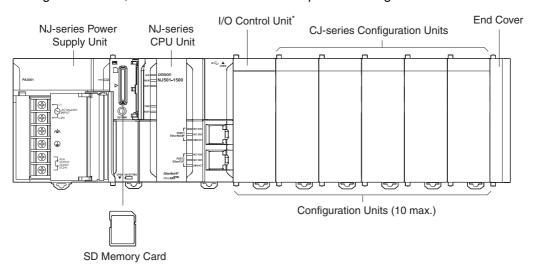

* The I/O Control Unit is required only to connect an Expansion Rack. It must be connected immediately to the right of the CPU Unit.

Even though the NJ-series Controllers do not have Backplanes, the term "slot" is still used to refer to the location of Units. Slot numbers are assigned in order to Units from left to right on the CPU Rack (slot 0, slot 1, slot 2, etc.).

Name	Configuration	Remarks
NJ-series Units	NJ-series CPU Units (One End Cover is provided with each Unit.)	One required for every CPU Rack.
	NJ-series Power Supply Unit	
	SD Memory Card	Install as required.
CJ-series Units	I/O Control Unit	Required to connect an Expansion Rack. Must be connected immediately to the right of the CPU Unit.
	End Cover	Must be connected to the right end of the CPU Rack. One End Cover is provided with the CPU Unit.
		(A Controller error in the major fault level will occur if the End Cover is not connected to the right end.)
	CJ-series Basic I/O Units	A total of up to 10 Units can be connected to the CPU
	CJ-series Special I/O Units	Rack and to each of the Expansion Racks. (A Controller error in the major fault level will occur if 11 or more Units
	CJ-series CPU Bus Units	are connected.)

Units

NJ-series CPU Units

Model	I/O capacity/Maximum num- ber of Configuration Units	Program	Memory capacity for	Number of motion	sumption		Weight
	(Maximum number of Expansion Racks)	capacity	variables	axes	5 VDC	24 VDC	
NJ501-1300	2,560 points/40 Units (3	20 MB	2 MB: Retained during	16	1.90 A		550 g
NJ501-1400	Expansion Racks)		power interruptions.	32			
NJ501-1500			4 MB: Not retained during power interruptions.	64			

NJ-series Power Supply Units

Model	Power supply	Output	current	Output RUN		N CPU Expansion		Weight
Wodei	voltage	5 VDC	24 VDC	capacity	apacity output		Racks	weight
NJ-PA3001	100 to 240 VAC	6.0 A	1.0 A	30 W	Yes	Yes	Yes	470 g max.
NJ-PD3001	24 VDC	6.0 A	1.0 A	30 W	Yes	Yes	Yes	490 g max.

A CJ-series Power Supply Unit cannot be used to supply power to an NJ-system CPU Rack or Expansion Rack. If you connect a CJ-series Power Supply Unit to a CPU Rack, an Incorrect Power Supply Unit Connected error will occur, and the CPU Unit will not operate. The RUN indicator will flash at a 3-s interval and the ERROR indicator will light.

If you connect the Power Supply Unit to an Expansion Rack, operation is performed without error detection. Normal operation, however, may be unstable due to insufficient supplied power. Also, an Internal NJ-series Bus Check Error (i.e., a Controller error in the major fault level) may occur when the power is interrupted.



Precautions for Safe Use

- Do not use the Power Supply Units in the system beyond the rated supply capacity ranges. Doing so may result in operation stopping, incorrect operation, or failure to correctly back up required data at power interruptions.
- Use only NJ-series Power Supply Units on NJ-series CPU Racks and Expansion Racks. Operation is not possible if you use a CJ-series Power Supply Unit with an NJ-series CPU Unit or an NJ-series Power Supply Unit with a CJ-series CPU Unit.

SD Memory Card

Model	Card type	Capacity	Format	Number of over- writes
HMC-SD291	SD Card	2 GB	FAT16	100,000

I/O Control Unit

Model	Specifications	Current consump- tion		Weight
		5 VDC	24 VDC	
CJ1W-IC101	An I/O Control Unit is required to connect an NJ-series Expansion Rack to an NJ-series CPU Rack. The I/O Control Unit must be connected immediately to the right of the CPU Unit. Connect to the I/O Interface Unit (CJ1W-II101) on the Expansion Rack with a CS/CJ-series I/O Connecting Cable.	0.02 A		70 g max.

End Cover

Model	Specifications	Current con- sumption	Weight
CJ1W-TER01	The End Cover must be connected to the right end of the NJ-series CPU Rack. (A Controller error in the major fault level will occur if the End Cover is not connected to the right end of the Rack.) One End Cover is provided with the CPU Unit and with an I/O Interface Unit.	Included with the C Expansion Unit.	CPU Unit or

Others

Name	Model	Specifications			
DIN Track	PFP-50N	Track length: 50 cm, height: 7.3 mm			
	PFP-100N	Track length: 1 m, height: 7.3 mm			
	PFP-100N2	Track length: 1 m, height: 16 mm			
	PFP-M	Stopper to prevent Units from moving on the track.			
		Two each are provided with the CPU Unit and with an I/O Interface Unit.			
Connecting cable for peripheral USB port (to connect the Sysmac Studio)	Commercially available USB cable	USB 2.0 (or 1.1) cable (A connector - B connector), 5.0 m max.			
Battery Set	CJ1W-BAT01	For CJ2 CPU Unit			
Sysmac Studio Standard Edition	SYSMAC-SE	The Sysmac Studio is a Support Software package that provides an integrated development environment to design, program, debug, and maintain SYSMAC NJ-series Controllers. The following Support Software is included.			
		Sysmac Studio			
		NX-Server			
		Network Configurator			
		CX-Integrator			
		CX-Configurator-FDT			
		• CX-Protocol			
		CX-Designer			

Recommended Communications Cables for EtherCAT and EtherNet/IP

For EtherCAT, use a shielded twisted-pair cable (double shielding with aluminum tape and braiding) of Ethernet category 5 (100Base-TX) or higher, and use straight wiring. For EtherNet/IP, use an STP (shielded twisted-pair) cable of Ethernet category 5 or higher. You can use either a straight or cross cable.

Product			Manufac- turer	Cable length*1	Model		
Products for EtherCAT	Size and number of	Cables with Connectors on Both Ends	OMRON Corporation	0.3	XS5W-T421-AMD-K		
	pairs: AWG22×2P	(RJ45/RJ145)		0.5	XS5W-T421-BMD-K		
		**		1	XS5W-T421-CMD-K		
		Cables with Connectors on Both Ends	OMRON Corporation	2	XS5W-T421-DMC-K		
		(RJ45/RJ145)		5	XS5W-T421-GMC-K		
		000		10	XS5W-T421-JMC-K		
Products for	Size and number of pairs:	Cables	Tonichi Kyosan Cable, Ltd.		NETSTAR-C5E SAB 0.5 × 4P		
EtherCAT or EtherNet/IP			Kuramo Electric Co.		KETH-SB		
	AWG24×4P		SWCC Showa Cable Systems Co.		FAE-5004		
		RJ45 Connectors	Panduit Corporation		MPS588		
	Size and	Cables	Kuramo Electric Co.		KETH-PSB-OMR*2		
	number of pairs: AWG22 × 2P	RJ45 Assembly Connectors	OMRON Corporation		OMRON Corporation		XS6G-T421-1*2
Products for	Size and	Cable	Fujikura		F-LINK-E 0.5mm × 4P		
EtherNet/IP number of pairs: 0.5 mm × 4P		RJ45 Connector	Panduit Corporation		Panduit Corporation MPS588		MPS588

^{*1} Cables are available in the following lengths: 0.3, 0.5, 1, 2, 3, 5, 10, and 15 m. Refer to the XS5/XS6 Industrial Ethernet Connectors Catalog (Cat. No. G019)


Note When making cables, connect the shield to the connectors at both ends for EtherCAT, but connect the shield to the connector at only one end for EtherNet/IP.

^{*2} We recommend that you use combinations of the above Cables and Connectors.

Expansion Racks

CJ-series Expansion Racks can be connected to the CPU Rack to expand the number of Units in the System beyond the CPU Rack. Up to 10 I/O Units can be mounted to each Expansion Rack and a total of 3 Expansion Racks can be connected.

Mount an I/O Control Unit immediately to the right of the CPU Unit, and mount the I/O Interface Unit immediately to the right of the Power Supply Unit on the Expansion Rack. Mounting them in other locations may cause malfunctions.

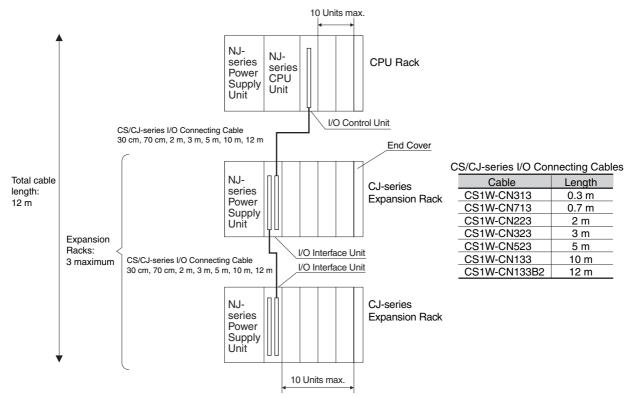

Use an NJ-series Power Supply Unit as the power supply for an Expansion Rack in an NJ-series System.

A CJ-series Power Supply Unit cannot be used to supply power on an NJ-system Expansion Rack.

Maximum Number of Expansion Racks

Expansion pattern	Maximum number of Racks	Remarks
NJ-series CPU Rack plus CJ-series Expansion Racks	3 Racks	The total length of I/O Connecting Cable between the CPU Rack and an Expansion Rack, and between all Expansion Racks, must be no more than 12 m.

Units

Units for CJ-series Expansion Racks

Rack	Configuration	Remarks		
NJ-series Expansion Racks	CJ-series Power Supply Unit	One required for each Expansion Rack.*		
	I/O Interface Unit (one End Cover included.)			
	CJ-series Basic I/O Units	A total of up to 10 Units can be connected to the CPU		
	CJ-series Special I/O Units	Rack and to each of the Expansion Racks. (A Controller error in the major fault level will occur if 11 or more		
	CJ-series CPU Bus Units	Units are connected.)		
	End Cover	Must be connected to the right end of the Expansion Rack. (One End Cover is provided with the I/O Interface Unit. A Controller error in the major fault level will occur if the End Cover is not connected to the right end.)		
	CS/CJ-series I/O Connecting Cable	Required to connect the I/O Interface Unit to the I/O Control Unit or previous I/O Interface Unit.		

^{*} A CJ-series I/O Control Unit is required on the NJ-series CPU Rack.

NJ-series Power Supply Units

Model	Power supply voltage	Output current		Output	RUN	CPU	Expan-	
		5 VDC	24 VDC	capacity	output	Rack	sion Racks	Weight
NJ-PA3001	100 to 240 VAC	6.0 A	1.0 A	30 W	Yes	Yes	Yes	470 g max.
NJ-PD3001	24 VDC	6.0 A	1.0 A	30 W	Yes	Yes	Yes	490 g max.

Note Use an NJ-series Power Supply Unit as the power supply for an NJ-series Expansion Rack. A CJ-series Power Supply Unit cannot be used for an NJ-series Expansion Rack.

I/O Interface Unit

Model	Specifications	Current consump- tion		Weight
		5 VDC	24 VDC	
CJ1W-II101	One Interface Unit is required for each CJ-series Expansion Rack. One End Cover is provided with each Unit.	0.13 A		130 g max.*

^{*} Includes the weight of the End Cover.

End Cover

Model	Specifications		nt con- ption	Weight
		5 VDC 24 VE		
CJ1W-TER01	The End Cover must be connected to the right end of the CJ-series Expansion Rack. An End Cover Missing error (a Controller error in the major fault level) will occur if the End Cover is not connected to the right end of the Rack. One End Cover is provided with the CPU Unit and with an I/O Interface Unit.	Included Expansio	with the CF n Unit.	PU Unit or

CS/CJ-series I/O Connecting Cables

Model	Specifications	Cable length
CS1W-CN313	An I/O Connecting Cable connects an I/O Control Unit (CJ1W-IC101) to an	0.3 m
CS1W-CN713	another I/O Interface Unit.	0.7 m
CS1W-CN223		2 m
CS1W-CN323		3 m
CS1W-CN523		5 m
CS1W-CN133	1	10 m
CS1W-CN133B2		12 m

CJ-series Configuration Units

Maximum Number of Units

A maximum of 10 Units can be connected to the CPU Rack for an NJ-series CPU Unit or to an Expansion Rack. There are no restrictions in the number of each model of Unit based on location.

Note If you connect more than the maximum number of Units to a CPU Rack or Expansion Rack, an Incorrect Unit/Expansion Rack Connection error (a major fault level Controller error) will occur, and the CPU Unit will not operate.

Models of Configuration Units

The Configuration Units with which the NJ-series CPU Unit can exchange data are classified into three groups. The number of Units that can be mounted depends on the type of Unit.

Units	Description	Unit identifica- tion method	Number of mountable Units
Basic I/O Units	Basic I/O Units are used for discrete inputs and outputs.	Identified by the CPU Unit according to mounting position.	Up to 40 Basic I/O Units can be mounted.
Special I/O Units	Special I/O Units are more advanced than Basic I/O Units. They support functions other than discrete inputs and outputs. Examples: Analog I/O Units and High-speed Counter Units Special I/O Units have a smaller area for exchanging data with the CPU Unit than CPU Bus Units (including Network Communications Units).	Identified by the CPU Unit using unit numbers 0 to 95 set with the rotary switches on the front panel of the Unit.	Up to 40 Special I/O Units can be mounted. (Depending on the model, 1 to 4 unit numbers are used for one Unit.)
CPU Bus Units	CPU Bus Units are advanced Units that exchange data with the CPU Unit via the CPU bus. Examples: Network Communications Units and Serial Communications Units CPU Bus Units have a larger area for exchanging data with the CPU Unit than Special I/O Units.	Identified by the CPU Unit using unit number 0 to F set with the rotary switch on the front panel of the Unit.	Up to 16 CPU Bus Units can be mounted.

CJ-series Configuration Units

CJ-series Basic I/O Units

Input Units

Name	Specifications	Model	Number of bits	Response time*1		Current con- sumption (A)		Weight
			allocated	ON	OFF	5 VDC	24 VDC	
DC Input Units	Terminal block 12 to 24 VDC, 8 inputs	CJ1W-ID201	16 ^{*2}	20 μs max.	400 μs max.	0.08		110 g max.
	Terminal block 24 VDC, 16 inputs	CJ1W-ID211	16	20 μs max.	400 μs max.	0.08		110 g max.
		CJ1W-ID212	16	15 μs max.	90 μs max.	0.13		110 g max.
	Fujitsu connector 24 VDC, 32 inputs	CJ1W-ID231*3	32	20 μs max.	400 μs max.	0.09		70 g max.
	MIL connector 24 VDC, 32 inputs	CJ1W-ID232*3	32	20 μs max.	400 μs max.	0.09		70 g max.
		CJ1W-ID233*3	32	15 μs max.	90 μs max.	0.20		70 g max.
	Fujitsu connector 24 VDC, 64 inputs	CJ1W-ID261*3	64	120 μs max.	400 μs max.	0.09		110 g max.
	MIL connector 24 VDC, 64 inputs	CJ1W-ID262*3	64	120 μs max.	400 μs max.	0.09		110 g max.
AC Input Units	Terminal block 200 to 240 VAC, 8 inputs	CJ1W-IA201	16 ^{*2}	10 μs max.	40 μs max.	0.08		130 g max.
	Terminal block 100 to 120 VAC, 16 inputs	CJ1W-IA111	16	10 μs max.	40 μs max.	0.09		130 g max.
Interrupt Input Unit	Terminal block 24 VDC, 16 inputs	CJ1W-INT01*4, *5	16	0.05 ms max.	0.5 ms max.	0.08		110 g max.
Quick- response Input Unit	Terminal block 24 VDC, 16 inputs	CJ1W-IDP01	16	0.05 ms max.	0.5 ms max.	0.08		110 g max.
B7A Inter- face Units	64 inputs	CJ1W-B7A14	64			0.07		80 g max.

^{*1} This is the input response time when no filter (i.e., 0 ms) is set. There is no filter setting for the CJ1W-INT01/IDP01. (The time is always 0 ms.)

- *4 An Interrupt Input Unit can be connected only in a CPU Rack. These Units must be mounted to slots 0 to 4 on the CPU Rack. An Incorrect Unit/Expansion Rack Connection error (major fault level Controller error) will occur if an Interrupt Input Unit is connected in other slots on the CPU Rack or to any slots on an Expansion Rack. Up to two Interrupt Input Units can be connected.
- *5 Interrupt Input Units can be used as normal Basic I/O Units. They cannot be used to start I/O interrupt tasks.

^{*2} Although 16 I/O bits are allocated, only 8 of these can be used for external I/O. These Units are also treated as 16-point I/O Units in the Unit configuration.

^{*3} The cable-side connector is not provided with Units equipped with cables. Purchase the connector separately (Refer to 4-4-4 Wiring CJ-series Basic I/O Units with Connectors.), or use an OMRON Connector-Terminal Block Conversion Unit or I/O Relay Terminal (Refer to 4-4-5 Connecting to Connector-Terminal Block Conversion Units or I/O Relay Terminals.).

Output Units

Nan	ne	Specifications	Model	Number of bits	Curren	t consumption (A)	Weight
		·		allocated	5 VDC	24 VDC	
Relay Outp	out Units	Terminal block, 250 VAC/24 VDC, 2 A; 8 points, independent contacts	CJ1W-OC201	16 ^{*1}	0.09	0.048 (0.006 × Number of ON outputs)	140 g max.
		Terminal block, 250 VAC/24 VDC, 2 A; 16 points	CJ1W-OC211	16	0.11	0.096 (0.006 × Number of ON outputs)	170 g max.
Triac Outpu	ut Unit	Terminal block, 250 VAC, 0.6 A; 8 points	CJ1W-OA201	16 ^{*1}	0.22		150 g max.
Transis- tor Out-	Sinking outputs	Terminal block, 12 to 24 VDC, 2 A; 8 outputs	CJ1W-OD201	16 ^{*1}	0.09		110 g max.
put Units		Terminal block, 12 to 24 VDC, 0.5 A; 8 outputs	CJ1W-OD203	16 ^{*1}	0.10		110 g max.
		Terminal block, 12 to 24 VDC, 0.5 A; 16 outputs	CJ1W-OD211*2	16	0.10		110 g max.
		Terminal block, 24 VDC, 0.5 A; 16 outputs	CJ1W-OD213*2	16	0.15		110 g max.
		Fujitsu connector, 12 to 24 VDC, 0.5 A; 32 outputs	CJ1W-OD231*3	32	0.14		70 g max.
		MIL connector, 12 to 24 VDC, 0.5 A; 32 outputs	CJ1W- OD233*2*3	32	0.14		70 g max.
		MIL connector, 24 VDC, 0.5 A; 32 outputs	CJ1W- OD234*2*3	32	0.22		70 g max.
		Fujitsu connector, 12 to 24 VDC, 0.3 A; 64 outputs	CJ1W-OD261*3	64	0.17		110 g max.
		MIL connector, 12 to 24 VDC, 0.3 A; 64 outputs	CJ1W-OD263*3	64	0.17		110 g max.
	Sourc- ing out- puts	Terminal block, 24 VDC, 2 A; 8 outputs, load short-circuit pro- tection and disconnected line detection	CJ1W-OD202	16 ^{*1}	0.11		120 g max.
		Terminal block, 24 VDC, 0.5 A; 8 outputs, load short-circuit pro- tection	CJ1W-OD204	16 ^{*1}	0.10		120 g max.
		Terminal block, 24 VDC, 0.5 A; 16 outputs, load short-circuit pro- tection	CJ1W-OD212	16	0.10		120 g max.
		MIL connector, 24 VDC, 0.5 A; 32 outputs, load short-circuit pro- tection	CJ1W-OD232*3	32	0.15		80 g max.
		MIL connector, 12 to 24 VDC, 0.3 A; 64 outputs	CJ1W-OD262*3	64	0.17		110 g max.
B7A Interfa	ce Units	64 outputs	CJ1W-B7A04	64	0.07		80 g max.

^{*1} Although 16 I/O bits are allocated, only 8 of these can be used for external I/O. These Units are also treated as 16-point I/O Units in the Unit configuration.

- ON response time: 0.1 ms improved to 0.015 ms
- OFF response time: 0.8 ms improved to 0.08 ms

^{*2} The ON/OFF response time for the CJ1W-OD213/CJ1W-OD234 is shorter than for the CJ1W-OD211/CJ1W-OD233, as shown below.

^{*3} The cable-side connector is not provided with Units equipped with cables. Purchase the connector separately (Refer to 4-4-4 Wiring CJ-series Basic I/O Units with Connectors.), or use an OMRON Connector-Terminal Block Conversion Unit or I/O Relay Terminal (Refer to 4-4-5 Connecting to Connector-Terminal Block Conversion Units or I/O Relay Terminals.).

Mixed I/O Units

Na	me	Specifications	Model	Number of bits allo-		consump- ı (A)	Weight
				cated	5 VDC	24 VDC	
24-VDC Input/ Transis- tor Out- put Units	Sinking	Fujitsu connector Inputs: 24 VDC, 16 inputs Outputs: 12 to 24 VDC, 0.5 A; 16 outputs	CJ1W-MD231*	32	0.13		90 g max.
		Fujitsu connector Inputs: 24 VDC, 32 inputs Outputs: 12 to 24 VDC, 0.3 A; 32 outputs	CJ1W-MD261*	64	0.14		110 g max.
		MIL connector Inputs: 24 VDC, 16 inputs Outputs: 12 to 24 VDC, 0.5 A; 16 outputs	CJ1W-MD233*	32	0.13		90 g max.
		MIL connector Inputs: 24 VDC, 32 inputs Outputs: 12 to 24 VDC, 0.3 A; 32 outputs	CJ1W-MD263*	64	0.14		110 g max.
	Sourcing	MIL connector Inputs: 24 VDC, 16 inputs Outputs: 24 VDC, 0.5 A; 16 outputs Load-short circuit protection	CJ1W-MD232*	32	0.13		80 g max.
TTL I/O U		MIL connector Inputs: TTL (5 VDC), 32 inputs Outputs: TTL (5 VDC, 35 mA), 32 outputs	CJ1W-MD563*	64	0.19		110 g max.
B7A Interf	ace Units	32 inputs, 32 outputs	CJ1W-B7A22	64	0.07		80 g max.

^{*} The cable-side connector is not provided with Units equipped with cables. Purchase the connector separately (Refer to 4-4-4 Wiring CJ-series Basic I/O Units with Connectors.), or use an OMRON Connector-Terminal Block Conversion Unit or I/O Relay Terminal (Refer to 4-4-5 Connecting to Connector-Terminal Block Conversion Units or I/O Relay Terminals.).

CJ-series Special I/O Units

					Number of	Words	Num- ber		nt con- tion (A)	
Туре	Name	Specifications	Model	Unit No.	words allo- cated	allocated in DM Area	of moun table Units	5 VDC	24 VDC	Weight
Special I/O Units	Analog Input Unit with Universal Inputs	4 inputs, fully universal	CJ1W-AD04U	0 to 95	10 words	100 words	40 Units	0.32		150 g max.
	Analog Input Units	8 inputs (4 to 20 mA, 1 to 5 V, etc.)	CJ1W-AD081-V1	0 to 95	10 words	100 words	40 Units	0.42		140 g max.
		4 inputs (4 to 20 mA, 1 to 5 V, etc.)	CJ1W-AD041-V1	0 to 95	10 words	100 words	40 Units	0.42		140 g max.
		4 inputs (4 to 20 mA, 1 to 5 V, etc.)	CJ1W-AD042	0 to 95	10 words	100 words	40 Units	0.52		150 g max.
	Analog Out- put Units	4 outputs (1 to 5 V, 4 to 20 mA, etc.)	CJ1W-DA041	0 to 95	10 words	100 words	40 Units	0.12		150 g max.
		2 outputs (1 to 5 V, 4 to 20 mA, etc.)	CJ1W-DA021	0 to 95	10 words	100 words	40 Units	0.12		150 g max.
		8 outputs (1 to 5 V, 0 to 10 V, etc.)	CJ1W-DA08V	0 to 95	10 words	100 words	40 Units	0.14		150 g max.
		8 outputs (4 to 20 mA)	CJ1W-DA08C	0 to 95	10 words	100 words	40 Units	0.14		150 g max.
		4 outputs (1 to 5 V, 0 to 10 V, etc.)	CJ1W-DA042V	0 to 95	10 words	100 words	40 Units	0.40		150 g max.
	Analog I/O Unit	4 inputs (1 to 5 V, 4 to 20 mA, etc.) 2 outputs (1 to 5 V, 4 to 20 mA, etc.)	CJ1W-MAD42	0 to 95	10 words	100 words	40 Units	0.58		150 g max.
	Analog Input Unit with Universal Inputs	4 inputs, fully universal Resolution: 1/256,000, 1/64,000, 1/16,000	CJ1W-PH41U	0 to 95	10 words	100 words	40 Units	0.30		150 g max.
	Analog Cur- rent Input Unit	DC voltage or DC cur- rent, 2 inputs	CJ1W-PDC15	0 to 95	10 words	100 words	40 Units	0.18		150 g max.
	Temperature Control Units	2 control loops, ther- mocouple inputs, NPN outputs, heater burn- out detection	CJ1W-TC003	0 to 94 (uses words for 2 unit numbers)	20 words	200 words	40 Units	0.25		150 g max.
		2 control loops, ther- mocouple inputs, PNP outputs, heater burn- out detection	CJ1W-TC004	0 to 94 (uses words for 2 unit numbers)	20 words	200 words	40 Units	0.25		150 g max.
		2 control loops, tem- perature-resistance thermometer inputs, NPN outputs, heater burnout detection	CJ1W-TC103	0 to 94 (uses words for 2 unit numbers)	20 words	200 words	40 Units	0.25		150 g max.
		2 control loops, tem- perature-resistance thermometer inputs, PNP outputs, heater burnout detection	CJ1W-TC104	0 to 94 (uses words for 2 unit numbers)	20 words	200 words	40 Units	0.25		150 g max.
	ID Sensor Units	V680-series single- head type	CJ1W-V680C11	0 to 95	10 words	100 words	40 Units	0.26	0.130	120 g max.
		V680-series two-head type	CJ1W-V680C12	0 to 94	20 words	200 words	40 Units	0.32	0.260	130 g max.
	High-speed Counter Unit	Number of counter channels: 2, Maximum input frequency: 500 kHz, line driver compatible	CJ1W-CT021	0 to 92 (uses words for 4 unit numbers)	40 words	400 words	24 Units	0.28		100 g max.

CJ-series CPU Bus Units

Туре	Name	Specifications	Model	Unit No.	Unit No.	Unit No.		Number of words allo-	Maximum number of	Current con- sumption (A)		Weight
					cated	Units*1	5 VDC	24 VDC				
CPU Bus Units	Serial Commu- nications Units	Two RS-232C ports High-speed models	CJ1W-SCU22	0 to F	25 words	16 Units	0.28*1		160 g max.			
	Two RS-422A/485 ports High-speed models One RS-232C port and one RS-422A/485 port High-speed models CJ1W-SCU42			0.40		120 g max.						
		one RS-422A/485 port	CJ1W-SCU42				0.36*1		140 g max.			
	DeviceNet Unit	DeviceNet remote I/O, 2,048 points; User- specified allocations are possible without the CX- Integrator.	CJ1W-DRM21	0 to F	25 words	16 Units	0.29		118 g max.*2			

^{*1} Increases by 0.15 A/Unit when an NT-AL001 RS-232C/RS-422A Link Adapter is used. Increases by 0.04 A/Unit when a CJ1W-CIF11 RS-422A Converter is used.

^{*2} Includes the weight of accessory connectors.

Connecting to the Sysmac Studio 2-2


Connect the NJ-series CPU Unit and the Sysmac Studio through USB or EtherNet/IP.

Refer to 3-7-2 Connection for information on how to make the connection between the NJ-series CPU Unit and the Sysmac Studio.

2-3 Network Configuration

You can make networks in the following layers with an NJ-series Controller.

For details on communications networks that you can connect to, refer to the *NJ-series CPU Unit Software User's Manual* (Cat. No. W501).

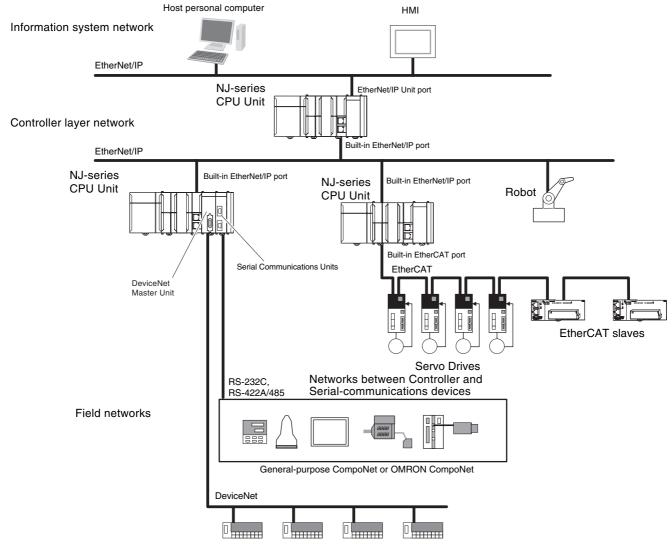

DeviceNet slaves

Level	Features	Network type	Protocols	Required devices
Information net- works	Message (CIP) communications with host computer	EtherNet/IP	CIP message communicationsFTP serverSocket serviceNTP client	Built-in EtherNet/IP port
Networks between Controllers	Tag data links between Control- lers	EtherNet/IP	 Tag data link communications CIP message communications Socket service FINS message communications* 	

Level	Features	Network type	Protocols	Required devices
Networks between Controllers and serial-communica- tions devices	Wide range of protocol selections	Serial Communications	Protocol Macro, No-protocol, CompoWay/F, Modbus, NT Link, and Host Link*	Serial Communications Units
Field networks	High-speed, high- precision communi- cations with Servo Drives and general- purpose slaves	EtherCAT	EtherCAT protocol	Built-in EtherCAT port
	High-speed, multi- point, multi-node connection with dif- ferent types of slaves	DeviceNet	DeviceNet protocol	DeviceNet Master Unit

^{*} With NJ-series Controllers, you can use FINS message communications, Host Link communications, and NT Link communications. These functions, however, cannot access all areas in the NJ-series CPU Unit. If you require this functionality, e.g., to connect to existing systems, consult with your OMRON representative.



Configuration Units

This section describes the configuration devices in the CJ-series Unit configuration.


3-1	CPU U	nits	3-2
	3-1-1	Models and Specifications	3-2
	3-1-2	Components and Functions	3-2
3-2	SD Mei	mory Cards	3-9
	3-2-1	Models and Specifications	3-9
	3-2-2	Purpose	3-9
	3-2-3	Installing and Removing	3-9
3-3	Power	Supply Units	. 3-12
	3-3-1	Models and Specifications	. 3-12
	3-3-2	Components and Functions	. 3-14
	3-3-3	Selecting a Power Supply Unit	. 3-16
3-4	CJ-seri	ies Basic I/O Units	. 3-21
	3-4-1	Models and Specifications	. 3-21
	3-4-2	Part Names and Functions	. 3-22
3-5	B7A In	terface Ports	. 3-25
	3-5-1	Overview	. 3-25
	3-5-2	System Configuration	. 3-25
	3-5-3	Models	. 3-25
	3-5-4	B7A Communications Specifications	. 3-26
	3-5-5	Common Specifications	. 3-27
	3-5-6	B7A Interface Port I/O Types	. 3-27
	3-5-7	Parts and Names	. 3-28
	3-5-8	Transmission Error Processing	. 3-30
3-6	CJ-seri	ies I/O Control Units and I/O Interface Units	. 3-31
	3-6-1	Models and Specifications	. 3-31
	3-6-2	Component and Functions	. 3-31
3-7	Sysma	c Studio	. 3-32
	3-7-1	Model Numbers	. 3-32
	3-7-2	Connection	. 3-33

CPU Units 3-1

Models and Specifications 3-1-1


Type of Unit	Model	I/O capacity/Maximum number of Configuration Units (Maximum number of Expansion Racks)	Program capacity	Memory capacity for variables	Number of motion axes
NJ501	NJ501-1300	2,560 points/40 Units (3 Expan-	20 MB	2 MB: Retained during	16
CPU Units	NJ501-1400	sion Racks)	power interruption		32
	NJ501-1500			4 MB: Not retained during power interruptions	64

Components and Functions 3-1-2

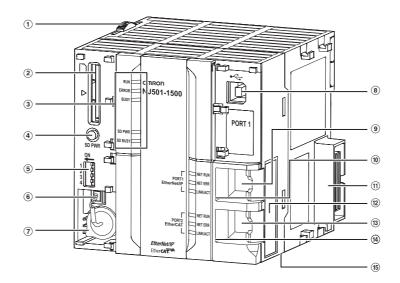


Number	Name	Function
1	Slider	Holds the Units together.
2	SD Memory Card connector	Connects the SD Memory Card to the CPU Unit.
3	CPU Unit operation indicators	Shows the operation status of the CPU Unit. Refer to CPU Unit Operation Status Indicators on page 3-4.
4	SD Memory Card power supply switch	Turns OFF the power supply so that you can remove the SD Memory Card. Refer to 3-2 SD Memory Cards.
5	DIP switch	Not used (normally OFF).*
6	Battery connector	Connector to mount the backup battery.
7	Battery	Battery for backup.
8	Peripheral USB port	Connects to the Sysmac Studio via a USB cable.
9	Built-in EtherNet/IP port (port 1)	Connects the built-in EtherNet/IP with an Ethernet cable.
10	Built-in EtherNet/IP port operation indicators	Shows the operation status of the built-in EtherNet/IP. Refer to Built-in EtherNet/IP Port (Port 1) Indicators on page 3-6.
11	Unit connector	Connects to another Unit.
12	ID information label	Shows the ID information of the CPU Unit.
13	Built-in EtherCAT port (port 2)	Connects the built-in EtherCAT with an Ethernet cable.
14	Built-in EtherCAT port operation indicators	Shows the operation status of the built-in EtherCAT. Refer to Built-in EtherCAT Port (Port 2) Indicators on page 3-7.
15	DIN Track mounting pins	Secures the Unit to a DIN Track.

^{*} To use Safe Mode, set the DIP switch as shown below and then turn ON the power supply to the Controller.

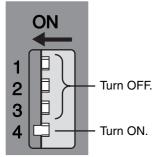

Use the Safe Mode when it is difficult to connect the Sysmac Studio. For information on Safe Mode, refer to the *NJ-series Troubleshooting Manual* (Cat. No. W503).

CPU Unit Operation Status Indicators

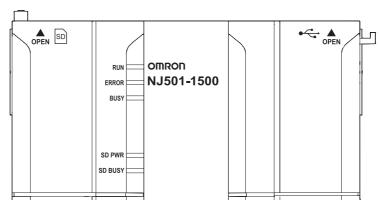

You can check the CPU Unit status with the indicators at the top of the front panel of the CPU Unit. The following table describes these indicators.

Indicator	Color	Status	Meaning
RUN	Green	Lit	The CPU Unit is in normal operation in RUN mode. (The user program is in execution.)
		Flashing (3-s intervals)	An Incorrect Power Supply Unit Connected error occurred. (A CJ-series Power Supply Unit is connected in the CPU Rack.) The CPU Unit will not operate and the ERROR indicator will light.
		Flashing (1-s intervals)	The CPU Unit is starting (entering RUN mode or PROGRAM mode at startup).
		Not lit	Operation is stopped in PROGRAM mode, when a CPU Unit reset is in progress, or when any of the following errors occurs.
			Controller error in the major fault levelCPU error (WDT error)
ERROR	Red Lit		Self-diagnosis found one of the following errors.
			Controller error in the major fault level
			CPU error (WDT error)
	Flashing (1-s intervals) Self-diagnosis found one of the following entervals Controller error in the partial fault level (a control of a Function Module is disabled control of a Function Module is disabled control of a Function Module is disabled CPU Unit operation will continue for either Operation will stop for the Function Module error in the partial fault level occurred. Operation will continue for the Function Module error in the minor fault level occurred. Not lit The CPU Unit is in normal operation, a CF	The CPU Unit operation will stop, and all outputs will turn OFF.	
		• .	Self-diagnosis found one of the following errors.
			Controller error in the partial fault level (an error in which all control of a Function Module is disabled)
			Controller error in the minor fault level (an error in which partial control of a Function Module is disabled)
			CPU Unit operation will continue for either of these errors.
			Operation will stop for the Function Module in which a Controller error in the partial fault level occurred.
			Operation will continue for the Function Module in which a Controller error in the minor fault level occurred.
		Not lit	The CPU Unit is in normal operation, a CPU reset is in progress, or monitored information occurred. (CPU Unit operation will continue.)
BUSY	Yellow	Flashing	Built-in non-volatile memory access in progress.
		Not lit	Other than the above.

Indicator	Color	Status	Meaning
SD PWR	Green	Lit Power is being supplied to the SD Memory Card and the S Memory Card can be used.	
		Flashing	
		Not lit	The power supply for the SD Memory Card is stopped, an SD Memory Card is not mounted, or the file format of the mounted SD Memory Card is not supported.
SD BUSY	Yellow	Lit SD Memory Card access in progress.	
		Not lit	SD Memory Card access not in progress



Precautions for Safe Use

- Do not turn OFF the power supply to the Controller while the BUSY indicator flashes. The CPU
 Unit user program and settings are backed up in the built-in non-volatile memory. The data will
 not be backed up if the power supply is turned OFF. The next time that the Controller is
 started, a Controller error in the major fault level will occur and operation will stop.
- Do not turn OFF the power supply or remove the SD Memory Card while card access is in process (i.e., while the SD BUSY indicator flashes). Data may become corrupted, and the Controller may not operate correctly if it uses corrupted data. To remove an SD Memory Card from the CPU Unit when power is supplied to the CPU Unit, press the SD Memory Card power supply switch and wait for the SD PWR indicator to turn OFF before you remove the SC Memory Card.

You can check the operating status of the CPU Unit with the PWR, RUN, and ERROR indicators on the front panels of the Power Supply Unit and CPU Unit. You can check the operating status of the CPU Unit from the status of front-panel indicators, the status of user program execution, and the ability to connect communications from the Sysmac Studio or NS-series PTs during startup, during normal operation, and when errors occur.


CPU Unit operating status		Power Supply Unit	СРИ	CPU Unit		Communications with Sysmac Stu- dio or NS-series
			RUN (green)	ERROR (red)	tion status	PT PT
Startup	Startup		Flashing (1-s intervals)	Not lit	Stopped.	Not possible.
Normal opera-	RUN mode	Lit	Lit	Not lit	Continues.	Possible.
tion	PROGRAM mode	Lit	Not lit	Not lit	Stopped.	
	Power Supply Error*1	Not lit	Not lit	Not lit	Stopped.	Not possible.
	CPU Unit Reset*1	Lit	Not lit	Not lit	Stopped.	
Fatal error in CPU Unit	Incorrect Power Supply Unit Con- nected*1	Lit	Flashing (3-s intervals)	Lit	Stopped.	
	CPU Unit Watch- dog Timer Error*1	Lit	Not lit	Lit	Stopped.	
	Major fault*2	Lit	Not lit	Lit	Stopped.	Possible. (Commu-
Non-fatal error	Partial fault*2	Lit	Lit	Flashing (1-s intervals)	Continues.*3	nications can be connected from an NS-series PT if Eth-
in CPU Unit	Minor fault*2	Lit	Lit	Flashing (1-s intervals)	Continues.	erNet/IP is operat- ing normally.)
	Observation*2	Lit	Lit	Not lit	Continues.	

^{*1} Refer to 5-1-2 Fatal Errors in the CPU Unit for information on individual errors.

- *2 Refer to 5-1-3 Non-fatal error in CPU Unit for information on individual errors.
- *3 The function module where the error occurred stops.


Refer to 5-1 Operation after an Error for information on error status.

Built-in EtherNet/IP Port (Port 1) Indicators

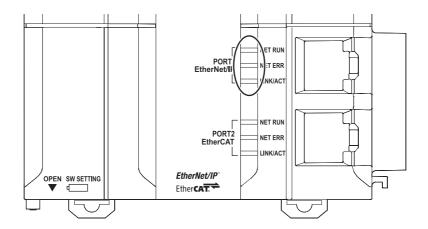

Indicator	Color	Status	Contents
NET RUN	Green	Lit	Normal startup status.
		Flashing	Ethernet communications are in progress.
			Tag data link connection establishment in progress.
			IP address acquisition with BOOTP in progress.
		Not lit	You cannot perform Ethernet communications.
			The power supply is OFF or the CPU Unit was reset.
			A MAC address error or communications Controller error occurred.
NET ERR	Red	Lit	An error for which the user cannot recover operation occurred.
			A MAC address error or communications Controller error occurred.
		Flashing An error for which the user can recover operation occurr	
		An error occurred in TCP/IP communications or CIP cations.	
			FTP server setting error, NTP server setting error, etc.
			Tag data link setting error, tag data link verification error, etc.
		Not lit	There are no Ethernet communications errors.
			The power supply is OFF or the CPU Unit was reset.
LINK/ACT	Yellow	Lit The link was established.	
		Flashing	The link is established, and data communications are in progress.
		Not lit	A link was not established.
			The cable is not connected.
			The power supply is OFF or the CPU Unit was reset.

Built-in EtherCAT Port (Port 2) Indicators

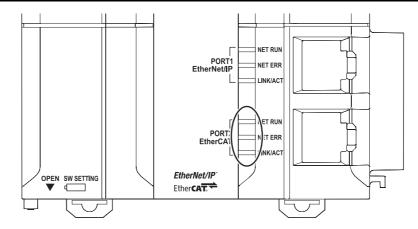

Indicator	Color	Status	Description
NET RUN	Green	Lit	EtherCAT communications are in progress.
			Inputs and outputs for I/O data are in operation.
		Flashing	EtherCAT communications are being established.
			This indicator shows either of the following conditions.
			Only message communications are in operation.
			Only message communications and I/O data inputs are in operation.
		Not lit	EtherCAT communications are stopped.
			The power supply is OFF or the CPU Unit was reset.
			A MAC address error, communications Controller error, or other error occurred.
NET ERR	Red	Lit A hardware error or unrecoverable error occurred, such as for exception processing.	
		Flashing	A recoverable error occurred.
		Not lit	There are no errors.
LINK/ACT Yellow Lit A link was established.		Lit	A link was established.
		Flashing	Data communications are in progress after establishing link.
			Flashes every time data is sent or received.
		Not lit	The link was not established.

DIP Switch

Use the CPU Unit with all the DIP switch pins turned OFF.



Additional Information

The DIP switch is not used to write-protect the user program of the NJ-series Controller. Set write-protection in the Startup Write Protection Settings in the CPU Unit Protection Settings from the Sysmac Studio.


Battery

The following Battery is built in as a standard feature.

Model	Appearance	Specifications
CJ1W-BAT01		Effective life (i.e., maximum life expectancy): 5 years The following values are retained during power interruptions. • Values of variables with a Retain attribute • Words for CJ-series Units in the Holding, DM, and EM Areas • Clock information • Some system-defined variables • Event logs

ID Information Label

You can check the ID information of the CPU Unit status with the ID information label on the right side of the CPU Unit.

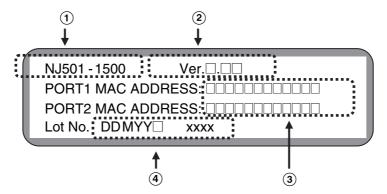

Number	Name	Function
1	Unit model	Shows the model of the CPU Unit.
2	Unit version	Shows the unit version of the CPU Unit.
3	Lot number and serial number	Shows the lot number and the serial number of the CPU Unit. DDMYY: Lot number, : For use by OMRON, xxxx: Serial number M is 1 to 9 for January to September, X for October, Y for November, and Z for December.
4	MAC addresses	Shows the MAC addresses of the built-in ports on the CPU Unit.

3-2 SD Memory Cards

3-2-1 Models and Specifications

SD Memory Cards and SDHC Memory Cards are supported, but use the following OMRON SD Memory Card. OMRON is not responsible for the operation, performance, or write life of any other memory card.

Model	Card type	Capacity	Format	Number of overwrites	Weight
HMC-SD291	SD Card	2 GB	FAT16	100,000	2 g max.



Additional Information

Write Protection Key

You will not be able to write to the SD Memory Card if the key is set to the LOCK position. (Use this setting to prevent overwriting.)



3-2-2 Purpose

You can use the SD Memory Card for the following applications.

- Read and write files in the SD Memory Card with instructions.
- · Read and write files in the SD Memory Card from an FTP client on EtherNet/IP.

3-2-3 Installing and Removing


Before Using an SD Memory Card

- Observe the following precautions while the SD Memory Card is being accessed. The SD Memory Card may become unusable if these precautions are not followed.
 - Make sure that the SD BUSY indicator is OFF (i.e., the SD Memory Card is not being accessed) before you turn OFF the power supply to the Controller. The SD BUSY indicator is lit when the SD Memory Card is accessed from user the programming or from a computer through FTP.
 - Never remove the SD Memory Card while the CPU is accessing the SD Memory Card. Press the SD Memory Card power supply switch and wait for the SD BUSY indicator to go OFF before removing the SD Memory Card.
- Never insert the SD Memory Card facing the wrong way. If the SD Memory Card is inserted forcibly, it may become unusable.
- To format the SD Memory Card (e.g., to delete all of the data), insert the SD Memory Card in the CPU Unit and perform the operation from the Sysmac Studio.


- · The SD Memory Card uses flash memory, and so its service life is limited. When the end of the SD Memory Card's service life approaches, the ability to write data is lost, and data is sometimes not retained after writing. The service life depends on the size of the data that is written and on the ambient temperature. For the unlikely event that data is lost, it is recommended to periodically back up data.
- The service life may be extremely short if a non-OMRON SD Memory Card is used. Also, operation may be affected due to deterioration in writing performance.
- · If you use an OMRON SD Memory Card, the end of the life of the SD Memory Card can be detected in the following ways. Use the Card1Deteriorated (SD Memory Card Life Warning Flag) systemdefined variable or an SD Memory Card Life Exceeded event in the event log.

Installing the SD Memory Card


1 Pull the left side of the SD Memory Card cover forward and remove from the Unit.

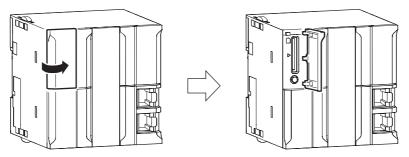

Insert the SD Memory Card with the label facing to the left. (Insert the SD Memory Card with the label facing the triangle on the CPU Unit.)

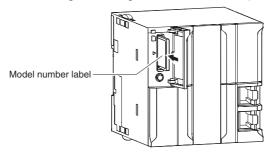


Push the SD Memory Card securely into the compartment.

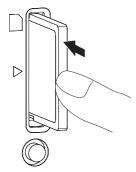


Removing the SD Memory Card


1 Press the SD Memory Card power supply switch (SD PWR).

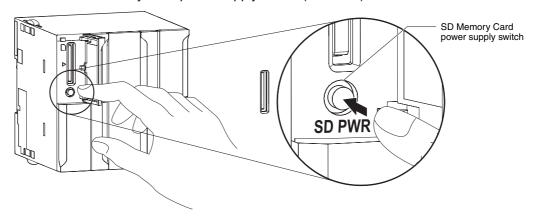

2 Press the SD Memory Card after the SD BUSY indicator is no longer lit. The SD Memory Card will be ejected from the compartment.

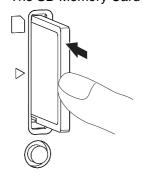

- **3** Pull out the SD Memory Card.
- 4 Close the Memory Card cover when an SD Memory Card is not being used.

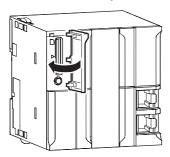

Power Supply Units

Models and Specifications 3-3-1

NJ-series Power Supply Units

Use an NJ-series Power Supply Unit to supply power to an NJ-series CPU Rack or Expansion Rack.



Precautions for Correct Use

- Do not use the Power Supply Units in the system beyond the rated supply capacity range given in the following specifications. Doing so may result in operation stopping, incorrect operation, or failure to correctly back up required data at power interruptions.
- Use only NJ-series Power Supply Units on NJ-series CPU Racks and Expansion Racks. Operation is not possible if you use a CJ-series Power Supply Unit with an NJ-series CPU Unit or an NJ-series Power Supply Unit with a CJ-series CPU Unit.


Item	Specifications		
Power Supply Unit	NJ-PA3001	NJ-PD3001	
Supply voltage	100 to 240 VAC (wide-range), 50/60 Hz	24 VDC	
Operating voltage and frequency ranges	85 to 264 VAC, 47 to 63 Hz	19.2 to 28.8 VDC	
Power consumption	120 VA max.	60 W max.	
Inrush current*1	At 100 VAC: 20 A/8 ms max. for cold start at room temperature At 200 VAC: 40 A/8 ms max. for cold start at room temperature	At 24 VDC: 30 A/20 ms max. for cold start at room tempera- ture	
Output capacity*2	5 VDC, 6.0 A (including supply to CPU Unit using 5 VDC, 6.0 A (using Expansion Rack) 24 VDC, 1.0 A Total: 30 W max.	CPU Rack)	
Output terminal (service supply)	Not provided		
RUN output*3	Contact configuration: SPST-NO		
	Switch capacity: 250 VAC, 2 A (resistive load)		
	120 VAC, 0.5 A (inductive load), 24 VDC, 2A (resi	istive load)	
Replacement notification function	Not provided.		
Insulation resistance*4	$20\ \text{M}\Omega$ min. (at 500 VDC) between AC external and GR terminals	20 $\mbox{M}\mbox{\Omega}$ min. (at 500 VDC) between DC external and GR terminals	
Dielectric	2,300 VAC 50/60 Hz for 1 min between AC exter-	1,000 VAC 50/60 Hz for 1 min between DC	
strength*4*5	nal and GR terminals	external and GR terminals	
	Leakage current: 10 mA max.	Leakage current: 10 mA max.	
Noise immunity	2 kV on power supply line (Conforms to IEC6100)	0-4-4.)	

Item	Specifications
Vibration resistance	5 to 8.4 Hz, 3.5-mm amplitude, 8.4 to 150 Hz, acceleration: 9.8 m/s ² in X, Y, and Z directions for 100 minutes (Time coefficient: 10 minutes × coefficient factor 10 = total time 100 min.) (according to JIS C60068-2-6)
Shock resistance	147 m/s ² 3 times each in X, Y, and Z directions (Relay Output Unit: 100 m/s ²) (according to JIS C60068-2-27)
Ambient operating temperature	0 to 55°C
Ambient operating humidity	10% to 90% (with no condensation)
Atmosphere	Must be free from corrosive gases.
Ambient storage temperature	−20 to 75°C


- *1 The AC and DC values above are given for a cold start, and the AC values are at room temperature. The AC inrush control circuit uses a thermistor element with a low-temperature current control characteristic. If the ambient temperature is high or the Controller is hot-started, the thermistor will not be sufficiently cool, and the inrush current given in the table may be exceeded by up to twice the given value. The DC inrush control circuit uses a capacitor-charging delay circuit. If the power is OFF for only a short time for a hot-start, the capacitor will not sufficiently discharge and the inrush current given in the table may be exceeded by up to twice the given value. An inrush current of approximately 4 A may occur and continue for 1 s when the power is turned ON. When selecting fuses, breakers, and external DC power supply devices for external circuits, allow sufficient margin in shut-off performance.
- *2 Internal components in the Power Supply Unit will deteriorate or be damaged if the Power Supply Unit is used for an extended period of time exceeding the power supply output capacity or if the outputs are shorted.
- *3 Supported only when mounted to CPU Rack.
- *4 The tests can also be performed with the LG terminal and GR terminal connected to each other.
- *5 Change the applied voltage gradually using the adjuster on the Tester. If the full dielectric strength voltage is applied or turned OFF using the switch on the Tester, the generated impulse voltage may damage the Power Supply Unit.

Components and Functions 3-3-2

NJ-PA3001

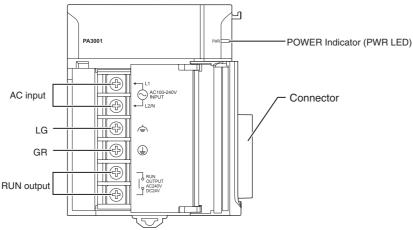

NJ-PD3001

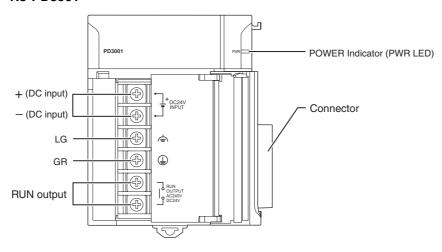

AC Input

Supply 100 to 240 VAC (allowable: 85 to 264 VAC).

The NJ-PA3001 has a wide input range, so it does not have voltage switching terminals.

DC Input

Supply 24 VDC (allowable: 19.2 to 28.8 VDC.)

LG

Ground to a resistance of 100 Ω or less to increase noise resistance and avoid electric shock.

GR

Ground to a resistance of 100 Ω or less to avoid electric shock.

RUN Output (NJ-PA3001/-PD3001)

The internal contacts for the RUN output turn ON when the CPU Unit is in RUN status.

The following operation occurs.

Status	Operation
In operation (RUN mode).	ON
The CPU Unit is starting (until entering the operating status that is specified in the Startup Mode setting).	OFF
Operation stopped (PROGRAM mode).	
Controller error in the major fault level occurred.	

The Power Supply Unit must be on the CPU Rack to use this output.

3-3-3 Selecting a Power Supply Unit

First select the Power Supply Unit according to whether it can be used on the CPU Rack, the power supply voltage, and the need for a RUN output. Then check the following table to make sure that the current consumption and power consumption requirements of each Rack are met.

		Output current				Replacement			
Model	Power supply voltage	5-VDC CPU Rack*	5-VDC Expansion Rack	24 VDC	Output capacity	RUN output	notification function	CPU Rack	Expansion Racks
NJ-PA3001	100 to 240 VAC	6.0 A	6.0 A	1.0 A	30 W	Yes	No	Yes	Yes
NJ-PD3001	24 VDC	6.0 A	6.0 A	1.0 A	30 W	Yes	No	Yes	Yes

^{*} Including supply to the CPU Unit.

Refer to CPU Rack on page 2-5, Expansion Racks on page 2-9, and CJ-series Configuration Units on page 2-11 for Unit current consumptions. Refer to Rack Current Consumption and Width Display on page 3-18 for the procedure to check the current and power consumptions for each Rack from the Sysmac Studio.

Calculating Unit Current Consumption

The amount of current/power that can be supplied to the Units mounted in a Rack is limited by the capacity of the Rack's Power Supply Unit. Refer to the following tables when designing your system so that the total current consumption of the mounted Units does not exceed the maximum current for each voltage group and the total power consumption does not exceed the maximum power supplied by the Power Supply Unit.

Refer to CPU Rack on page 2-5, Expansion Racks on page 2-9, and CJ-series Configuration Units on page 2-11 for the current consumptions of the Units to use in the Unit current consumption calculations.

Maximum Current and Power Supplied by Power Supply Units

The following table shows the maximum currents and power that can be supplied by Power Supply Units in CPU Racks and Expansion Racks.

- Note 1 When calculating current/power consumption in a CPU Rack, be sure to include the power required by the CPU Unit itself, as well as the I/O Control Unit if one or more Expansion Racks is connected.
 - 2 Be sure to include the power required by the I/O Interface Unit when calculating current/power consumption in an Expansion Rack.

		Output		
Model	5-VDC CPU Rack*	5-VDC Expan- sion Rack	24 VDC	Output capacity
NJ-PA3001	6.0 A	6.0 A	1.0 A	30 W
NJ-PD3001	6.0 A	6.0 A	1.0 A	30 W

^{*} Including supply to the CPU Unit.

Example Calculations

Example 1: In this example, the following Units are mounted to a CPU Rack with an NJ-PA3001 Power Supply Unit.

Unit	Model	Quantity	Voltage group		
Offic	Wiodei	Quantity	5-V	24-V	
CPU Unit	NJ501-1500	1 unit	1.90 A		
I/O Control Unit	CJ1W-IC101	1 unit	0.02 A		

Unit	Unit Model		Voltage group		
Offic	Wodei	Quantity	5-V	24-V	
Input Units	CJ1W-ID211	2 units	0.08 A		
	CJ1W-ID231	2 units	0.09 A		
Output Unit	CJ1W-OC201	2	0.09 A	0.048 A	
Special I/O Unit	CJ1W-DA041	1	0.12 A		
CPU Bus Unit	CJ1W-SCU22	1	0.28 A		
Current consumption	Calculation		1.9 A + 0.02 A + 0.08 A × 2 + 0.09 A × 2 + 0.09 A × 2 + 0.12 A + 0.28 A	0.048 A × 2	
	Result		2.84 A (≤6.0 A)	0.096 A (≤1.0 A)	
Power consump-	Calculation		2.84 A × 5 V = 14.2 W	0.096 A × 24 V = 2.3 W	
tion	Result		14.2 W + 2.30 W = 16.5 W (≤30 W)		

Example 2: In this example, the following Units are mounted to a CJ-series Expansion Rack with an NJ-PA3001 Power Supply Unit.

Unit	Model Quantit		Voltage group		
Offic	Wiodei	Quantity	5-V	24-V	
I/O Interface Unit	CJ1W-II101	1	0.13 A		
Input Unit	CJ1W-ID211	2	0.08 A		
Output Unit	CJ1W-OD231	8	0.14 A		
Current consumption	Calculation		0.13 A + 0.08 A × 2 + 0.14 A × 8		
	Result		1.41 A (≤6.0 A)		
Power consump-	Calculation		1.41 A × 5 V = 7.1 W		
tion	Result		7.1 W (≤30 W)		




Additional Information


Rack Current Consumption and Width Display

The width, current consumption, and power consumption for each Rack are displayed on the right side of the CPU/Expansion Racks Tab Page in the Controller Configurations and Setup of the Sysmac Studio.

Click to display the information for the Rack.

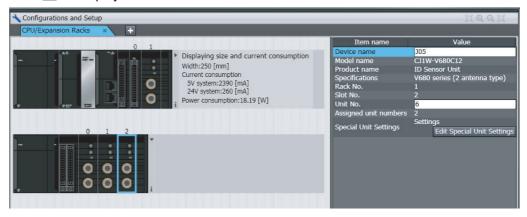

If the capacity of a Power Supply Unit is exceeded, the display will turn red.

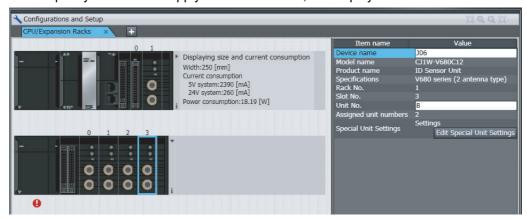

Calculating Power Consumption

The ambient operating temperature at the control panel where an NJ-series Controller is mounted must be no higher than 55°C.

This section describes how to calculate the power consumption of a CPU Rack or Expansion Rack for use in the thermal design of the control panel.

Calculating Power Consumption

Use the following equation to calculate the average power consumption (W) of an NJ-series CPU Rack.

```
W = W_Gross + W_IO_ONOFF

Basic I/O Unit power consumption
(Power supplied to Basic I/O Units from Units other than the Power Supply Unit.)

Total power consumption of the Controller
(Power supplied to the Controller from the Power Supply Unit and loss in Power Supply Unit.)
```

Total Power Consumption of the Controller (W_Gross)

The Controller power consumption is calculated based on the total power consumption of the Units that are mounted in the CPU Unit and the power conversion rate of the Power Supply Unit.

W Gross = W unit $\div \eta$

• W unit:

Total power consumption of Units mounted to the CPU Rack. For details on the current consumption and voltage of individual Units, refer to *CJ-series Configuration Units* on page 2-11.

• η:

Power Supply Unit power conversion rate.

The rate is 70% for the NJ Series, so use "0.7" in the calculation.

Basic I/O Unit Power Consumption (W_IO_ONOFF)

The Basic I/O Unit power consumption is the total consumption for the Input Units and the Output Units.

Input Units

Rated input voltage × Input current × Number of input points


Output Units

Residual voltage \times Maximum load current \times Number of output points

Note For a CJ-series Basic I/O Unit, use a residual voltage of 0.1 V in the calculation.

Calculation Examples

These examples show how to calculate the power consumption (W) for the following system.

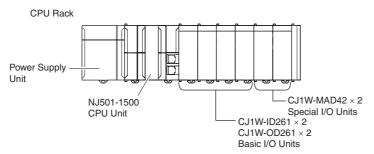

Units	Model	Quantity	5 VDC	Other
CPU Unit	NJ501-1500	1 Unit	1.90 A	
Input Units	CJ1W-ID261	2 Units	0.09 A	Rated input voltage: 24 V
				Input current: 4.1 mA
				Number of input points: 64
Output Unit	CJ1W-OD261	2 Units	0.17 A	Residual voltage: 0.1 V
				Maximum load current: 6.4 A/Unit
Special I/O Units	CJ1W-MAD42	2 Units	0.58 A	

^{*} The maximum load current of an Output Unit is the limit for the entire Unit.

Total Power Consumption of the Controller (W_Gross)

$$W_Gross = (1.9 + 0.09 \times 2 + 0.17 \times 2 + 0.58 \times 2) A \times 5 V \div 0.7 = 25.6 W$$

Basic I/O Unit Power Consumption (W_IO_ONOFF)

W_IO_ONOFF = 24 V \times 0.0041 A \times 64 points \times 2 Units + 0.1 V \times 6.4 A \times 2 Units = 13.9 W

Average Power Consumption (W)

3-4 CJ-series Basic I/O Units

3-4-1 Models and Specifications

Basic Input Units

Type of Unit	Name	Specifications		Model	Page
Basic Input	DC Input Units	Terminal block, 12 to 24 VDC	8 inputs	CJ1W-ID201*	A-6
Units		Terminal block, 24 VDC	16 inputs	CJ1W-ID211	A-7
				CJ1W-ID212	A-8
		Fujitsu connector, 24 VDC	32 inputs	CJ1W-ID231	A-9
		MIL connector, 24 VDC	32 inputs	CJ1W-ID232	A-10
				CJ1W-ID233	A-11
		Fujitsu connector, 24 VDC	64 inputs	CJ1W-ID261	A-12
		MIL connector, 24 VDC	64 inputs	CJ1W-ID262	A-14
	AC Input Units	Terminal block, 200 to 240 VAC	8 inputs	CJ1W-IA201*	A-16
		Terminal block, 100 to 120 VAC	16 inputs	CJ1W-IA111	A-17
	Interrupt Input Unit	Terminal block, 24 VDC	16 inputs	CJ1W-INT01	A-18
	Quick-response Input Unit	Terminal block, 24 VDC	16 inputs	CJ1W-IDP01	A-19

^{*} Although 16 I/O bits (1 word) are allocated, only 8 of these can be used for external I/O. These Units are also treated as 16-point I/O Units in the Unit configuration.

Basic Output Units

Type of Unit	Name		Specifications		Model	Page
Basic Out- put Units	Relay Output Units		Terminal block, 250 VAC/24 VDC, 2 A, 8 independent contacts	8 outputs	CJ1W-OC201*	A-20
			Terminal block, 250 VAC/24 VDC, 2 A	16 outputs	CJ1W-OC211	A-21
	Triac Outp	out Unit	Terminal block, 250 VAC/24 VDC, 0.6 A	8 outputs	CJ1W-OA201*	A-22
	Transis-	Sinking	Terminal block, 12 to 24 VDC, 2 A	8 outputs	CJ1W-OD201*	A-23
	tor Out- put Units	outputs	Terminal block, 12 to 24 VDC, 0.5 A	8 outputs	CJ1W-OD203*	A-24
			Terminal block, 12 to 24 VDC, 0.5 A	16 outputs	CJ1W-OD211	A-25
			Terminal block, 24 VDC, 0.5 A	16 outputs	CJ1W-OD213	A-26
		Sourcing outputs	Fujitsu connector, 12 to 24 VDC, 0.5 A	32 outputs	CJ1W-OD231	A-27
			MIL connector, 12 to 24 VDC, 0.5 A	32 outputs	CJ1W-OD233	A-28
			MIL connector, 24 VDC, 0.5 A	32 outputs	CJ1W-OD234	A-29
			Fujitsu connector, 12 to 24 VDC, 0.3 A	64 outputs	CJ1W-OD261	A-31
			MIL connector, 12 to 24 VDC, 0.3 A	64 outputs	CJ1W-OD263	A-33
			Terminal block, 24 VDC, 2 A, load short-circuit protection, line disconnection detection	8 outputs	CJ1W-OD202*	A-35
			Terminal block, 24 VDC, 0.5 A, load short-circuit protection	8 outputs	CJ1W-OD204*	A-37
			Terminal block, 24 VDC, 0.5 A, load short-circuit protection	16 outputs	CJ1W-OD212	A-38
			MIL connector, 24 VDC, 0.5 A, load short-circuit protection	32 outputs	CJ1W-OD232	A-39
			MIL connector, 12 to 24 VDC, 0.3 A	64 outputs	CJ1W-OD262	A-40


^{*} Although 16 I/O bits (1 word) are allocated, only 8 of these can be used for external I/O. These Units are also treated as 16-point I/O Units in the Unit configuration.

Basic Mixed I/O Units

Type of Unit	Name		Specifications Model			Page	
Mixed I/O	24-VDC	Sinking	Fujitsu connector	16 inputs	CJ1W-MD231	A-42	
Units	1 .	output	Inputs: 24 VDC	16 outputs			
	tor Output Units		Outputs: 12 to 24 VDC, 0.5 A				
			MIL connector		CJ1W-MD233	A-44	
			Inputs: 24 VDC				
			Outputs: 12 to 24 VDC, 0.5 A				
			Fujitsu connector	32 inputs	CJ1W-MD261	A-45	
			Inputs: 24 VDC	32 outputs			
			Outputs: 12 to 24 VDC, 0.3 A				
			MIL connector		CJ1W-MD263	A-47	
			Inputs: 24 VDC				
			Outputs: 12 to 24 VDC, 0.3 A				
		Sourcing	MIL connector	16 inputs	CJ1W-MD232	A-49	
		output	Input: 24 VDC	16 outputs			
			Outputs: 24 VDC, 0.5 A, load short-circuit protection				
	TTL I/O Units	•	Inputs: 5 VDC	32 inputs	CJ1W-MD563	A-51	
			Outputs: 5 VDC, 35 mA	32 outputs			
	Precautions for Contact Output Units						
	Load short-circuit protection and line disconnection detection for CJ1W-OD202						
	Load short-circui	t protection f	or CJ1W-OD204/OD212/OD232/MD232			A-102	


3-4-2 **Part Names and Functions**

• Eight/sixteen-point Units (18-pin Terminal Blocks)

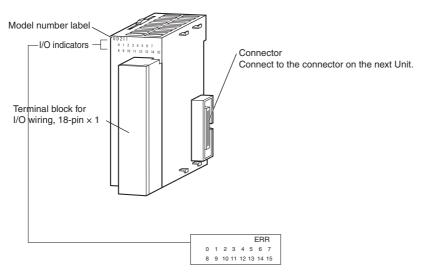


Note The CJ1W-OD202, CJ1W-OD204, and CJ1W-OD212 also have an ERR indicator for the load short-circuit alarm.

● Thirty-two-point Units with 40-pin Fujitsu Connector or MIL Connector

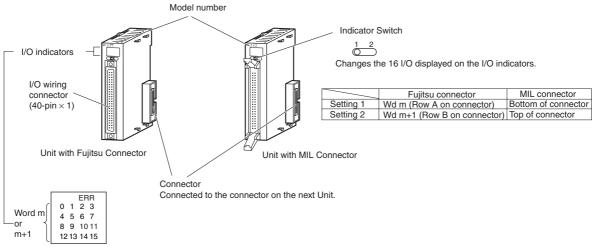


Note: Only the CJ1W-OD232 has an ERR indicator for the load short-circuit alarm.

Thirty-two-point Units with 2 × 24-pin Fujitsu Connectors or 2 × 20-pin MIL Connectors

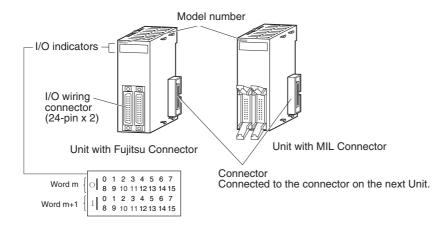


• Sixty-four-point Units with Two 40-pin Fujitsu Connectors or MIL Connectors

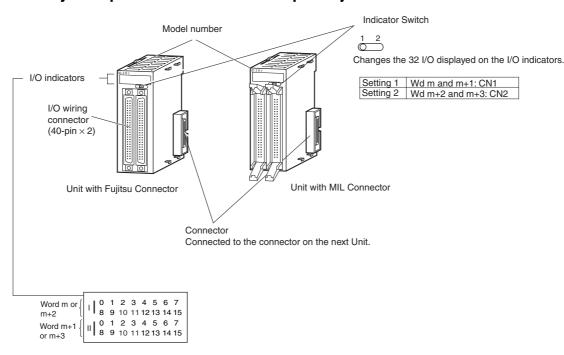

Quick-response Inputs

When you want to receive pulses that are shorter than the task period, use the CJ1W-IDP01 Quickresponse Input Unit.

The quick-response inputs can receive pulses with a pulse width (ON time) of 0.05 ms for the CJ1W-IDP01 Quick-response Input Unit.

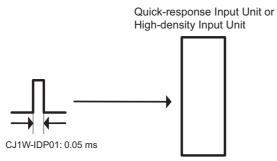

Inputs that are input to internal memory are cleared when the inputs are refreshed.


3-5 B7A Interface Ports

3-5-1 Overview

The B7A is a 1:1 transmission path that does not require a master. A total of 16 signals are transmitted using a two-conductor or three-conductor VCTF cable (maximum length: 500 m). The CJ1W-B7A B7A Interface Unit is a CJ-series Basic I/O Unit that exchanges up to 64 points of I/O data mainly with B7A Link Terminals using a B7A transmission path.

The B7A Interface Unit and B7A Link Terminal can be used in the same way as a standard Basic I/O Unit and I/O Terminal without any need to worry about communications. This characteristic reduces the wiring when using more than one relatively remote sensor or actuator.

3-5-2 System Configuration

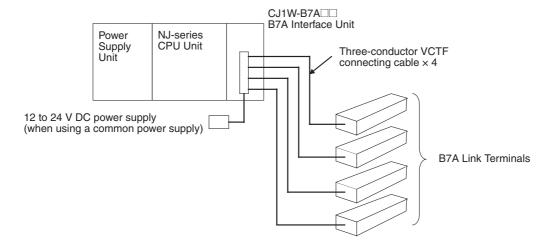

3-5-3 Models

B7A Interface Unit	Specifications	I/O words allo- cated to Unit	Connectable B7A Link Terminals*
CJ1W-B7A14	64 inputs (four B7A ports)	4 input words	Inputs: Four 16-point Input Terminals, two 32-point Input Terminals, or two 16-point Input Terminals and one 32-point Input Terminal
CJ1W-B7A04	64 outputs (four B7A ports)	4 output words	Outputs: Four 16-point Output Terminals or two 32-point Output Terminals
CJ1W-B7A22	32 inputs, 32 outputs (four B7A ports)	2 input words and 2 output words	Inputs: Two 16-point Input Terminals or one 32-point Input Terminal Outputs: Two 16-point Output Terminals or one 32-point Output Terminal or Two Mixed I/O Terminals (16 inputs/16 outputs)

^{*} A 10-point B7A Link Terminal cannot be connected to a B7A Interface Unit. B7A Interface Units can be connected together.



Additional Information

Wireless transmissions are possible if B7AP Power Couplers are used on a B7A transmission path, reducing the wiring required for moving objects and rotating objects.

B7A Communications Specifications 3-5-4

Item		Spe	Specifications				
Transmission method	One-way time-s	sharing multiplex transmissions					
Transmission delay	High-speed	3 ms typical, 5 ms max.	B ms typical, 5 ms max.				
(communications delay on transmission path)	Standard	19.2 ms typical, 31 ms max.	19.2 ms typical, 31 ms max.				
	CJ1W-B7A14	64 inputs (4 ports)					
Transmission points	CJ1W-B7A04	64 outputs (4 ports)					
	CJ1W-B7A22	32 inputs (2 ports), 32 outputs	s (2 ports)				
External power supply voltage*1	12 to 24 V DC (allowable voltage range: 10.8 to 26.4 V)					
External supply	CJ1W-B7A14	40 mA min.					
current*2	CJ1W-B7A04	150 mA min.					
Current	CJ1W-B7A22	80 mA min.					
Minimum input	High-speed	16 ms					
time*3	Standard	2.4 ms					
	High-speed	Power supply on one side	10 m max.				
		(common power supply)*4	50 m max. (with shielded cable)				
		Power supply on both sides	10 m max.				
Transmission		(separate power supplies)*5	100 m max. (with shielded cable)				
distance	Standard	Power supply on one side (common power supply)*4	100 m max.				
		Power supply on both sides (separate power supplies)*5	500 m max.				
	VCTF, 0.75 mm	n ² , 3 conductors (power supply	on one side (common power supply))*4				
Cables			on both sides (separate power supplies))*5				
	Shielded cable,	, 0.75 mm ² , 3 conductors (power	er supply on one side (common power supply))*4				
	Shielded cable,	, 0.75 mm ² , 2 conductors (power	er supply on both sides (separate power supplies))*5				

^{*1} We recommend OMRON S8□□-series Power Supply Units for the external power supplies.

^{*2} The capacity of the external supply current does not include the capacity required by the B7A Link Terminal.

^{*3} The minimum input time is the minimum time required by the B7A Interface Unit to read the input signals from the CPU

^{*4} When a common power supply is used, the B7A Interface Unit and B7A Link Terminal are supplied by the same external power supply.

^{*5} When separate power supplies are used, the B7A Interface Unit and B7A Link Terminal are supplied by separate external power supplies.

3-5-5 Common Specifications

Item	Specifications
Applicable Controllers	NJ Series
Unit classification	CJ-series Basic I/O Unit
Transmission delay	Standard (19.2 ms typical) or high-speed (3 ms typical), switchable
	(Switchable by using the setting switch on the front panel. Settings are read when power is turned ON or Unit is restarted.)
	Factory setting: Standard (19.2 ms typical)
	Note A transmission error will occur if B7A Link Terminals with different transmission delay times are connected to each other.
Transmission error input bit status processing	HOLD (The bit status from immediately before the transmission error is held.)
Settings	Front panel Setting switch: Standard (19.2 ms typical) or high-speed (3 ms typical), switchable
Indicators	5 LED indicators: RUN (B7A operating status), ERR1 (port 1 communications error), ERR2 (port 2 communications error), ERR3 (port 3 communications error), ERR4 (port 4 communications error)
Front panel connection	Connector with clamps
Current consumption	5 V DC: 70 mA max. (supplied from Power Supply Unit)
Weight	80 g max.

3-5-6 B7A Interface Port I/O Types

The B7A Interface Units are CJ-series Basic I/O Units.


The B7A Interface Ports use the following I/O types.

Access is performed from the user program using variables.

For information on how to allocate variables, refer to the *NJ-series CPU Unit Software User's Manual* (Cat. No. W501).

	I/O type			
Port number	CJ1W-B7A14	CJ1W-B7A04	CJ1W-B7A22	
	64-point Input Unit	64-point Output Unit	64-point I/O Unit	
1	Inputs	Outputs	Outputs	
2	Inputs	Outputs	Outputs	
3	Inputs	Outputs	Inputs	
4	Inputs	Outputs	Inputs	

3-5-7 **Parts and Names**

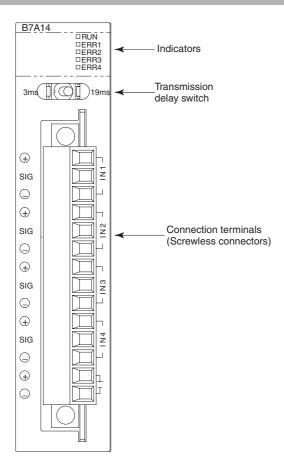

Indicators

• CJ1W-B7A14



Indicator	Name	Color	Status	Condition
RUN	B7A operat-	Green	Lit	The B7A Unit is operating.
	ing status		Not lit	The B7A Unit is stopped.
ERR1	Port 1 transmis-	Red	Lit	A transmission error has occurred at port 1 of the B7A Unit.
	sion error		Not lit	The Unit is operating normally.
ERR2	Port 2 Red transmis-	Red	Lit	A transmission error has occurred at port 2 of the B7A Unit.
	sion error		Not lit	The Unit is operating normally.

Indicator	Name	Color	Status	Condition
ERR3	Port 3 transmis-		Lit	A transmission error has occurred at port 3 of the B7A Unit.
	sion error		Not lit	The Unit is operating normally.
ERR4	Port 4 Red transmis-	Lit	A transmission error has occurred at port 4 of the B7A Unit.	
	sion error		Not lit	The Unit is operating normally.

● CJ1W-B7A04



Indicator	Name	Color	Status	Condition
RUN	B7A operat-	Green	Lit	The B7A Unit is operating.
	ing status		Not lit	The B7A Unit is stopped.

• CJ1W-B7A22



Indicator	Name	Color	Status	Condition
RUN	B7A operat-	Green	Lit	The B7A Unit is operating.
	ing status		Not lit	The B7A Unit is stopped.
ERR1	Port 3 transmis-	Red	Lit	A transmission error has occurred at port 3 of the B7A Unit.
	sion error		Not lit	The Unit is operating normally.
ERR2	Port 4 transmis-	Red	Lit	A transmission error has occurred at port 4 of the B7A Unit.
	sion error		Not lit	The Unit is operating normally.

Transmission Delay Switch

3 ms () 19 ms

Name	Function	Factory setting
Transmission delay switch	The same baud rate is set for all ports using this one switch.	Standard
	Right: Standard (19.2 ms typical)	
	Left: High-speed (3 ms typical)	

Note The switch setting is read when the power supply is turned ON. If the switch setting is changed after turning ON the power supply, the new setting is not used.

3-5-8 **Transmission Error Processing**

B7A Interface Input Ports

The B7A Interface Unit detects transmission errors at the input ports. When a transmission error is detected at an input port, the corresponding indicator and Transmission Error Flag turn ON.

Indicators

When transmission errors occur at B7A interface input ports, the ERR1 to ERR4 indicators on the front panel will turn ON according to the port where the error occurred.

Port where error	LED error indicators		
occurred	CJ1W-B7A14	CJ1W-B7A04	CJ1W-B7A22
Port 1	ERR1		
Port 2	ERR2		
Port 3	ERR3		ERR1
Port 4	ERR4		ERR2

Transmission Error Notification Variables

The following bits in the Basic I/O Unit Information system-defined variables that are allocated to the I/O ports of the Units will change to TRUE when a transmission error occurs.

Example: Rack 0, Slot 0

B7A interface port	CJ1W-B7A14	CJ1W-B7A04	CJ1W-B7A22
Port 1	_CJB_IOUnitInfo[0, 0, 0]		
Port 2	_CJB_IOUnitInfo[0, 0, 1]		
Port 3	_CJB_IOUnitInfo[0, 0, 2]		_CJB_IOUnitInfo[0, 0, 0]
Port 4	_CJB_IOUnitInfo[0, 0, 3]		_CJB_IOUnitInfo[0, 0, 1]

Example: Rack 0, Slot 1

B7A interface port	CJ1W-B7A14	CJ1W-B7A04	CJ1W-B7A22
Port 1	_CJB_IOUnitInfo[0, 1, 0]		
Port 2	_CJB_IOUnitInfo[0, 1, 1]		
Port 3	_CJB_IOUnitInfo[0, 1, 2]		_CJB_IOUnitInfo[0, 0, 0]
Port 4	_CJB_IOUnitInfo[0, 1, 3]		_CJB_IOUnitInfo[0, 0, 1]

Transmission Error Input Status Processing

If a transmission error occurs at an input port, the status of the input bit in the CPU Unit variable from immediately before the transmission error is held. When transmission returns to normal, the signals that have been normally received will be input to the input bit.

B7A Interface Output Ports

The B7A Interface Unit does not detect transmission errors at output ports. Detect output port transmission errors at the B7A Link Terminal that is connected to the B7A Interface Unit.

3-6 CJ-series I/O Control Units and I/O Interface Units

An I/O Control Unit and I/O Interface Units are used to connect Expansion Racks to the NJ-series CPU Rack to expand the system.

3-6-1 Models and Specifications


• I/O Control Unit

Model	Specifications
CJ1W-IC101	The I/O Control Unit is required to connect a CJ-series Expansion Rack to an NJ-series CPU Rack. The I/O Control Unit must be connected immediately to the right of the CPU Unit. Connect to the I/O Interface Unit (CJ1W-II101) on the first Expansion Rack with a CS/CJ-series I/O Connecting Cable.

I/O Interface Unit

Model	Specifications
CJ1W-II101	One Interface Unit is required for each CJ-series Expansion Rack. One End Cover is provided with each Unit.

3-6-2 Component and Functions

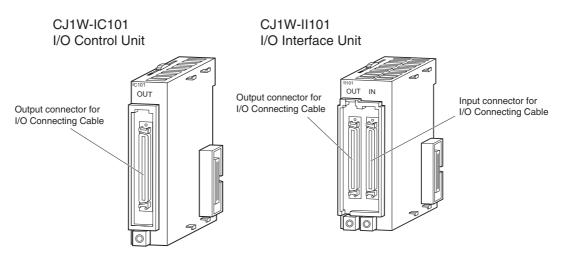



Precautions for Correct Use

Attach the enclosed cover to the I/O Connecting Cable connector on the I/O Interface Unit when it is not being used to protect it from dust.

Sysmac Studio 3-7

The Sysmac Studio is a Support Software package that provides an integrated development environment to design, program, debug, and maintain SYSMAC NJ-series Controllers.

3-7-1 **Model Numbers**

The model numbers of the Sysmac Studio Standard Edition are given in the following table. The model numbers are different for the media and licenses.

Product	Configuration software	Media	Number of user licenses	Model
Sysmac Studio Stan-	Sysmac Studio	DVD		SYSMAC-SE200D
dard Edition	Edition The following Support Software is also included. NX-Server Network Configurator CX-Integrator CX-Configurator-FDT CX-Protocol			
		Licenses	1	SYSMAC-SE201L
			3	SYSMAC-SE203L
			10	SYSMAC-SE210L
	CX-Designer			


3-7-2 Connection

With an NJ-series CPU Unit, you can connect the Sysmac Studio online in the following ways.

Configuration


Connecting by USB

• Direct Connection

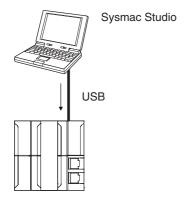

The connection device does not need to be specified.


Connection to CPU Unit on EtherNet/IP with USB

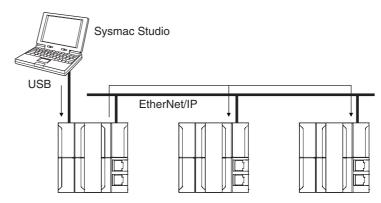

Directly specify the IP address of the remote device or select the remote device from the node list.


Connection with EtherNet/IP

• 1:1 Connection

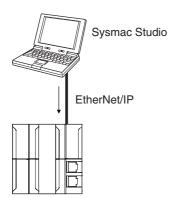

- A direct connection is made from the Sysmac Studio. The IP address and connection device do not need to be specified.
- You can make the connection whether or not a switching hub is used.
- Support for Auto-MDI enables the use of cross cables or straight cables if a direct connection is made.

• 1:N Connection

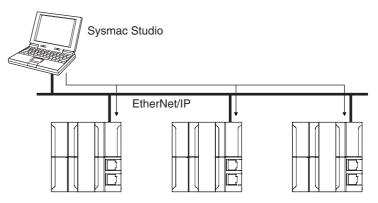

Directly specify the IP address of the remote device or select the remote device from the node list.




Additional Information

The Sysmac Studio cannot connect online to an NJ-series CPU Unit in the following type of configuration.


• If the built-in EtherNet/IP port is not used, you cannot connect to an NJ-series CPU Unit on an EtherNet/IP network.

Example: Connection through an EtherNet/IP Unit

Example: Connection to NJ-series CPU Unit Routing through an EtherNet/IP Unit or Built-in Port

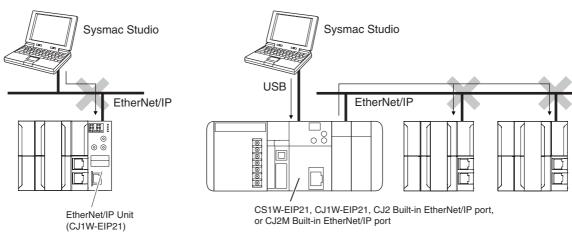

• You cannot route through any networks other than EtherNet/IP networks.

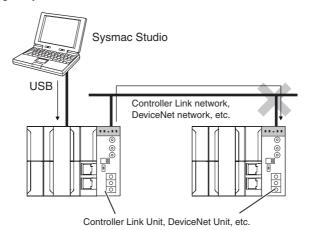

Installation and Wiring

This section describes how to install and wire the CPU Unit and Configuration Units.

4-1	Proces	ssing at Power ON and Power OFF	4-2
	4-1-1	Power ON Operation	4-2
	4-1-2	Power OFF Operation	4-3
	4-1-3	Resetting the Controller from the Sysmac Studio	4-5
4-2	Fail-sa	afe Circuits	4-6
	4-2-1	Order of Powering Up the Controller and Controlled System	
4-3	Mounti	ing Units	4-9
	4-3-1	Installation in a Control Panel	
	4-3-2	Connecting Controller Components	
	4-3-3	DIN Track Installation	
	4-3-4	Connecting CJ-series Expansion Racks	4-19
	4-3-5	Assembled Appearance and Dimensions	4-21
4-4	Wiring		4-25
	4-4-1	Power Supply Wiring	4-25
	4-4-2	Wiring the Built-in EtherCAT Port	4-30
	4-4-3	Wiring CJ-series Basic I/O Units with Terminal Blocks	4-31
	4-4-4	Wiring CJ-series Basic I/O Units with Connectors	4-33
	4-4-5	Connecting to Connector-Terminal Block Conversion Units or	
		I/O Relay Terminals	
	4-4-6	Connecting I/O Devices	
	4-4-7	Wiring the Built-in EtherCAT Port	
	4-4-8	Wiring B7A Interface Units	4-42
4-5	Contro	ol Panel Installation	4-49
	4-5-1	Temperature	4-49
	4-5-2	Humidity	4-51
	4-5-3	Vibration and Shock	4-51
	4-5-4	Atmosphere	4-51
	4-5-5	Electrical Environment	4-52
	4-5-6	Grounding	4-57

Processing at Power ON and Power

WARNING

- Do not touch the terminal section while power is ON. Electrical shock may occur.
- Do not disassemble any of the Units. Particularly the Power Supply Units contain parts with high voltages when power is ON or immediately after power is turned OFF. Electrical shock may occur. There are also sharp internal parts that may cause injury.



4-1-1 **Power ON Operation**



Precautions for Safe Use

It takes approximately 10 to 20 s to enter RUN mode after the power supply is turned ON. During that time, outputs will be OFF or the values will be according to settings in the Units or slaves. Also, external communications cannot be performed. Use the RUN output on the Power Supply Unit, for example, to implement fail-safe circuits so that external devices do not operate incorrectly.

Operation until Operation Ready Status

The CPU Unit will enter operation-ready status after the following time elapses once power supply to the Power Supply Unit starts.

The RUN indicator will flash at a 1-s interval until operation-ready status is entered. (During that time, the Controller will be in startup status.)

CPU Unit Startup Time at Power ON

It takes approximately 10 to 20 seconds for the CPU Unit to start up. The startup time depends on the slave/Unit configuration, *1 user program, SD Memory Card usage, SD Memory Card self-diagnosis usage.*2 etc.

- *1 Some EtherCAT slaves can set a maximum standby time of 30 to 200 s. For the CPU Unit, however, operationready status exists as soon as the EtherCAT Master Function Module is functioning, regardless of the standby time of the EtherCAT Slaves. For the EtherCAT Master Function Module, slaves that do not start within the maximum waiting time are treated as having an error.
- *2 This function performs self-diagnosis on the inserted SD Memory Card. This is executed if the SD Memory Card self-diagnosis setting is set to enable execution of self-diagnosis in the Operation Settings in the Controller Configurations and Setup in the Sysmac Studio.



Additional Information

The following operations are performed inside the CPU Unit when the power is turned ON.

• Checking the retention status of values for variables that have power OFF Retain attribute and values for CJ-series Unit memory (in the DM, EM, and Holding Areas).

The _RetainFail (Power OFF Retention Failure Flag) system-defined variable will be TRUE if a failure to retain values was detected when the power was turned OFF (i.e., if an error occurs in the backup memory check).

· Power ON and Power OFF Record

A record of turning the power ON and OFF remains in the event log.

Operation for Incorrect Power Supply Unit


An Incorrect Power Supply Unit Connected error will occur and operation will stop if a CJ-series Power Supply Unit is mounted in the CPU Rack. The RUN indicator will flash at a 3-s interval and the ERROR indicator will light. The CPU Unit will not operate.


Operating Mode at Startup

The system will immediately enter RUN mode if RUN mode (default) is set as the startup operating mode. The system will immediately enter PROGRAM mode if PROGRAM mode is set as the startup operating mode.

• RUN Mode Set as Startup Mode

PROGRAM Mode Set as Startup Mode

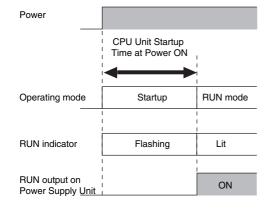

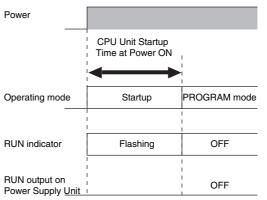

4-1-2 Power OFF Operation

∕!\ WARNING

The NJ-series Controller continues normal operation for a specific period of time even when a momentary power interruption occurs. The Controller may therefore receive incorrect signals from external devices that are affected by the momentary power interruption.



Take suitable actions, such as external fail-safe measures and interlock conditions, to monitor the power supply voltage of the external devices as required.

Different operations will be performed when the power is turned OFF depending on whether the power interruption time is longer than the power OFF detection time, as described below.

The following table gives the voltage conditions for a power interruption.

Power Supply Unit model	Power supply input	Power interruption voltage
NJ-PA3001	100 to 200 VAC	85 VAC max.
NJ-PD3001	24 VDC	19.2 VDC max.


The setting ranges for the power OFF detection time are given in the following table.

Power supply type	Power OFF detection time
AC power supply	30.5 to 45.5 ms
DC power supply	22.5 to 25.5 ms


Operation at Power OFF Operation

Execution of the user program is ended if a power interruption exceeds the power OFF detection time, as shown below. The processing after power interruption confirmation (described below) is performed, and then the system (i.e., CPU Unit) stops.

Power supply type	Time required for a power interruption
AC power supply	50.5 ms or longer
DC power supply	25.5 ms or longer

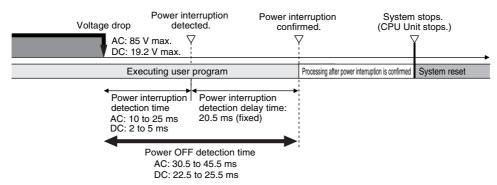

As shown in the following figure, the system (i.e. CPU Unit) will stop even if the voltage recovers after the power interruption detection time.

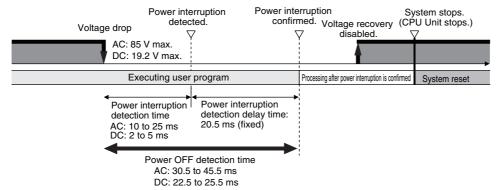

Power interruption detection time:

The time from when the input power supply voltage drops until a power interruption is detected. The power interruption is detected by the Power Supply Unit.

Power interruption detection delay time:

The standby time from when the Power Supply Unit detects the power interruption until the CPU Unit starts processing after the power interruption is confirmed.


Power OFF detection time:

The time from when the power supply voltage drops until the CPU Unit starts processing after the power interruption is confirmed. The CPU Unit continues to operate normally until the power interruption is confirmed.

Momentary Power Interruption with Continued Operation

Execution of the user program will continue if a momentary power interruption is less than the following times.

Power supply type	Momentary power interruption time with continued operation	
AC power supply	30.5 ms max.	
DC power supply	22.5 ms max.	

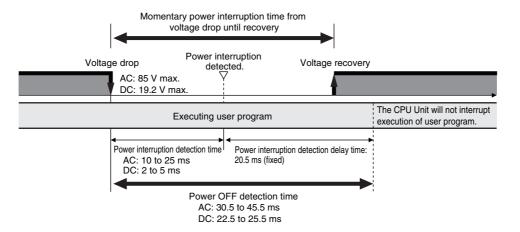

Processing after Power Interruption Is Confirmed

After a power interruption is confirmed, the CPU Unit performs the following processing and then stops.

Item		Description	
I/O refresh		Load outputs are turned OFF. Tag data links stop.	
SD Memory Card access in progress		Any writing is interrupted, files are closed, and the Card is unmounted.	
Processing	Transferring user program (including online editing)	Interrupted. As a result, an error will occur the next time that the power is turned ON. The Controller will not operate.	
	User program execution	User program execution is aborted even during execution of an instruction.	
Saving event log		The time that a power interruption occurs and the cause (primary power interruption of Power Supply Unit) of the interruption are recorded.	

4-1-3 Resetting the Controller from the Sysmac Studio

You can reset the CPU Unit from the Sysmac Studio.

A reset from the Sysmac Studio performs the same operation as cycling the power supply of the Power Supply Unit. Resetting is possible, however, only when the CPU Unit is in PROGRAM mode. Confirm the following status before resetting the CPU Unit.

- · Check the status of output loads.
- · Make sure that SD Memory Card access is not in progress.

Fail-safe Circuits

∕!\ WARNING

Provide safety measures in external circuits, including the following items, to ensure safety in the system if an abnormality occurs due to malfunction of the CPU Unit, other Units, or slaves or due to other external factors affecting operation. Not doing so may result in serious accidents due to incorrect operation.



- · Emergency stop circuits, interlock circuits, limit circuits, and similar safety measures must be provided in external control circuits.
- The Controller outputs may remain ON or OFF due to deposition or burning of the output relays or destruction of the output transistors. As a countermeasure for such problems, external safety measures must be provided to ensure safe operation of the system.
- The CPU Unit will turn OFF the outputs from all Units in the following cases. The outputs from the slaves will operate according to the specifications of the individ-
 - If a power supply error occurs.
 - When an Incorrect Power Supply Unit Connected error occurs.
 - When a CPU watchdog timer error or CPU reset occurs
 - When a Controller error in the major fault level occurs.
 - While the CPU Unit is startup status until RUN mode is entered after the power is turned ON.
 - When restarting the EtherCAT Master Function Module or Motion Control Function Module.

Provide external safety measures so that the system operates safely if all outputs turn OFF when any of the above conditions occurs.

- · If external power supplies for slaves or other devices are overloaded or short-circuited, the voltage will drop, outputs will turn OFF, and the system may be unable to read inputs. Provide external safety measures in control with monitoring of external power supply voltage as required so that the system operates safely in such a case.
- Unintended outputs may be performed when an error occurs in variable memory or memory for CJ-series Units. As a countermeasure for such problems, external safety measures must be provided to ensure safe operation of the system.
- · Provide measures in the communications system and in the user program to ensure safety in the overall system even if errors or malfunctions occur in data link communications or remote I/O communications.
- If a communications interference occurs for remote I/O or if a major fault level error occurs, output status will be determined by the specifications of the external output device. Confirm the operating specifications for communications errors and major fault level errors and implement suitable safety measures. Set the slave settings correctly for all EtherCAT slaves.
- You must implement fail-safe circuits to provide sufficient protection in the event that abnormal signals occur as the result of broken signal lines or momentary power interruptions. Not doing so may result in serious accidents due to incorrect operation.

4-2-1 Order of Powering Up the Controller and Controlled System

Outputs from Units, such as DC Output Units, may malfunction momentarily when the power to the Controller is turned ON. This may cause problems in the system if the Controller power supply is turned ON after the controlled system's power supply. To prevent possible malfunctions, add an external circuit that prevents the power supply to the controlled system from going ON before the power supply to the Controller itself.



Precautions for Safe Use

It takes approximately 10 to 20 s to enter RUN mode after the power supply is turned ON. During that time, outputs will be OFF or the values will be according to settings in the Units or slaves. Also, external communications cannot be performed. Use the RUN output on the Power Supply Unit, for example, to implement fail-safe circuits so that external devices do not operate incorrectly.

Output Unit Failure


It is possible for an output to remain ON due to a malfunction in the internal circuitry of the Output Unit, such as a relay or transistor malfunction. Be sure to add any circuits necessary outside of the Controller to ensure the safety of the system in the event that an output fails to go OFF.

Power Supply Wiring and Emergency Stop Circuit

The following emergency stop circuit controls the power supply to the controlled system so that power is supplied to the controlled system only when the Controller is operating and the RUN output is ON. An external relay (CR1) is connected to the RUN output from the Power Supply Unit* as shown in the following diagram.


* A RUN output is provided only on the NJ-PA3001/-PD3001 Power Supply Unit.

Electrical Diagram

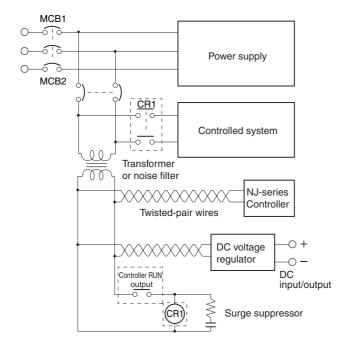

Interlock Circuits

When the Controller controls an operation such as the clockwise and counterclockwise operation of a motor, provide an external interlock such as the one shown in the following example to prevent both the forward and reverse outputs from turning ON at the same time if required by the application.

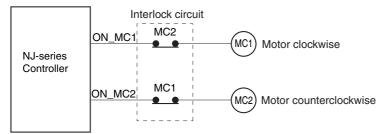

This circuit prevents outputs MC1 and MC2 from both being ON at the same time even if both Controller outputs ON_MC1 and ON_MC2 are ON due to a malfunction.

4-3 Mounting Units



Precautions for Correct Use

- Follow the instructions in this manual to correctly perform installation.
- Do not operate or store the Controller in the following locations. Doing so may cause operation to stop or incorrect operation.
 - · Locations subject to direct sunlight.
 - Locations subject to temperatures or humidity outside the range specified in the specifications.
 - Locations subject to condensation as the result of severe changes in temperature.
 - · Locations subject to corrosive or flammable gases.
 - · Locations subject to dirt, dust, salt, and metal powder.
 - Locations subject to exposure to water, oil, or chemicals.
 - · Locations subject to shock or vibration.
- Take appropriate and sufficient countermeasures when installing systems in the following locations:
 - Locations subject to strong, high-frequency noise.
 - Locations subject to static electricity or other forms of noise.
 - Locations subject to strong electromagnetic fields.
 - Locations subject to possible exposure to radioactivity.
 - · Locations close to power supplies.

4-3-1 Installation in a Control Panel


Installation in Cabinets or Control Panels

When the Controller is being installed in a cabinet or control panel, be sure to provide proper ambient conditions as well as access for operation and maintenance.

Temperature Control

The ambient temperature within the enclosure must be within the operating range of 0 to 55°C. When necessary, take the following steps to maintain the proper temperature.

- · Provide enough space for good air flow.
- Do not install the Controller above equipment that generates a large amount of heat such as heaters, transformers, or high-capacity resistors.
- If the ambient temperature exceeds 55°C, install a cooling fan or air conditioner.

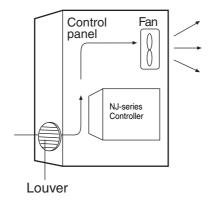


Accessibility for Operation and Maintenance

- · To ensure safe access for operation and maintenance, separate the Controller as much as possible from high-voltage equipment and power machinery.
- The Controller will be easiest to install and operate if it is mounted at a height of 1.0 to 1.6 m above the floor.

Improving Noise Resistance


- Do not mount the Controller in a control panel containing high-voltage equipment.
- Install the Controller at least 200 mm away from power lines.

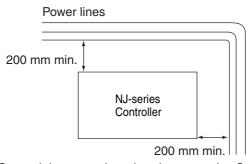

- Ground the mounting plate between the Controller and the mounting surface.
- When I/O Connecting Cables are 10 m or longer, connect the control panels in which Racks are mounted with heavier power wires (3 wires at least 2 mm² in cross-sectional area).


Controller Orientation

• Each Rack must be mounted in an upright position to provide proper cooling.

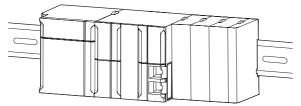

Do not install a Rack in any of the following positions.

Mounting with the DIN Track on the Bottom

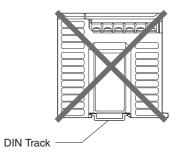




Mounting with the DIN Track Installed Vertically





Control Panel Installation Dimensions

An NJ-series Controller must be mounted inside a control panel on DIN Track. Normally the CPU Rack is installed on top and the Expansion Racks under it.

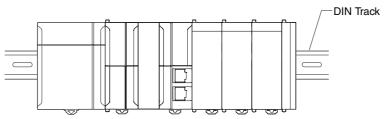

• Consider the width of wiring ducts, wiring, ventilation, and Unit replacement when determining the space between Racks.




Additional Information


A Controller must be mounted on DIN Track. It cannot be mounted with screws.

Wiring Ducts

Whenever possible, route I/O wiring through wiring ducts or raceways. Install mounting bracket so that it is easy to fish wire from the I/O Units through the duct. It is handy to have the duct at the same height as the Racks.

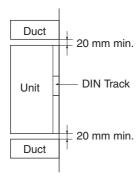

Wiring Duct Example

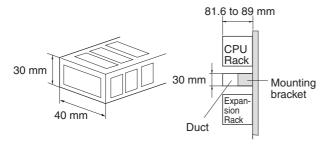



Precautions for Correct Use

Tighten terminal block screws and cable screws to the following torques.


Terminal Screws M4: 1.2 N·m M3: 0.5 N·m

Cable Connector Screws

M2.6: 0.2 N·m

Routing Wiring Ducts


Install the wiring ducts at least 20 mm between the tops of the Racks and any other objects, (e.g., ceiling, wiring ducts, structural supports, devices, etc.) to provide enough space for air circulation and replacement of Units.

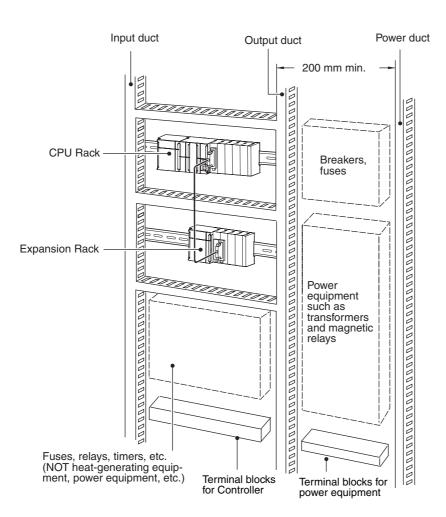


4-3-2 **Connecting Controller Components**

The Units that make up an NJ-series Controller can be connected simply by pressing the Units together and locking the sliders by moving them toward the back of the Units. The End Cover is connected in the same way to the Unit on the far right side of the Controller.

Join the Units so that the connectors fit exactly.

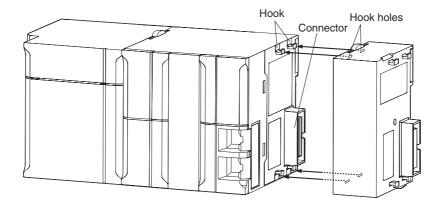

2 The yellow sliders at the top and bottom of each Unit lock the Units together. Move the sliders toward the back of the Units as shown below until they click into place.

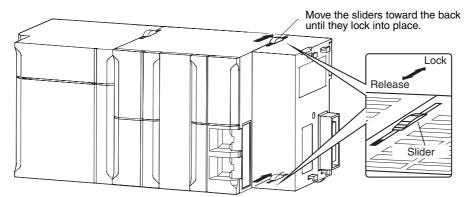




Precautions for Correct Use


The sliders on the tops and bottoms of the Power Supply Unit, CPU Unit, I/O Units, Special I/O Units, and CPU Bus Units must be completely locked (until they click into place) after connecting the adjacent Unit connectors.

3 Attach the End Cover to the Unit on the far right side of the Rack.

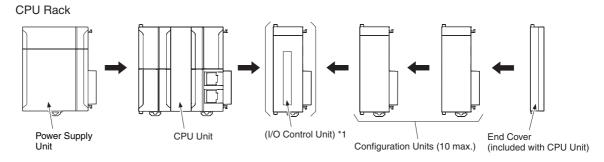

*1: Connect the I/O Control Unit directly to the CPU Unit to enable connecting Expansion Racks.

Expansion Rack

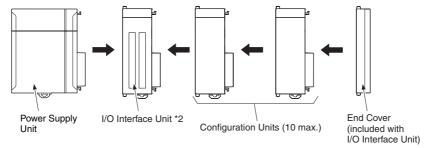

*2: Connect the I/O Interface Unit directly to the Power Supply Unit.



Additional Information

There is no Backplane for the NJ-series. The Controller is constructed by connecting Units together using the connectors on the sides.




Precautions for Correct Use

- Always turn OFF the power supply before connecting Units to each other.
- · Always turn OFF the power supply to the entire system before replacing a Unit.
- A maximum of 10 Units can be connected in any one CPU Rack or Expansion Rack. If you
 connect more than that number, an Incorrect Unit/Expansion Rack Connection error (a major
 fault level Controller error) will occur, and the NJ-series CPU Unit will not operate.


DIN Track Installation 4-3-3

Use the following procedure to install an NJ-series Controller on DIN Track.


Release the pins on the backs of the NJ-series Units.

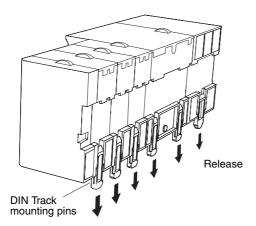


2 Fit the back of the Controller onto the DIN Track by inserting the top of the track and then pressing in at the bottom of the Controller, as shown below.

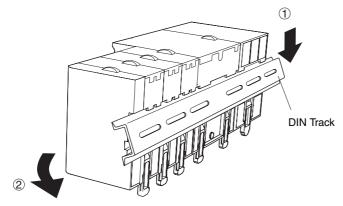

Lock the pins.

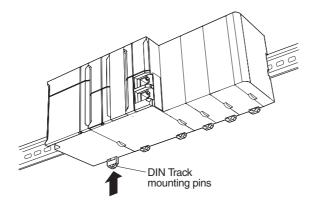

4 Install a DIN Track End Plate on each end of the Controller. To install an End Plate, hook the bottom on the bottom of the track, rotate the Plate to hook the top of the Plate on the top of the track, and then tighten the screw to lock the Plate in place.

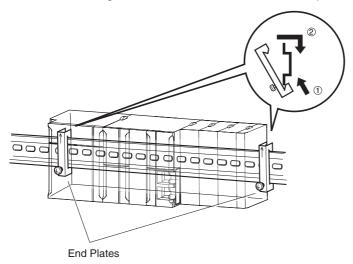



Additional Information

To remove Units, perform the steps above in reverse order.



Precautions for Safe Use

Always turn OFF the power supply to the Controller before attempting any of the following.

- Mounting or removing I/O Units or CPU Units
- · Assembling the Units.
- · Setting DIP switches or rotary switches.
- · Connecting cables or wiring the system.
- · Connecting or disconnecting the connectors.


The Power Supply Unit continues to supply power to the Controller for up to several seconds after the power supply is turned OFF. The PWR indicator remains lit as long as power is supplied. Make sure that the PWR indicator is not lit before you perform any of the above operations.

4-17


DIN Track and Accessories


Use the DIN Track and DIN Track End Plates shown below. Secure each DIN Track inside a control panel with at least three screws.

 DIN Track Model numbers: PFP-50N (50 cm), PFP-100N (100 cm), PFP-100N2 (100 cm)

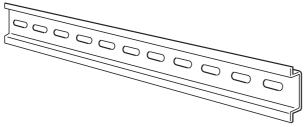

Secure the DIN Track to the control panel using M4 screws separated by 210 mm (6 holes) or less and using at least 3 screws. The tightening torque is 1.2 N·m.

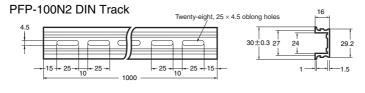

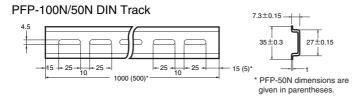

• PFP-M DIN Track End Plates (2 required)



4-3-4 Connecting CJ-series Expansion Racks

CS/CJ-series I/O Connecting Cables are used to connect the NJ-series CPU Rack and CJ-series Expansion Racks.


CS/CJ-series I/O Connecting Cables




- These connectors are equipped with easy-lock connectors.
- Use them to connect the CPU Rack to an Expansion Rack or to connect two Expansion Racks.

Model number	Cable length
CS1W-CN313	0.3 m
CS1W-CN713	0.7 m
CS1W-CN223	2 m
CS1W-CN323	3 m
CS1W-CN523	5 m
CS1W-CN133	10 m
CS1W-CN133B2	12 m

- The CS/CJ-series I/O Connecting Cables are used to connect the I/O Control Unit on the NJ-series CPU Rack to the I/O Interface Unit on a CJ-series Expansion Rack or to connect the I/O Interface Units on two CJ-series Expansion Racks.
- Install the Racks and select I/O Connecting Cables so that the total length of all I/O Connecting Cables does not exceed 12 m.
- The following diagram shows where each I/O Connecting Cable must be connected on each Rack. The Rack will not operate if the cables aren't connected properly.

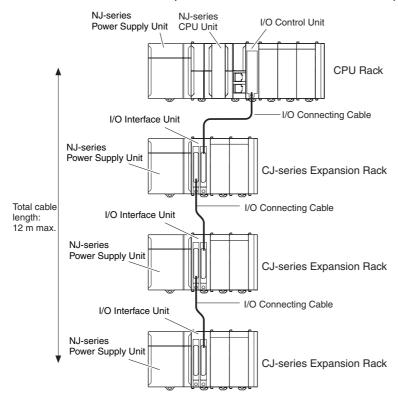

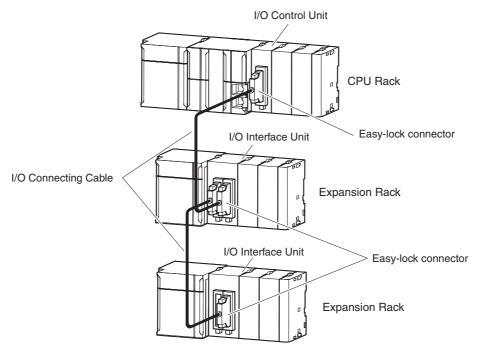


• The top and bottom of the connector are different. Be sure the connector is facing the correct direction before connecting it.

Connecting the Easy-lock Connectors

Insert the connector until it locks in place. The Controller will not operate properly if the connector is not inserted completely.


To remove the connector, press the tabs and pull on the connector.

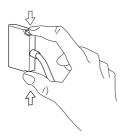




Precautions for Correct Use

- When using an I/O Connecting Cable with a locking connector, be sure that the connector is firmly locked in place before using it.
- Always turn OFF the power supply to the Controller before connecting a cable.
- An I/O bus check error will occur and the Controller will stop if an I/O Connecting Cable's connector is disconnected from the Rack. Be sure that the connectors are secure.
- A 63-mm hole will be required if the I/O Connecting Cable must pass through a hole when connecting an Expansion Rack.
- Do not bend the I/O Connecting cable past its natural bending radius or pull in it with excessive force.
- The cables can withstand a pulling force up to 49 N (11 lbs).
- The minimum bending radius is shown in the following diagram.

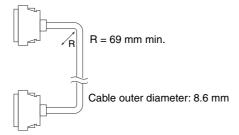


 Always attach the cover to the output connector (left side) on the last I/O Interface Unit on the last Expansion Rack to protect it from dust.



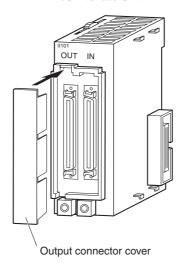

4-3-5 Assembled Appearance and Dimensions

The NJ-series Units, including the Power Supply Unit, the CPU Unit, and I/O Units, are connected to each other. An End Cover is connected to the right end.

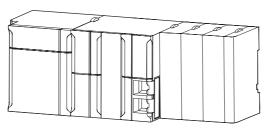

Dimensions

Power Supply Unit

Model	Unit width (mm)	
NJ-PA3001	70	
NJ-PD3001	70	

CPU Unit

Model	Unit width (mm)
NJ501-1300	90
NJ501-1400	
NJ501-1500	

End Cover

Model	Unit width (mm)	
CJ1W-TER01	14.7	

Other Units come into two widths: 20 mm and 31 mm.


20-mm-wide Units

Name	Model	Unit width (mm)
I/O Control Unit	CJ1W-IC101	20
32-point Basic I/O Units	CJ1W-ID231/ID232/ID233	
	CJ1W-OD231/OD232/OD233/OD234	
B7A Interface Units	CJ1W-B7A22 CJ1W-B7A14 CJ1W-B7A04	

31-mm-wide Units

Name	Model	Unit width (mm)
I/O Interface Unit	CJ1W-II101	31
8-point and 16-point Basic I/O Units	CJ1W-ID201 CJ1W-ID211/212 CJ1W-IA111/201 CJ1W-OD20□ CJ1W-OD211/212/213 CJ1W-OC201/211 CJ1W-OA201	
32-point Basic I/O Units	CJ1W-MD231/232/233	
64-point Basic I/O Units	CJ1W-ID261 CJ1W-OD261 CJ1W-MD261	
	CJ1W-ID262 CJ1W-OD262/263 CJ1W-MD263/563	
Interrupt Input Unit	CJ1W-INT01	
Quick-response Input Unit	CJ1W-IDP01	
Analog I/O Units	CJ1W-ADDDD-V1 CJ1W-AD042 CJ1W-DADDD CJ1W-DA042V CJ1W-MAD42	
Process I/O Units	CJ1W-AD04U CJ1W-PH41U CJ1W-PDC15	
Temperature Control Units	CJ1W-TC□□3/□□4	
High-speed Counter Unit	CJ1W-CT021	
ID Sensor Units	CJ1W-V680C11 CJ1W-V680C12	
Controller Link Unit	CJ1W-CLK23	
Serial Communications Units	CJ1W-SCU22/32/42	
EtherNet/IP Unit	CJ1W-EIP21	
DeviceNet Unit	CJ1W-DRM21	
CompoNet Master Unit	CJ1W-CRM21	
PROFINET-IO Unit	CJ1W-PNT21	
PROFIBUS-DP Master Unit	CJ1W-PRM21	
PROFIBUS-DP Slave Unit	CJ1W-PRT21	

Design Example for Width W

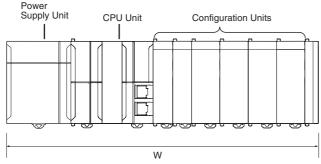

Power Supply Unit: NJ-PA3001 (70 mm)

CPU Unit: NJ501-1500 (90 mm)


Basic I/O Units: CJ1W-ID231 (20 mm) × 2 Special I/O Units: CJ1W-AD081-V1 (31 mm) × 4

CPU Bus Unit: CJ1W-EIP21 (31 mm) × 1

$$W = 70 + 90 + 20 \times 2 + 31 \times 4 + 31 \times 1 + 14.7$$
 (End Cover) = 369.7 mm


Refer to Rack Current Consumption and Width Display on page 3-18 for the procedure to check the width of each Rack from the Sysmac Studio.

Installation Dimensions

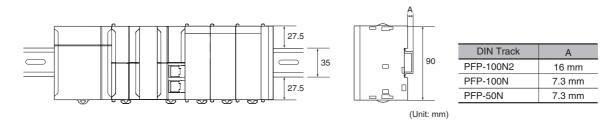

Installation Height

With a height of 90.0 mm, the CPU Unit is the highest component in an NJ-series CPU Rack. It is also higher than any Units on an Expansion Rack. When a cable is connected (such as a connecting cable to Support Software), however, even greater height is required. Allow sufficient depth in the control panel containing the Controller.

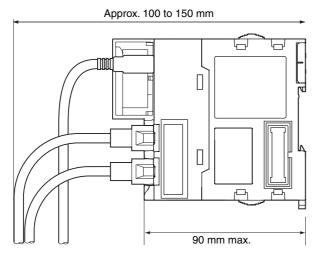

4-4 Wiring

∕!\ WARNING

 Do not input a voltage or current that exceeds the specified range into a Unit or slave. If a voltage or current that is outside the specified range is input, the Unit or slave may fail or a fire may occur.



⚠ CAUTION

 Tighten terminal block screws and cable screws to the torques specified in this manual or in the reference manuals. Loose screws can cause fire or malfunction.




 Do not touch devices while power is supplied or immediately after the power supply is turned OFF. You may be burnt.

4-4-1 Power Supply Wiring

AC Power Supply Units

NJ-PA3001 Power Supply Unit

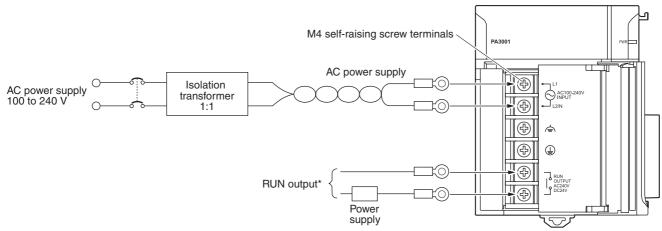

* The RUN output is ON when the CPU Unit is in RUN mode and OFF when the CPU Unit is in PROGRAM mode or a Controller error in the major fault level occurs.



Additional Information

The RUN output function is enabled only when mounted to a CPU Rack.

AC Power Source

- Supply 100 to 240 VAC.
- Keep voltage fluctuations within the specified range:

Supply voltage	Allowable voltage fluctuations
100 to 240 VAC	85 to 264 VAC

• If one power supply phase of the equipment is grounded, connect the grounded phase side to the L2/N terminal.

Isolation Transformer

The Controller's internal noise isolation circuits are sufficient to control typical noise in power supply lines. Noise between the Controller and ground can be significantly reduced by connecting a 1- to-1 isolation transformer. Do not ground the secondary coil of the transformer.

Power Supply Capacity

The power consumption will be 120 VA maximum. per Rack for the NJ-PA3001. When you select the power supply, consider that surge current will flow when the power is turned ON. Refer to 3-3-1 Models and Specifications for information on surge current specifications.

RUN Output

This output is ON when the CPU Unit is operating; it is OFF when the CPU Unit is in PROGRAM mode or a Controller error in the major fault level occurs.

The RUN output can be used to control external systems, such as in an emergency stop circuit that turns OFF the power supply to external systems when the CPU Unit is not operating. (Refer to 4-2 Fail-safe Circuits for more information.)

Item		NJ-PA3001
Contact form	SPST-NO	
Maximum switching	240 VAC:	2 A for resistive loads
capacity	120 VAC:	0.5 A for inductive loads
	24 VDC:	2 A for resistive loads


Crimp Terminals


The terminals on the Power Supply Unit are M4, self-raising terminals with screws.



Precautions for Correct Use

- · Use crimp terminals for wiring.
- Do not connect bare stranded wires directly to terminals.
- Tighten the terminal block screws to the torque of 1.2 N·m.
- Use round-type crimp terminals (M4) having the dimensions shown below.
 - Crimp Terminals for AC Power Supplies

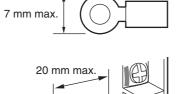

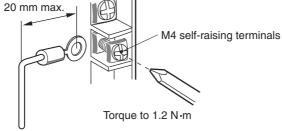




Precautions for Safe Use

- Do not allow wire clippings, shavings, or other foreign material to enter any Unit. Otherwise, Unit burning, failure, or malfunction may occur. Cover the Units or take other suitable countermeasures, especially during wiring work.
- Always remove any dustproof labels that are on the top of the Units when they are shipped before you turn ON the power supply. If the labels are not removed, heat will accumulate and malfunctions may occur.

DC Power Supplies

NJ-PD3001 Power Supply Unit

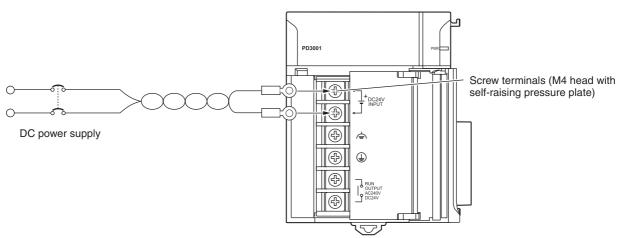

DC Power Source

Supply 24 VDC. Keep voltage fluctuations within the specified range.

Model	Allowable voltage fluctuation range	
NJ-PD3001	19.2 to 28.8 VDC (24 VDC ±20%)	

Power Supply Capacity

The maximum power consumption is 50 W (NJ-PD3001) per Rack.

When you select the power supply, consider that surge current will flow when the power is turned

Refer to 3-3-1 Models and Specifications for information on surge current specifications.

RUN Output

This output is ON when the CPU Unit is operating; it is OFF when the CPU Unit is in PROGRAM mode or a Controller error in the major fault level occurs.

The RUN output can be used to control external systems, such as in an emergency stop circuit that turns OFF the power supply to external systems when the CPU Unit is not operating. (Refer to 4-2 Fail-safe Circuits for more information.)

Item		NJ-PA3001
Contact form	SPST-NO	
Maximum switching	240 VAC:	2 A for resistive loads
capacity	120 VAC:	0.5 A for inductive loads
	24 VDC:	2 A for resistive loads

Crimp Terminals

The terminals on the Power Supply Unit are M4, self-raising terminals with screws.



Precautions for Correct Use

- Use crimp terminals for wiring.
- Do not connect bare stranded wires directly to terminals.
- Tighten the terminal block screws to the torque of 1.2 N·m.
- Use crimp terminals (M4) having the dimensions shown below. Crimp Terminals for DC Power Supplies







Precautions for Safe Use

- Do not allow wire clippings, shavings, or other foreign material to enter any Unit. Otherwise, Unit burning, failure, or malfunction may occur. Cover the Units or take other suitable countermeasures, especially during wiring work.
- Always remove any dustproof labels that are on the top of the Units when they are shipped before you turn ON the power supply. If the labels are not removed, heat will accumulate and malfunctions may occur.

Grounding

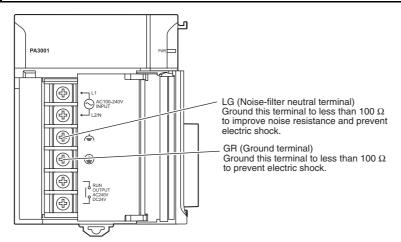

- To help prevent electrical shock, ground the ground terminal (GR: \oplus) with a ground resistance of less than 100 Ω using a 14-gauge wire (minimum cross-sectional area of 2 mm²).
- The line ground terminal (LG: \oplus) is a noise-filtered neutral terminal. If noise is a significant source of errors or electrical shocks are a problem, connect the line ground terminal to the ground terminal and ground both with a ground resistance of less than 100 Ω .
- If the LG and GR terminals are connected, ground to a resistance of 100 Ω or less to prevent electric shock.
- The ground wire should not be more than 20 m long.
- The NJ-/CJ-series Controllers are designed to be mounted so that they are isolated (separated) from the mounting surface to protect them from the effects of noise in the installation environment (e.g., the control panel).
- Do not share the Controller's ground with other equipment or ground the Controller to the metal structure of a building. Doing so may worsen operation. Whenever possible, use an independent ground (with the ground pole separated by a minimum of 10 m from any other ground pole).
- Ground to 100 Ω or less, and if possible use a separate ground from those of other devices. (Refer to figure (a) in the diagram below.)
- If using an independent ground is not possible, then use a common ground as shown in figure (b). Connect to the ground pole of the other device.

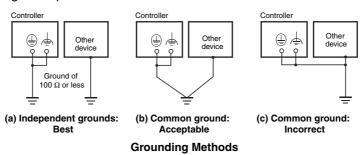

Crimp Terminals

The terminals on the Power Supply Unit are M4, self-raising terminals with screws.



Precautions for Correct Use

- · Use crimp terminals for wiring.
- Do not connect bare stranded wires directly to terminals.
- Tighten the terminal block screws to the torque of 1.2 N⋅m.
- Use crimp terminals (M4) having the dimensions shown below.

Crimp Terminals for DC Power Supply



• When wiring an AC Power Supply Unit, if one power supply phase of the equipment is grounded, always connect the grounded phase to the L2/N terminal.



Wiring the Built-in EtherCAT Port 4-4-2

For information on wiring the built-in EtherCAT port, refer to the NJ-series CPU Unit Built-in EtherCAT Port User's Manual (Cat. No. W505).

4-4-3 Wiring CJ-series Basic I/O Units with Terminal Blocks

Precautions for Wiring I/O Units

I/O Unit Specifications

Double-check the specifications for the I/O Units. Be particularly careful of the following to prevent failure, damage, and fires.

- Make sure that voltages of the external power supplies are within the ratings of the I/O Units.
- · Make sure that load currents are within the ratings of the Output Units.
- Make sure that power supply terminals with polarity are connected correctly.

Electric Wires

• The following wire gauges are recommended.

Terminal Block Connector	Wire Size	
18-terminal	AWG 22 to 18 (0.32 to 0.82 mm ²)	

• The current capacity of electric wire depends on factors such as the ambient temperature and insulation thickness as well as the gauge of the conductor.

Crimp Terminals

The terminals on the I/O Unit are M3, self-raising terminals with screws.




Precautions for Correct Use

- Use crimp terminals for wiring.
- Do not connect bare stranded wires directly to terminals.
- Tighten the terminal block screws to the torque of 0.5 N·m.
- Use crimp terminals (M3) having the dimensions shown below.




Wiring

- · Make sure that all Units are connected properly.
- Do not allow wire clippings, shavings, or other foreign material to enter any Unit during wiring.
- · To allow heat to dissipate, always remove any dustproof labels that are on the top of the Units before you turn ON the power supply.

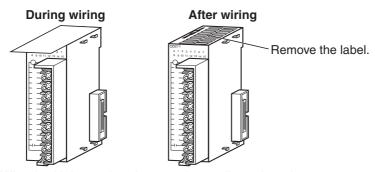


- · Wire the Units so that they can be easily replaced.
- Make sure that the I/O indicators are not covered by the wiring.
- Do not place the wiring for I/O Units in the same duct or raceway as power lines. Inductive noise can cause errors in operation.
- Tighten the terminal screws to the torque of 0.5 N·m.

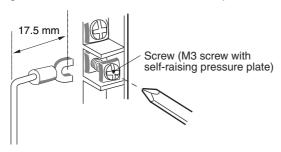

Terminal Blocks

- The I/O Units are equipped with removable terminal blocks. The lead wires do not have to be removed from the terminal block to remove it from an I/O Unit.
- After you complete wiring, check to see if the terminal block is securely locked.

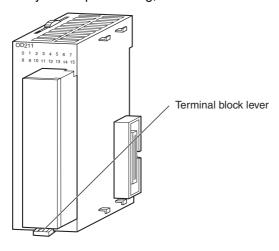

CJ-series Basic I/O Unit

4-4-4 Wiring CJ-series Basic I/O Units with Connectors

This section describes wiring for CJ-series Basic I/O Units with connectors (32- and 64-point Units). Depending on the connector, the following methods are used to connect these Units to external I/O devices.

- Use an OMRON Connecting Cable (equipped with a special connector) to connect to a Terminal Block or Relay Terminal.
- Use a special connector and make your own cable.



Precautions for Safe Use

- Do not apply voltages that exceeds the input voltages for Input Units or the maximum ratings of Output Units.
- When the power supply has positive and negative terminals, be sure to wire them correctly.
- Use reinforced insulation or double insulation on the DC power supply connected to DC I/O Units when required by EC Directives (low voltage).
- When connecting the connector to the I/O Unit, tighten the connector screws to a torque of 0.2 N·m.
- Turn ON the power after checking the connector's wiring.
- Do not pull the cable. Doing so will damage the cable.
- Bending the cable too sharply can damage or break wiring in the cable.



Additional Information

CJ-series Basic I/O Units with 32 or 64 points and Fujitsu connectors have the same connector pin allocations as the C200H High-density I/O Units and CS-series I/O Units with connectors to make them compatible.

Connecting to a Connector-Terminal Block Conversion Unit or I/O Relay Terminal

For details on using OMRON Connecting Cables equipped with special connectors to connect Basic I/O Units with connectors to OMRON Connector-Terminal Block Conversion Units or I/O Relay Terminals, refer to *A-2-4 Connecting Connector-Terminal Block Conversion Units and I/O Relay Terminals*.

Using User-made Cables with Connector

Available Connectors

Use the following connectors when assembling a connector and cable.

CJ-series 32- and 64-point Basic I/O Units with Fujitsu Connectors **Applicable Units**

Model	Specifications	Pins
CJ1W-ID231	Input Unit, 24 VDC, 32 inputs	40
CJ1W-ID261		
CJ1W-OD231 Transistor Output Unit with Sinking Outputs, 32 outputs		
CJ1W-OD261 Transistor Output Unit with Sinking Outputs, 64 outputs		
CJ1W-MD261	24-VDC Input/Transistor Output Units, 32 Inputs, 32 Outputs	
CJ1W-MD231	24-VDC Input/Transistor Output Units, 16 Inputs, 16 Outputs	24

Applicable Cable-side Connectors

Connection	Pins	OMRON set	Fujitsu parts
Solder-type	40	C500-CE404	Socket: FCN-361J040-AU Connector cover: FCN-360C040-J2
	24	C500-CE241	Socket: FCN-361J024-AU Connector cover: FCN-360C024-J2
Crimped	40	C500-CE405	Socket: FCN-363J040 Connector cover: FCN-360C040-J2 Contacts: FCN-363J-AU
	24	C500-CE242	Socket: FCN-363J024 Connector cover: FCN-360C024-J2 Contacts: FCN-363J-AU
Pressure-welded	40	C500-CE403	FCN-367J040-AU/F
	24	C500-CE243	FCN-367J024-AU/F

CJ-series 32- and 64-point Basic I/O Units with MIL Connectors **Applicable Units**

Model	Specifications	Pins
CJ1W-ID232	Input Unit, 24 VDC, 32 inputs	40
CJ1W-ID233		
CJ1W-ID262	Input Unit, 24 VDC, 64 inputs	7
CJ1W-OD232	Transistor Output Unit with sourcing outputs, 32 outputs	7
CJ1W-OD262	Transistor Output Unit with sourcing outputs, 64 outputs	7
CJ1W-OD233	Transistor Output Unit with sinking outputs, 32 outputs	7
CJ1W-OD234		
CJ1W-OD263	Transistor Output Unit with sinking outputs, 64 outputs	7
CJ1W-MD263	24-VDC Input/Transistor Output Units, 32 inputs, 32 outputs	7
CJ1W-MD563	TTL Input/TTL Output Units, 32 inputs, 32 outputs	7
CJ1W-MD232	24-VDC Input/Transistor Output Units, 16 inputs, 16 outputs	20
CJ1W-MD233	24-VDC Input/Transistor Output Units, 16 inputs, 16 outputs	

Applicable Cable-side Connectors

Connection	Pins	OMRON set	DDK parts
Pressure-welded	40	XG4M-4030-T	FRC5-A040-3TOS
	20	XG4M-2030-T	FRC5-A020-3TOS

Wire Size

We recommend using cable with wire gauges of AWG 24 or AWG 28 (0.2 mm² to 0.08 mm²). Use cable with external wire diameters of 1.61 mm max.

Wiring Procedure

The following wiring procedure is an example for Fujitsu connectors.

1 Check that each Unit is installed securely.




Precautions for Correct Use


Do not force the cables.

2 Cover the Unit while wiring to prevent wire clippings from entering the Unit. If there is a dustproof label on the top of the Unit, do not remote it before you wire the Unit.

(Remove the label or other covering after wiring has been completed to allow air circulation needed for cooling.)

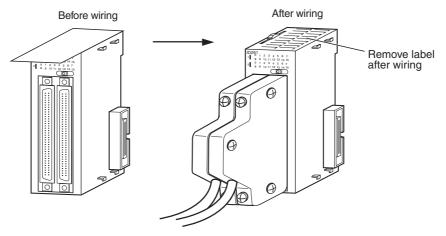

3 When solder-type connectors are being used, be sure not to accidentally short adjacent terminals. Cover the solder joint with heat-shrink tubing.

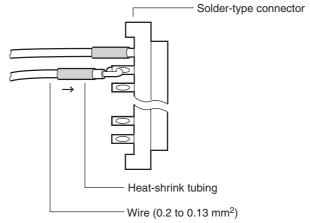





Precautions for Safe Use

If the external power supply to an Output Unit has polarity, connect it with the correct polarity. If the polarity is reversed, current may flow in the reverse direction and damage the connected devices regardless of the operation of the Controller.


Assemble the connector (purchased separately).

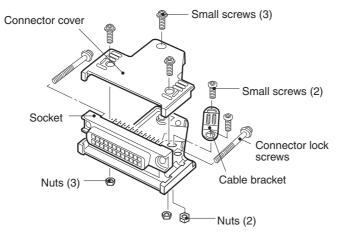

Insert the wired connector.

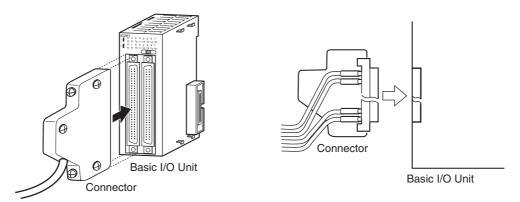

(Remove the label or other covering after wiring has been completed to allow air circulation needed for cooling.)

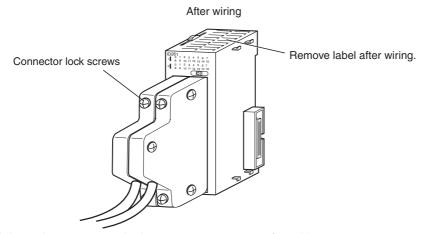


Tighten the connector lock screws to a torque of 0.2 N·m.


4-4-5 Connecting to Connector-Terminal Block Conversion Units or I/O Relay Terminals

OMRON Connecting Cable can be used to connect Basic I/O Units with Connectors to OMRON Connector-Terminal Block Conversion Units or to OMRON I/O Relay Terminals. For details, refer to A-2-4 Connecting Connector-Terminal Block Conversion Units and I/O Relay Terminals.

Connection Examples

Connector-Terminal Block Conversion Unit

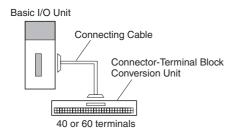

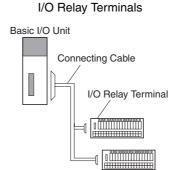


Connecting I/O Devices 4-4-6

Input Devices


Use the following information for reference when selecting or connecting input devices.

DC Input Units


The following types of DC input devices can be connected.

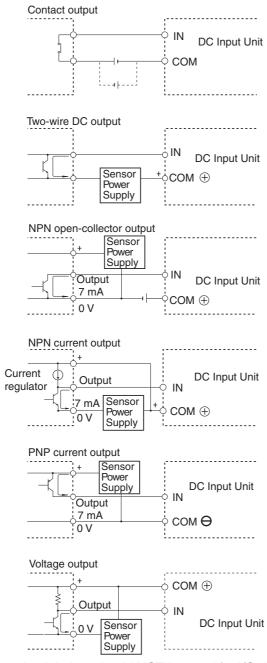

The circuit below should NOT be used for I/O devices having a voltage output.

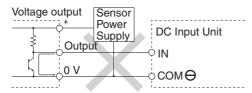

AC Input Units

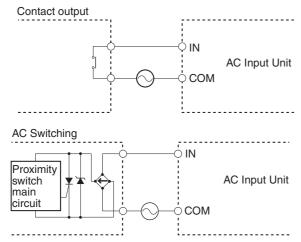

Precautions for Safe Use

When using a reed switch as the input contact for an AC Input Unit, use a switch with an allowable current of 1 A or greater. If reed switches with smaller allowable currents are used, the contacts may fuse due to surge currents.

Precautions when Connecting a Two-wire DC Sensor

When using a two-wire sensor with a 24-VDC input device, check that the following conditions have been met. Failure to meet these conditions may result in operating errors.

- (1) Relation between voltage when the Controller is ON and the sensor residual voltage: $VON \le VCC VR$
- (2) Relation between voltage when the Controller is ON and sensor control output (load current):

IOUT (min) \leq ION \leq IOUT (max.) ION = (VCC - VR - 1.5 [Controller internal residual voltage])/RIN

When ION is smaller than IOUT (min), connect a bleeder resistor R. The bleeder resistor constant can be calculated as follows:

 $R \le (VCC - VR)/(IOUT (min.) - ION)$

Power W \geq (VCC – VR) $^2/R \times 4$ [allowable margin]

Vcc: ON voltage to Input Unit VR: Sensor output residual current

ION: Input Unit ON current

IOUT: Sensor control current (load current)

RIN: Input Unit input impedance


(3) Relation between current when the Controller is OFF and sensor leakage current:

IOFF ≥ Ileak

Connect a bleeder resistor if I_{leak} is greater than IOFF. Use the following equation to calculate the bleeder resistance constant.

 $R \leq (RiN \times VOFF)/(Ileak \times RiN - VOFF)$

Power W \geq (VCC – VR)²/R \times 4 [allowable margin]

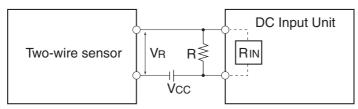

Vcc: Power voltage

Von: Controller ON voltage

VOFF: Controller OFF voltage

ION: Controller ON current IOFF: Controller OFF current

RIN: Controller input impedance

VR: Sensor output residual current IOUT: Sensor control current (load current)

lleak: Sensor leakage current

Bleeder resistance


(4) Precautions on Sensor Surge Current

An incorrect input may occur if a sensor is turned ON after the Controller has started up to the point where inputs are possible. Determine the time required for sensor operation to stabilize after the sensor is turned ON and take appropriate measures, such as inserting a timer delay into the user program after turning ON the sensor.

Programming Example

In this example, the sensor's power supply voltage is used as the input to Jxx_Ch1_In00. A 100-ms timer delay (the time required for an OMRON Proximity Sensor to stabilize) is created in the user program. After the timer times out, input a changes to TRUE, and then input Jxx_Ch1_In01 causes output *Jxx_Ch1_Out00* to change to TRUE after input a changes to TRUE.

Variable	Data type	Initial value	Address	Comment
SensorVcc	BOOL	FALSE	IOBus://rack#0/slot#0/Ch1_In/Ch1_In00	Sensor power supply voltage
SensorIn	BOOL	FALSE	IOBus://rack#0/slot#0/Ch1_In/Ch1_In01	Input from sensor
SensorOK	BOOL	FALSE		Sensor stable operation flag
InData	BOOL	FALSE		Sensor input data valid flag
egPowerDelay	TON			Sensor input delay timer

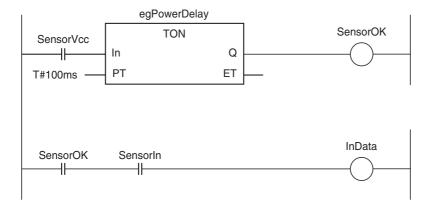

Output Wiring Precautions

Output Short-circuit Protection


If a load connected to the output terminals is short-circuited, output components and the printed circuit boards may be damaged. To guard against this, incorporate a fuse in the external circuit. Use a fuse with a capacity of about twice the rated output.

Transistor Output Residual Voltage


A TTL circuit cannot be connected directly to a transistor output because of the transistor's residual voltage. It is necessary to connect a pull-up resistor and a CMOS IC between the two.

Output Surge Current

When connecting a transistor or triac output to an output device having a high surge current (such as an incandescent lamp), steps must be taken to avoid damage to the transistor or triac. Use either of the following methods to reduce the surge current.

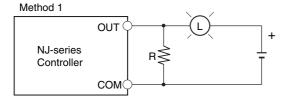

Add a resistor that draws about 1/3 of the dark current consumed by the bulb.

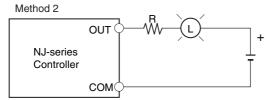

Add a control resistor.

4-4-7 Wiring the Built-in EtherCAT Port

For information on wiring the built-in EtherCAT port, refer to the *NJ-series CPU Unit Built-in EtherNet/IP Port User's Manual* (Cat. No. W506).

Wiring B7A Interface Units 4-4-8

Terminal Arrangement

Terminal	Name	Function	Word	Appearance
1	Port 1 power supply: V1	Connect to the + terminal of the B7A Link Terminal to be connected to port 1 (only when using a common power supply).	n	Connector with clamps
2	Port 1 signal: SIG1	Connect to the SIG terminal of the B7A Link Terminal to be connected to port 1.		(a) (b) (c) (c) (c) (c) (c) (c) (c) (c) (c) (c
3	Port 1 ground: G1	Connect to the – terminal of the B7A Link Terminal to be connected to port 1.		© 3G1 ⊕ 4V2 sig 2 6SIG2
4	Port 2 power supply: V2	Connect to the + terminal of the B7A Link Terminal to be connected to port 2 (only when using a common power supply).	n+1	⊖
5	Port 2 signal: SIG2	Connect to the SIG terminal of the B7A Link Terminal to be connected to port 2.		⊕
6	Port 2 ground: G2	Connect to the – terminal of the B7A Link Terminal to be connected to port 2.		(a) (b) (c) (c) (c) (c) (c) (c) (c) (c) (c) (c
7	Port 3 power supply: V3	Connect to the + terminal of the B7A Link Terminal to be connected to port 3 (only when using a common power supply).	n+2	
8	Port 3 signal: SIG3	Connect to the SIG terminal of the B7A Link Terminal to be connected to port 3.		
9	Port 3 ground: G3	Connect to the – terminal of the B7A Link Terminal to be connected to port 3.		
10	Port 4 power supply: V4	Connect to the + terminal of the B7A Link Terminal to be connected to port 4 (only when using a common power supply).	n+3	
11)	Port 4 signal: SIG4	Connect to the SIG terminal of the B7A Link Terminal to be connected to port 4.		
12	Port 4 ground: G4	Connect to the – terminal of the B7A Link Terminal to be connected to port 4.		
13	+ power supply: V	Connect to the + terminal of the external power supply.		
14)	- power supply: G	Connect to the – terminal of the external power supply.		

Note Terminals V1, V2, V3, V4, and V are connected internally in the Unit, and terminals G1, G2, G3, G4, and G are connected internally in the Unit.

Preparing and Connecting Cables

Use the following procedure to prepare and connect the cables.



Precautions for Correct Use

Always turn OFF the Unit's power supply and communications power supply before attaching or removing connectors.


1 Preparing the Covering

First, use the following procedure to prepare the cable.

1 Strip approximately 10 mm of the sheath covering the signal lines to match the crimp terminals. Next, twist together the wires of each signal line firmly.




2 Use vinyl tape or a heat-shrink tube to cover the end of the VCTF cable sheath, as shown in the following diagram.

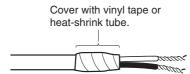

2 Preparing Cable Signal Lines

Attach the crimp terminals to the cable's signal lines.

Attaching Crimp Terminals
 Insert the end of the cable into the terminal and crimp.

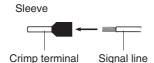

Recommended Crimp Terminals for Cables

Model	Manufacturer
Al-series Al0.75-8GY	PHOENIX CONTACT
(Product code: 3200519)	
H0.75/14	Nihon Weidmuller Co., Ltd.
(Product code: 046290)	
TE-0.75	NICHIFU Co., Ltd.



Precautions for Correct Use

Always use the specified crimp tool to attach the crimp terminals. If a crimp tool is not used, the cable will not be crimped properly, which may cause the cable to become detached from the terminal.

The following crimp tools are available.

Model	Manufacturer
UD6 (Product code: 1204436)	PHOENIX CONTACT
or ZA3 Series	
Crimper PZ1.5	Nihon Weidmuller Co., Ltd.
(Product code: 900599)	
NH77	NICHIFU Co., Ltd.


2 Insulate the stripped end of each signal line with vinyl tape or heat-shrink tubing.

3 Connecting Cables


Use the following procedure to connect cables to the connection terminals.

Orient the connector properly, and then insert the signal lines fully into the back of each terminal hole in the connector, as shown in the following diagram. (The signal lines are secured in this way, without requiring the use of a tool.) If crimp terminals are not used on the signal lines, use a small flat-blade screwdriver to press down on the orange tab to insert the signal lines.

Power Supply on One Side (Common Power Supply)

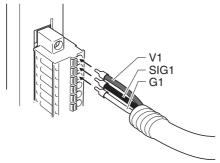


Power Supply on Both Sides (Separate Power Supplies)

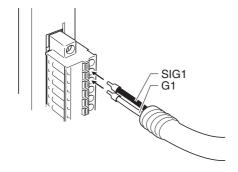



Additional Information

To remove the signal lines from the connector, press down on the orange tab while pulling out the signal line, as shown in the following diagram.

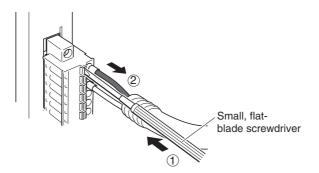



Precautions for Correct Use

To remove the connector from the Unit, fully unscrew the set screws from both sides of the connector, and then remove the connector. Forcibly pulling the connector while the set screws are still attached may damage the connector.

Connection Diagrams




Precautions for Correct Use


- Confirm that terminals are connected correctly. If connections are incorrect, the internal components of the B7A Interface Unit and B7A Link Terminal may be damaged.
- · Route the signal lines in separate ducts both inside and outside the control panel to isolate them from power lines.
- Connect cables at a distance that is within the range given in the specifications.
- Always turn OFF the power to the CPU Unit and all other Units before connecting the communications cables.
- · Always lay communications cables within ducts.

Standard Mode

Power Supply on One Side (Common Power Supply)

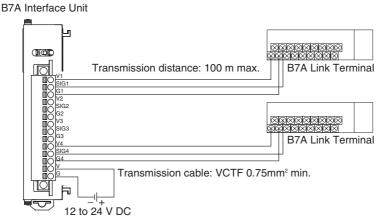


Power Supply on Both Sides (Separate Power Supplies)

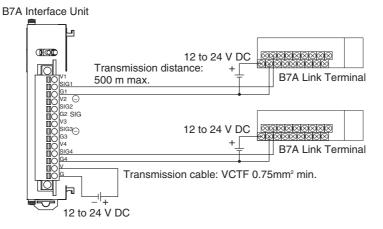


High-speed Mode

Note If shielded cable is not used, the maximum transmission distance is 10 m regardless of whether a common or separate power supplies are used. (Use VCTF cable of 0.75 mm² or higher.)

• Power Supply on One Side (Common Power Supply)

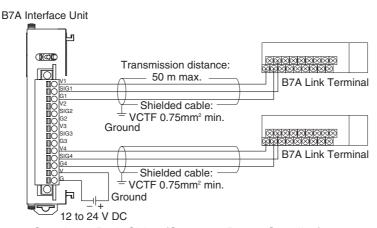

• Power Supply on Both Sides (Separate Power Supplies)

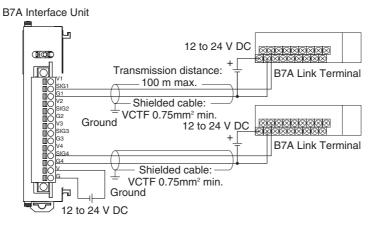


EtherCAT Slave Device Connection Examples

This section describes how to use EtherCAT communication cables to connect the built-in EtherCAT port to slave devices.

Connect the built-in EtherCAT port to the ECAT IN connector on the slave device. Connect the ECAT OUT connector to the ECAT IN connector on the next slave device. Do not connect the ECAT OUT connector on the last slave device.

The following figure shows a connection example for the EtherCAT communications cables between the built-in EtherCAT port and OMNUC G5-series Servo Drives.

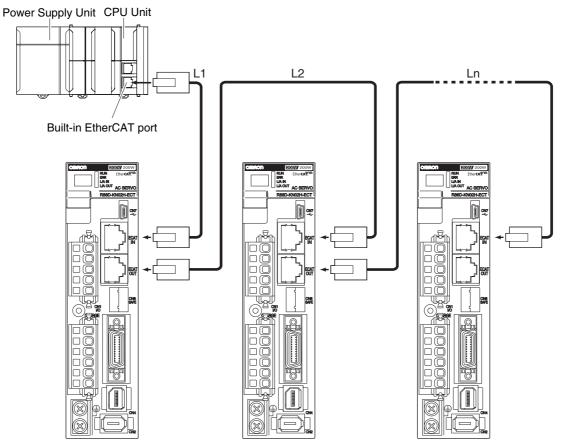



Precautions for Correct Use

- Always turn OFF the power supply to the CPU Unit and Servo Drives before you connect or remove the EtherCAT communications cables.
- Use a cable length between nodes (L1, L2, . . . Ln) of 100 m max.
- · Do not use an Ethernet hub to relay the network. EtherCAT communications may not operate correctly if you use an Ethernet hub.

4-5 Control Panel Installation

To ensure system reliability and safety, the system must be designed and configured according to the installation environment (temperature, humidity, vibration, shock, corrosive gases, overcurrent, noise, etc.).

4-5-1 Temperature

Panels have been reduced in size due to space-saving and miniaturization in devices and systems, and the temperature inside the panel may be at least 10 to 15°C higher than outside the panel. Implement the following measures against overheating at the installation site and in the panel, and allow a sufficient margin for the temperature.


High Temperatures

Use the following cooling methods as required, taking into account the ambient temperature and the amount of heating inside the panel.

Natural Cooling


Natural cooling relies on natural ventilation through slits in the panel, rather than using cooling devices such as fans or coolers. When using this method, observe the following points.

- Do not install the Controller at the top of the panel, where hot air tends to stagnate.
- To provide ventilation space above and below the Controller, leave sufficient distance from other devices, wiring ducts, etc.
- Do not mount the Units in the wrong direction (e.g., vertically or upside down). Doing so may cause abnormal heating in the Controller.
- Do not install heat-generating equipment, such as heaters, transformers, and devices with high resistance, directly above the panel.
- Do not install the Controller in a location exposed to direct sunlight.

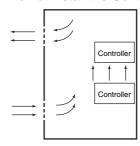


Natural Cooling

Forced Ventilation (by Fan at Top of Panel)

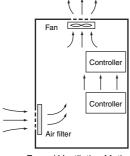


Forced Ventilation Method

• Forced Air Circulation (by Fan in Closed Panel)

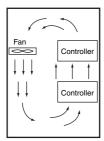

Forced Air Circulation

• Room Cooling (Cooling the Entire Room Where the Control Panel Is Located)

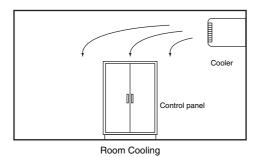


Low Temperatures

The Controller may not start normally if the temperature is below 0°C when the power is turned ON. Maintain an air temperature of at least approximately 5°C inside the panel, by implementing measures such as installing a low-capacity space heater in the panel. Alternatively, leave the Controller power ON to keep the Controller warm.

4-5-2 Humidity

Rapid temperature changes can cause condensation to occur, resulting in malfunctioning due to short-circuiting. When there is a possibility of this occurring, take measures against condensation, such as leaving the Controller power ON at night or installing a heater in the control panel to keep it warmer.

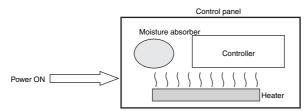

Examples of Measures against Condensation

4-5-3 Vibration and Shock

The Controller is tested for conformity with the sine wave vibration test method (IEC 60068-2-6) and the shock test method (IEC 60068-2-27) of the Environmental Testing for Electrotechnical Products. It is designed so that malfunctioning will not occur within the specifications for vibration and shock. If, however, the Controller is to be used in a location in which it will be directly subjected to regular vibration or shock, then implement the following countermeasures:

- Either separate the control panel from the source of the vibration or shock, or secure the Controller and the panel with rubber padding to prevent vibration.
- Make the building or the floor vibration-resistant.
- To prevent shock during operation to devices in the panel, such as electromagnetic contactors, secure either the source of the shock or the Controller with rubber padding.

4-5-4 Atmosphere

Using the Controller in any of the following locations can cause defective contact with connectors and corrosion of components. Implement countermeasures such as purging the air as required.


- In locations exposed to dust, dirt, salt, metal powder, soot, or organic solvents, use a panel with an airtight structure. Be careful of temperature increases inside the panel.
- In locations exposed to corrosive gas, purge the air inside the panel to clear the gas and then pressurize the inside of the panel to prevent gas from entering from outside.
- In locations where flammable gas is present, either use an explosion-protected construction or do not use the Controller.

4-5-5 **Electrical Environment**

When installing or wiring devices, make sure that there will be no danger to people and that noise will not interfere with electrical signals.

Controller Installation Location

Install the Controller as far away as possible from high-voltage (600 V or higher) and power devices to ensure safe operation and maintenance.

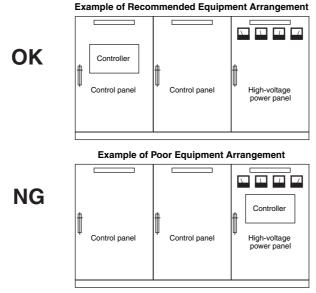


Examples of Equipment Arrangement in Panel with High-voltage Devices

Arrangement of Controller and Units

Observe the following points.

- · Place a Unit that does not generate much noise next to the CPU Unit, such as an Input Unit or Communications Unit.
- · The coils and contacts in electromagnetic contactors and relays in an external circuit are sources of noise. Do not install them close to the Controller. Locate them at least 100 mm away from the Controller.

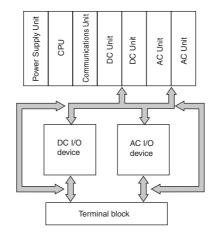


Example of Arrangement in Panel

Wire Layout for the Power Supply System

Observe the following points when wiring the power supply system.

- Separate the Controller power supply from the I/O device power supply and install a noise filter near the Controller power supply feed section.
- Use an isolating transformer to significantly reduce noise between the Controller and the ground. Install the isolating transformer between the Controller power supply and the noise filter, and do not ground the secondary coil of the transformer.
- Keep the wiring between the transformer and the Controller as short as possible, twist the wires well, and keep the wiring separate from high-voltage and power lines.

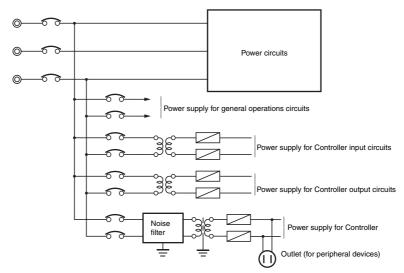


Power Supply System Diagram


Wiring External I/O Signal Lines

Observe the following points when wiring external I/O signal lines.


• To absorb reverse electromotive force when an inductive load is connected to an output signal, connect a surge suppressor near the inductive load in an AC circuit, and connect a diode near the inductive load in a DC circuit.

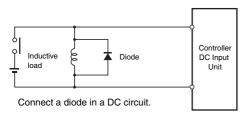

Input Signal Noise Countermeasures

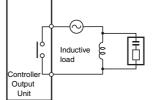




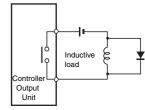

Connect a diode in a DC circuit.

Output Signal Noise Countermeasures

Never bundle output signal lines with high-voltage or power lines, and do not route them in close
proximity or parallel to such lines. If output signal lines must be routed in close proximity to such lines,
place them in separate ducts or conduits and be sure to ground the ducts or conduits.

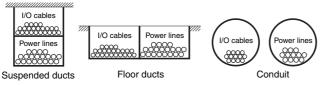

I/O Cable Arrangement

• If the signal lines and power lines cannot be routed in separate ducts, use shielded cable. Connect the shield to the ground terminal at the Controller, and leave it unconnected at the input device.

- Wire the lines so that common impedance does not occur. Such wiring will increase the number of wires, so use common return circuits. Use thick wires with sufficient allowance for the return circuits, and bundle them with lines of the same signal level.
- For long I/O lines, wire the input and output signal lines separately.
- Use twisted-pair wires for pilot lamps (and particularly lamps with filaments).
- · Use countermeasures, such as CR surge absorbers and diodes, for input device and output load device noise sources, as required.

External Wiring

Wiring, and noise countermeasures in particular, are based on experience, and it is necessary to closely manage wiring based on experience and information in the manuals.

Wiring Routes


Each of the following combinations includes different signal types, properties, or levels. They will cause the signal-to-noise ratio to drop due to factors such as electrical induction. As a general rule when wiring, either use separate cables or separate wiring routes for these items. Future maintenance operations and changes to the system will also be made easier by carefully organizing the wiring from the start.

- · Power lines and signal lines
- · Input signals and output signals
- · Analog signals and digital signals
- · High-level signals and low-level signals
- Communications lines and power lines
- · DC signals and AC signals
- High-frequency devices (such as Inverters) and signal lines (communications)

Wiring Methods


Observe the following points when wiring power supply and signal cables.

- When routing signal cables with differing characteristics through the same duct, always keep them separated.
- As much as possible, avoid routing multiple power supply lines through the same duct. If it cannot be avoided, then construct a partition between them in the duct and ground the partition.

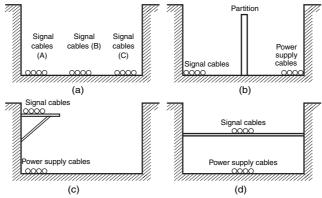


Partitioning Methods for Signal and Power Supply Cables

• To avoid overheating the conduits when using conduits for wiring, do not place wires for a single circuit in separate conduits.

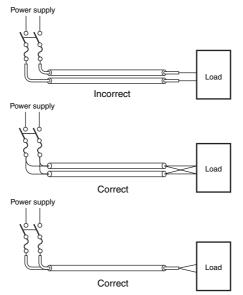

Parallel Wiring (Single Phase)

- Power cables and signal cables adversely affect each other. Do not wire them in parallel.
- · Noise induction may occur if the Controller is installed in a panel that includes high-voltage devices. Whenever possible, wire and install them separately. (Refer to Controller Installation Location on page 4-52.)
- Either install the Controller a minimum of 200 mm away from high-voltage lines or power lines, or place the high-voltage lines or power lines in metal tubing and completely ground the metal tubing to 100 Ω or less.

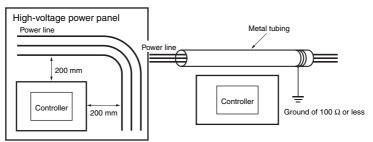

Example: Separating Controller from Power Lines

Other Precautions

- · Basic I/O Units have both plus and minus commons, so pay attention to the polarity when wiring.
- · Optical fiber cable looks like ordinary communications cable or power cable, but internally it consists of fibers, tension members, other protective materials. It must be handled with care. In particular, optical fiber cable must be installed according to prescribed methods and standards. Do not subject optical fiber cable to severe tensile shock, excessive bending, twisting, or excessive constriction. For details on wiring optical fiber cables, refer to the following manuals.
 - SYSMAC H-PCF Optical Fiber Cables Installation Guide (Cat. No. W156)
 - SYSMAC Optical Ring Controller Link Units Operation Manual (Cat. No. W370)

4-5-6 Grounding

Grounding has the following two purposes.

- Protective Grounding
 - Protective grounding is done to ensure safety. It is intended to prevent electrical shock by grounding the electrical potential that is generated by factors such as leakage, induction, or failure.
- Functional Grounding

Functional grounding is done to protect device and system functions, including prevention of noise from external sources, or prevention of noise from devices or equipment that could have harmful effects on other devices or equipment.

Grounding requirements sometimes depend on the situation, based on experimentation. It is important to sufficiently check the particular circumstances before grounding.


Grounding Methods and Precautions

Principles of One-point Grounding

For devices to operate properly, the reference potential between the devices must be stabilized. Use one-point grounding so that noise current does not flow to ground lines between the devices.

Whenever possible, use an independent ground (with the ground pole separated by a minimum of 10 m from any other ground pole).


- Ground to 100 Ω or less, and if possible use a separate ground from those of other devices. (Refer to figure (a) in the diagram below.)
- If using an independent ground is not possible, then use a common ground as shown in figure (b). Connect to the ground pole of the other device.
- Never connect to the same ground as a device that draws a large amount of power, such as a motor or inverter. Ground the devices separately to avoid mutually adverse influences.
- To prevent electrical shock, do not connect to ground poles (or steel frames) to which multiple devices are connected.
- Use a ground pole as close to the Controller as possible and keep the ground line as short as possible.

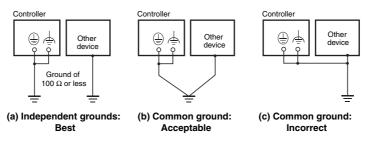

Grounding Methods


Precautions when Grounding

• If the same ground is used for both the signal lines and the enclosure, isolate the channel base (a grounded metal plate inside a control panel) with an insulating material

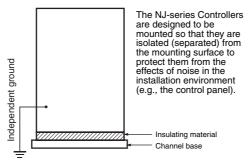

Example: Insulating and Grounding an Enclosure

- To prevent influence from leakage current from other electrical devices, electrically isolate the panel in which the Controller is housed from other devices.
- · If high-frequency equipment is present, then ground not only the high-frequency equipment but also the panel itself in which the Controller is housed.
- As shown in the following diagram, when using shielded cable for I/O wiring, connect the shield near the Controller to the enclosure ground terminal. Follow the instructions in the Communications Unit manual for preparing shielded communications cable.

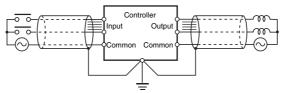


Shielded Cable Ground

Controller Ground Terminals

The Controller has the following two ground terminals.

- Protective ground terminal: Always connected to the Controller chassis to prevent electrical shock.
- Functional ground terminal: Connected to a neutral point in the noise filter to provide a ground when power supply noise causes malfunctioning.

When the functional ground terminal is correctly grounded, it is generally effective in suppressing power supply common noise. Occasionally, however, grounding this terminal will result in picking up more noise, so be careful when using it.

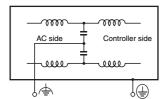

Controller Ground Terminals

Grounding for AC Power Supply Units

When wiring to an AC Power Supply Unit, if one power supply phase of the equipment is grounded, always connect the grounded phase to the L2/N terminal.



Troubleshooting

This section describes the confirmation methods and corrections for errors that occur in the NJ-series Controller and describes hardware-related errors that can occur in the PLC Function Module.


5-1	Operat	tion after an Error	5-2
	5-1-1	Overview of NJ-series Status	. 5-2
	5-1-2	Fatal Errors in the CPU Unit	. 5-3
	5-1-3	Non-fatal error in CPU Unit	. 5-4
5-2	Trouble	eshooting	5-11
	5-2-1	Checking to See If the CPU Unit Is Operating	5-11
	5-2-2	Troubleshooting Flowchart for Non-fatal Errors	5-12
	5-2-3	Error Table	5-12
	5-2-4	Error Descriptions	5-18
	5-2-5	Troubleshooting Errors That Are Not in the CPU Unit	5-43

Operation after an Error 5-1

This section describes the error status of the NJ-series Controller and the operation that occurs after an error is detected. Refer to 5-2 Troubleshooting for details on corrections for specific errors. Refer to the NJ-series Troubleshooting Manual (Cat. No. W503) for all of the errors that may occur in an NJ-series Controller.

5-1-1 **Overview of NJ-series Status**

You can check the operating status of the CPU Unit with the PWR, RUN, and ERROR indicators on the front panels of the Power Supply Unit and CPU Unit.

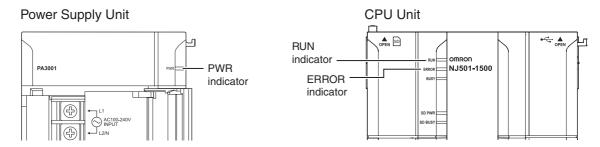

The following table shows the status of front-panel indicators, the status of user program execution, and the ability to connect communications to the Sysmac Studio or NS-series PTs during startup, during normal operation, and when errors occur.

CPU Unit operating status		Fr	Front-panel indicators			Communications
		PWR (green)	RUN (green)	ERROR (red)	User program execution status	with Sysmac Stu- dio or NS-series PT
Startup		Lit	Flashing (1-s intervals)	Not lit	Stopped.	Not possible.
Normal opera-	RUN mode	Lit	Lit	Not lit	Continues.	Possible.
tion	PROGRAM mode	Lit	Not lit	Not lit	Stopped.	
	Power Supply Error*1	Not lit	Not lit	Not lit	Stopped.	Not possible.
	CPU Unit Reset*1	Lit	Not lit	Not lit	Stopped.	
Fatal error in CPU Unit	Incorrect Power Supply Unit Con- nected*1	Lit	Flashing (3-s intervals)	Lit	Stopped.	
	CPU Unit Watch- dog Timer Error*1	Lit	Not lit	Lit	Stopped.	
	Major fault*2	Lit	Not lit	Lit	Stopped.	Possible. (Commu-
Non-fatal error in CPU Unit	Partial fault*2	Lit	Lit	Flashing (1-s intervals)	Continues.*3	nications can be connected from an NS-series PT if Eth-
	Minor fault*2	Lit	Lit	Flashing (1-s intervals)	Continues.	erNet/IP is operat- ing normally.)
	Observation*2	Lit	Lit	Not lit	Continues.	

Refer to 5-1-2 Fatal Errors in the CPU Unit for information on individual errors.

Refer to 5-1-3 Non-fatal error in CPU Unit for information on individual errors.

^{*3} The function module where the error occurred stops.

5-1-2 Fatal Errors in the CPU Unit

Types of Fatal Errors

Some errors are fatal and prevent the CPU Unit from operating. This section describes the errors that cause the operation of the CPU Unit to stop. The Sysmac Studio and NS-series PTs cannot connect communications if a fatal error occurs.

Power Supply Error

Power is not supplied, the voltage is outside of the allowed range, or the Power Supply Unit is faulty.

CPU Unit Reset

The CPU Unit stopped operation because of a hardware error. Other than hardware failures, this error also occurs at the following times.

- The power supply to an Expansion Rack is OFF.
- The I/O Connecting Cable is incorrectly installed.
 - The IN and OUT connectors are reversed.
 - The connectors are not mated properly.
- There is more than one I/O Control Unit on the CPU Rack or there is an I/O Control Unit on an Expansion Rack.

Incorrect Power Supply Unit Connected

There is a CJ-series Power Supply Unit connected to the CPU Rack. The operation of the Controller is stopped.

CPU Unit Watchdog Timer Error

This error occurs in the CPU Unit. This error occurs when the watchdog timer times out because of a hardware failure or when temporary data corruption causes the CPU Unit to hang.

Checking for Fatal Errors

You can identify fatal errors based on the status of the PWR indicator on the Power Supply Unit and the RUN and ERROR indicators on the CPU Unit, as well as by the ability to connect communications to the Sysmac Studio.

	Indicator	Communications	CPU Unit operating	
PWR (green)	RUN (green)	ERROR (red)	with Sysmac Studio	status
Not lit	Not lit	Not lit	Not possible.*	Power Supply Error
Lit	Not lit	Not lit		CPU Unit Reset
Lit	Flashing (3-s intervals)	Lit		Incorrect Power Sup- ply Unit Connected
Lit	Not lit	Lit		CPU Unit Watchdog Timer Error

^{*} Power Supply Errors and Incorrect Power Supply Unit Connected errors can be differentiated with the indicators. There is no need to check communications with the Sysmac Studio.

5-1-3 Non-fatal error in CPU Unit

Event Levels

Non-fatal errors that occur are managed as Controller events in the NJ-series Controller. Controller events are classified into levels according to the degree of the effect that the events have on control. When an event occurs, the Sysmac Studio or PT will display the level. Refer to the NJ-series Troubleshooting Manual (Cat. No. W503) for details on Controller events.

Major Fault Level

These errors prevent control operations for the entire Controller. If a major fault level error is detected, user program execution is stopped immediately and the loads for all slaves (including remote I/O) are turned OFF. With EtherCAT slaves and some CJ-series Special Units, you can set the slave settings or Unit settings to select whether outputs will go OFF or retain their previous status. You cannot reset major fault level errors from the user program, the Sysmac Studio, or an NS-series PT. To recover from a major fault level error, remove the cause of the error, and either cycle the power supply to the Controller or reset the Controller from the Sysmac Studio.

Partial Fault Level

These errors prevent control operations in a certain function module in the Controller. The NJ-series CPU Unit continues to execute the user program even after a partial fault level error occurs. You can include error processing in the user program to safely stop any devices in operation. After you remove the cause of the error, execute one of the following to return to normal status.

- Reset the error from the user program, the Sysmac Studio, or an NS-series PT.
- Cycle the power supply.
- Reset the Controller from the Sysmac Studio.
- Minor Fault Level

These errors prevent part of the control operations in a certain function module in the Controller. The troubleshooting for minor fault level errors is the same as the processing for partial fault level errors.

Observations

These errors do not affect the control operations of the Controller. Observations serve as warnings to the user so that the error does not develop into an error at a higher level.

Events that are classified as information do not indicate errors.

Operation for Each Level

The operation that is performed when an error occurs depends on the error level of the Controller event.

	Event level		Controller information			
Item		Major fault level	Partial fault level	Minor fault level	Observation	Information
Definition		These errors are serious errors that prevent control operations for the entire Controller.	These errors prevent all of the control in a function module other than PLC Function Module.	Errors that prevent a portion of control in one of the function modules.	Errors that do not affect control.	Information level events are not errors, but infor- mation provided to the user in the event log.
Event examples (Only a few examples are provided here. Refer to the <i>NJ-series Troubleshooting Manual</i> (Cat. No. W503) for a complete list of errors.)		I/O Bus Check Error (PLC Function Mod- ule)	Motion Control Period Exceeded (Motion Control Function Module) Communications Controller Error (EtherCAT Master Function Module)	Positive Limit Input Detected (Motion Control Function Module) Analog Input Disconnection Detected (CJseries Unit) Low Battery Voltage (PLC Function Module)	Packet Discarded Due to Full Receive Buffer (Ether-Net/IP Function Module)	Power ON Power Interrupted Memory All Clear
Front- panel indi- cators*1	PWR (green)	Lit.	Lit.	Lit.	Lit.	Lit.
	RUN (green)	Not lit.	Lit.	Lit.	Lit.	Lit.
	ERROR (red)	Lit.	Flashes at 1-s intervals.	Flashes at 1-s intervals.	Not lit.	Not lit.

Event level			Controller information			
Item		Major fault level	Partial fault level	Minor fault level	Observation	Information
Operation of NJ- series CPU Unit	RUN out- put on Power Supply Unit	OFF	ON	ON	ON	ON
	User program execution status	Stops.	Continues.*2	Continues.	Continues.	Continues.
	Outputs turned OFF	Yes	No	No	No	No
	Error reset	Not possible.	Depends on the nature of the error.	Depends on the nature of the error.		
	Event logs	Recorded. (Some errors are not recorded.)	Recorded.	Recorded.	Recorded.	Recorded.
Outputs from EtherCAT slaves and Basic Output Units		Refer to the I/O Operation for a Major Fault Level Controller Error on page 5-7.	Errors in EtherCAT Master Function Module: Depends on settings in the slave. Errors in other function modules: Depends on user program.	Depends on the user program.	Depends on the user program.	Depends on the user program.
Sysmac Studio display (while online)		Error messages are automatically displayed. You can display detailed information in the Troubleshooting Dialog Box.			These items are not displayed on the error display.	

^{*1} If multiple Controller errors have occurred, the indicators show the error with the highest error level.

^{*2} Operation stops in the function module (Motion Control Function Module, EtherCAT Master Function Module, or Ether-Net/IP Function Module) in which the error occurred.

Operation in the Function Module Where an Error Event Occurred

Event level Function module	Major fault level	Partial fault level	Minor fault level	Observation
PLC Function Module	Operation stops.		Operation continues.	
Motion Control Function Module		All axes stop. (The stop method depends on the error.)	 The affected axis/axes group stops. (The stop method depends on the settings.) The motion control instructions that are related to axis operation are not executed. 	 Axis operation continues. The motion control instructions that are not related to axis operation are not executed.
EtherCAT Master Function Module		EtherCAT communications stop.	EtherCAT communications stop or continue depending on the fail-soft operation settings.	EtherCAT communications continue.
EtherNet/IP Function Module		EtherNet/IP commu- nications stop. (The Sysmac Studio and NS-series PT cannot connect communica- tions.)	Part of the EtherNet/IP communications stop. (It is possible to connect communications when the Sysmac Studio or NS-series PT communications connection is not the cause of the error.)	EtherNet/IP communications continue.

I/O Operation for a Major Fault Level Controller Error

- The following table gives the operation for the following errors.
 - Unsupported Unit Detected
 - I/O Bus Check Error
 - End Cover Missing
 - Incorrect Unit/Expansion Rack Connection
 - Duplicate Unit Number
 - Too Many I/O Points
 - I/O Setting Check Error

Unit	CPU Unit operation	Unit or slave operation
EtherCAT slave	The slave is placed in the Safe- Operational state.	Depends on the slave settings.*
CJ-series Basic I/O Unit	Refreshing is stopped.	 All outputs are turned OFF. All inputs are turned OFF.
CJ-series Special Unit	Refreshing is stopped.	Depends on the Unit operating specifications (the ERH indicator lights).
Servo Drive	Updating the command values is stopped.	All axes stop immediately.

^{*} Settings and setting methods depend on the slave. Refer to the manual for the slave. For a Servo Drive, operation depends on the setting of object 605E hex (Fault Reaction Option Code).

• The following table gives the operation for all other errors.

5-7

Unit	CPU Unit operation	Unit or slave operation
EtherCAT slave	The slave is placed in the Safe- Operational state.	Depends on the slave settings.*
CJ-series Basic I/O Unit	All outputs are turned OFF.	All outputs are turned OFF.
	Input refreshing continues.	External inputs are refreshed.
CJ-series Special Unit	Refreshing continues.	Depends on the Unit operating specifications.
Servo Drive	Updating the command values is stopped.	All axes stop immediately.

^{*} Settings and setting methods depend on the slave. Refer to the manual for the slave. For a Servo Drive, operation depends on the setting of object 605E hex (Fault Reaction Option Code).

Checking for Non-fatal Errors

Use the following methods to check for non-fatal errors.

Checking method	What you can check
Checking the indicators	You can use the indicators to confirm the Controller error level, the error status of the EtherCAT Master Function Module, and the error status of the EtherNet/IP Function Module.
Checking with the trouble- shooting function of Sysmac Studio	You can check for current Controller errors, a log of past Controller errors, error sources, error causes, and corrections.
Checking with the Trouble- shooter of an NS-series PT	You can check for current Controller errors, a log of past Controller errors, error sources, error causes, and corrections.
Checking with instructions that read function module error status	You can check the highest-level status and highest-level event code in the current Controller errors.
Checking with system-defined variables	You can check the current Controller error status for each function module.

This section describes the above checking methods.

Checking the Indicators

Checking the Level of a Controller Error

You can use the PWR indicator on the Power Supply Unit and the RUN and ERROR indicators on the CPU Unit to determine the event level for an error. The following table shows the relationship between the Controller's indicators and the event level.

	Indicator	Event level	
PWR (green)	RUN (green)	ERROR (red)	Everit level
Lit	Not lit	Lit	Major fault level
Lit	Lit	Flashing (1-s intervals)	Partial fault level
			Minor fault level
Lit	Lit	Not lit	Observation

Checking Errors in the EtherCAT Master Function Module and EtherNet/IP Function Module

For the EtherCAT Master Function Module and EtherNet/IP Function Module, use the EtherCAT and EtherNet/IP NET ERR indicators to determine whether a minor fault level error or higher-level error has occurred. The indicator lets you check the status given in the following table.

Indicator	Indicated status
EtherCAT NET ERR	EtherCAT Master Function Module Status
	Lit: An error for which normal status cannot be recovered through user actions (i.e., errors for which you must replace the CPU Unit or contact your OMRON representative) has occurred.
	Flashing: An error for which normal status can be recovered through user actions has occurred.
	Not lit: There is no minor fault level or higher-level error.
EtherNet/IP NET ERR	EtherNet/IP Function Module Status
	Lit: An error for which normal status cannot be recovered through user actions (i.e., errors for which you must replace the CPU Unit or contact your OMRON representative) has occurred.
	Flashing: An error for which normal status can be recovered through user actions has occurred.
	Not lit: There is no minor fault level or higher-level error.

Checking with the Troubleshooting Function of Sysmac Studio

When an error occurs, you can connect the Sysmac Studio online to the Controller to check current Controller errors and the log of past Controller errors.

Current Errors

Open the Sysmac Studio's Controller Error Tab Page to check the current error's level, source, source details, event name, event code, cause, and correction. Errors are not displayed for observations.

Log of Past Errors

Open the Sysmac Studio's Controller Log Tab Page to check the time of occurrence, level, source, source details, event name, event code, details, attached information 1 to 4, and corrections for past errors.

Refer to the *NJ-Series Sysmac Studio Version 1 Operation Manual* (Cat. No. W504) for details on troubleshooting with the Sysmac Studio.

Checking with the Troubleshooter of an NS-series PT

If you can connect communications between an NS-series PT and the Controller when an error occurs, you can check for current Controller errors and the log of past Controller errors.

Current Errors

Open the Controller Error Tab Page on the NS-series PT's Troubleshooter to check the current error's event name, event code, level, source, source details, details, and attached information 1 to 4. Observations are not displayed as errors.

Log of Past Errors

Open the Controller Event Log Tab Page on the NS-series PT's Troubleshooter to check the time of occurrence, level, source, event name, event code, details, and attached information 1 to 4 for past

Refer to the NS-series Programmable Terminals Programming Manual (Cat. No. V073) for details on the NS-series PT's Troubleshooter.

Checking with Instructions That Read Function Module Error Status

Instructions are provided that allow you to read the error status of each function module from the user program. These instructions get the status and the event code of the error with the highest level.

Applicable function module	Instruction name	Instruction
PLC Function Module	Get PLC Controller Error Status	GetPLCError
	Get I/O Bus Error Status	GetCJBError
Motion Control Function Module	Get Motion Control Error Status	GetMCError
EtherCAT Function Module	Get EtherCAT Error Status	GetECError
EtherNet/IP Function Module	Get EtherNet/IP Error Status	GetEIPError

For details on the instructions that get error status, refer to the NJ-series Instructions Reference Manual (Cat. No. W502).

Checking with System-defined Variables

You can check the error status variables in the system-defined variables to determine the status of errors in a Controller. You can read the error status variables from an external device by using communications. Refer to NJ-series CPU Unit Software User's Manual (Cat. No. W501) for the system-defined variables.


5-2 Troubleshooting

This section provides basic error identification and troubleshooting flowcharts. Use them when an error occurs in the NJ-series Controller. This section also describes the hardware errors that are related to the PLC Function Module and corrections for those errors.

5-2-1 Checking to See If the CPU Unit Is Operating

When an error occurs in the NJ-series Controller, use the following flowchart to determine whether the error is a fatal error or a non-fatal error.


Whenever possible, set the Sysmac Studio's communications connection in the flowchart to a direct USB connection. If you use Ethernet, there are many reasons that prevent a communications connection for the Sysmac Studio, so time is required to determine if a fatal or non-fatal error has occurred. If a communications connection from the Sysmac Studio is not possible, perform the troubleshooting procedure that is provided in the *NJ-series Troubleshooting Manual* (Cat. No. W503) before you assume that the error is a fatal error.

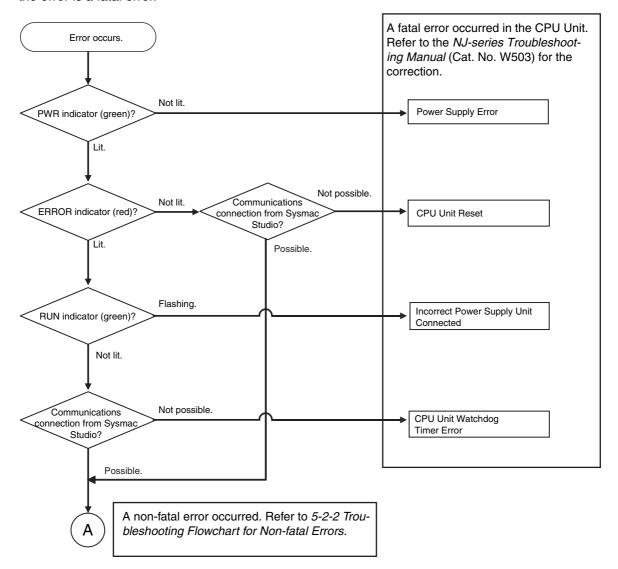

5-2-2 **Troubleshooting Flowchart for Non-fatal Errors**

For a non-fatal error, use the Sysmac Studio or an NS-series PT to troubleshoot the error with the following flowchart. You can use the indicators to check the following:

- Level
- Whether the error is in the EtherNet/IP Function Module or the EtherCAT Master Function Module
- If the source of the error is the EtherNet/IP Function Module or the EtherCAT Master Function Module, whether you can restore normal status yourself

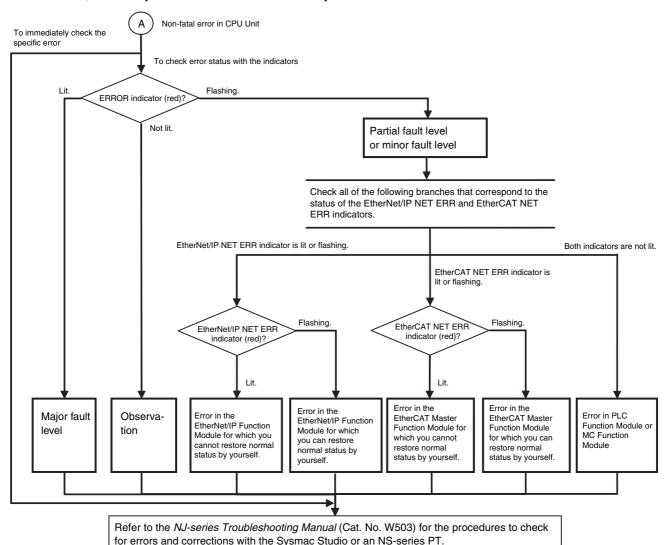

5-2-3 **Error Table**

The errors (i.e., events) that can occur in the PLC Function Module are given on the following pages. Event levels are given as following in the tables:

Maj: Major fault level Par: Partial fault level Min: Minor fault level Obs: Observation Info: Information

Refer to the NJ-series Troubleshooting Manual (Cat. No. W503) for all NJ-series event codes.

Errors for Self Diagnosis

Event code	Event name	ne Meaning	Assumed cause	Level					Reference
Event code	Event name		Assumed cause	Maj	Prt	Min	Obs	Info	neierence
00090000 hex	DIP Switch Setting Error	An error was detected in the DIP switch setting.	There is an error in the DIP switch setting.	1					page 5-19
000D0000 hex	Internal NJ- series Bus Check Error	A fatal error was detected on the internal bus.	 Conductive material has gotten inside. Noise The CPU Unit has failed. 	V					page 5-19
000E0000 hex	Non-volatile Memory Life Exceeded	The specified number of deletions for non-volatile memory was exceeded. Or, the number of bad blocks in memory exceeded the specified value.	Non-volatile memory life expired.	V					page 5-20
10010000 hex	Non-volatile Memory Restored or Formatted	An error was detected in the non-volatile memory check and file system recovery or formatting was executed. Previous files may have been deleted.	The Controller power supply was turned OFF while the BUSY indicator was lit. The power supply to the Controller was interrupted momentarily while the BUSY indicator was lit.	√ 					page 5-20
10020000 hex	Non-volatile Memory Data Corrupted	A file that must be in non-volatile memory is missing or corrupted.	The Controller power supply was turned OFF while the BUSY indicator was lit. The power supply to the Controller was interrupted momentarily while the BUSY indicator was lit. The CPU Unit has failed.	√					page 5-21
10080000 hex	Main Memory Check Error	An error was detected in the memory check of the main memory in the CPU Unit.	 Conductive material has gotten inside. Noise There is a software error. The CPU Unit has failed. 	V					page 5-22
00070000 hex	Real-Time Clock Stopped	The oscillation of the real-time clock stopped. The real- time clock is set to an illegal time.	The battery voltage is low. The battery connector has come loose. The Battery is missing.			√			page 5-22
00080000 hex	Real-Time Clock Failed	The real-time clock in the CPU Unit failed.	The CPU Unit clock has failed.			√			page 5-23
000B0000 hex	Low Battery Voltage	The voltage of the Battery has dropped.	The battery voltage is low. The battery connector has come loose. The Battery is missing.			√			page 5-23
10090000 hex	Battery- backup Mem- ory Check Error	An error was detected in the memory check of the battery-backup memory in the CPU Unit.	 The battery voltage is low. The battery connector has come loose. The Battery is missing. 			√			page 5-24

Event ands	Event nems	Mooning	Accumed			Leve	ı		Doforence
Event code	Event name	Meaning	Assumed cause	Maj	Prt	Min	Obs	Info	Reference
000C0000 hex	CPU Unit Overheat	The temperature inside the CPU Unit exceeded the specified value.	The ambient operating temper- ature is too high.				√		page 5-24
000F0000 hex	SD Memory Card Invalid Type	The current SD Memory Card is not supported.	An SD Memory Card that is not supported was inserted into the CPU Unit.				√		page 5-25
00100000 hex	SD Memory Card Life Exceeded	The specified number of deletions for the SD Memory Card was exceeded. Or, the number of bad blocks exceeded the specified value.	The service life of the SD Memory Card was exceeded.				√		page 5-25
10030000 hex	SD Memory Card Invalid Format	The file format of the SD Memory Card is not FAT16 or FAT32.	The file format of the SD Memory Card inserted in the CPU Unit is not FAT16 or FAT32.				1		page 5-26
10040000 hex	SD Memory Card Restored or Formatted	An error was detected during the file system check and the file system was restored. Files may have been deleted.	 The Controller power supply was turned OFF while the SD BUSY indicator was lit. The power supply to the Controller was interrupted momentarily while the SD BUSY indicator was lit. The SD Memory Card was removed while the SD PWR indicator was lit. The SD Memory Card is damaged. 				√		page 5-26
10060000 hex	SD Memory Card Data Corrupted	A file that must be in the SD Memory Card is missing or corrupted.	The Controller power supply was turned OFF while the SD BUSY indicator was lit. The power supply to the Controller was interrupted momentarily while the SD BUSY indicator was lit. The SD Memory Card was removed while the SD PWR indicator was lit. The SD Memory Card is damaged.				√		page 5-27
10070000 hex	SD Memory Card Access Power OFF Error	The power supply to the Controller was interrupted during access to the SD Memory Card.	The Controller power supply was turned OFF while the SD BUSY indicator was lit. The power supply to the Controller was interrupted momentarily while the SD BUSY indicator was lit.				V		page 5-27

Errors Related to Unit Configuration

Event code	Event name	Meaning	Assumed cause			Leve	I		Reference
Event code	Event name	Meaning	Assumed Cause	Maj	Prt	Min	Obs	Info	neierence
04010000 hex	I/O Bus Check Error	An error occurred in a bus line transmission between the CPU Unit and the Units in the rack slots. Or, detection of all Special I/O Units and CPU Bus Units was not completed when the power supply to the Controller was turned ON.	 The I/O Connecting Cable is disconnected or wires inside it are broken. Conductive material has gotten inside. The connector contact is faulty due to foreign material in the connector. Noise A Unit has failed. 	√					page 5-28
24010000 hex	Unsupported Unit Detected	An unsupported CJ-series Unit or Power Supply Unit is mounted.	An unsupported CJ-series Unit or Power Supply Unit was detected.	√					page 5-29
24020000 hex	Too Many I/O Points	The total number of I/O points in the connected CJ-series Units exceeds the maximum specified value of the CPU Unit.	The total number of I/O points in the connected CJ-series Basic I/O Units exceeds 2,560.	√					page 5-29
24030000 hex	End Cover Missing	The End Cover is not connected to right end of the CPU Rack or an Expansion Rack.	The End Cover is not connected to right end of the CPU Rack or an Expansion Rack. The End Cover is not connected properly.	V					page 5-30
24040000 hex	Incorrect Unit/Expan- sion Rack Connection	The number of Units or Expansion Racks exceeds the maximum value specified for the CPU Unit. Or, an Interrupt Input Unit was mounted to a unsupported slot or to an Expansion Rack.	More than 10 Units are connected to one Rack. More than three Expansion Racks are connected. More than two Interrupt Input Units are mounted. An Interrupt Input Unit was mounted to a unsupported slot or to an Expansion Rack.	٧					page 5-30
24050000 hex	Duplicate Unit Number	The same unit number is set for more than one Special I/O Unit or more than one CPU Bus Unit.	The same unit number is set for more than one Special I/O Unit or more than one CPU Bus Unit. The same unit number is assigned to a Special I/O Unit that uses more than one unit number and another Special I/O Unit.	V					page 5-31

Event code	Event name	Meaning	Assumed cause			Leve	ı		Reference
Event code	Event name	Weathing	Assumed cause	Maj	Prt	Min	Obs	Info	neierence
34010000 hex	I/O Setting Check Error	There is an inconsistency between a Unit model in the Unit Configuration in the CPU Unit and the Unit model that is mounted in the Controller.	A Unit model in the Unit Configuration in the CPU Unit is different from the Unit model that is mounted in the Controller.	√					page 5-32
64010000 hex	Impossible to Access Spe- cial Unit	An error occurred in data exchange between the CPU Unit and a Special Unit.	 An error occurred in the Special Unit. The Unit connection is faulty. Noise A Unit has failed. 			1			page 5-33
80010000 hex	Illegal Packet Discarded	An illegal packet was received during message communi- cations. The illegal packet was dis- carded.	Noise				V		page 5-33

Errors Related to Controller Operation

Ft.	F		A			Leve	I		Deferre
Event code	Event name	Meaning	Assumed cause	Maj	Prt	Min	Obs	Info	Reference
10200000 hex	User Program/Controller Configurations and Setup Transfer Error	The user program or Controller Configurations and Setup were not transferred correctly.	The user program or Controller Configurations and Setup are not correct because the power supply to the Controller was interrupted or communications with the Sysmac Studio were disconnected during a download of the user program or the Controller Configurations and Setup. The user program or Controller Configurations and Setup are not correct because the power supply to the Controller was interrupted during online editing. The user program or Controller Configurations and Setup are not correct because the power supply to the Controller was interrupted during and Setup are not correct because the power supply to the Controller was interrupted during a Clear All Memory operation.	√					page 5-34
10210000 hex	Illegal User Program Execution ID	The user program execution IDs set in the user program and in the CPU Unit do not match.	 The user program execution IDs set in the user program and in the CPU Unit do not match. A user program execution ID is set in the CPU Unit but not in the user program. 	√					page 5-35
10240000 hex	Illegal User Program	The user program is not correct.	There are more than 8 nesting levels for functions or function blocks.	√					page 5-35

Fuert -	Francis	No	A			Leve			Deference
Event code	Event name	Meaning	Assumed cause	Maj	Prt	Min	Obs	Info	Reference
10250000 hex	Illegal User Pro- gram/Con- troller Configura- tions and Setup	The user program or Controller Configurations and Setup is corrupted.	Power was interrupted while writing the user program or Controller Configurations and Setup to non-volatile memory. Non-volatile memory is deteriorating or has failed.	√					page 5-36
10230000 hex	Event Log Restoration Error	Restoring the event log failed.	A low battery voltage prevented retention of memory during a power interruption.				V		page 5-37
40160000 hex	Safe Mode	The Controller started in Safe Mode.	The power supply was turned ON to the Controller when Safe Mode was set on the DIP switch on the CPU Unit.	1					
10260000 hex	Trace Setting Transfer Fail- ure	The power supply was interrupted while transferring the trace settings.	The power supply was inter- rupted while transferring the trace settings.				1		page 5-37
90010000 hex	Clock Changed	The clock time was changed.	The clock time was changed.					V	page 5-37
90020000 hex	Time Zone Changed	The time zone was changed.	The time zone was changed.					1	page 5-38
90080000 hex	Variable Changed to TRUE with Forced Refreshing	Changing a variable to TRUE with forced refreshing was specified.	Changing a variable to TRUE with forced refreshing was specified by the user.					√	page 5-38
90090000 hex	Variable Changed to FALSE with Forced Refreshing	Changing a variable to FALSE with forced refreshing was specified.	Changing a variable to FALSE with forced refreshing was specified by the user.					√	page 5-38
900A0000 hex	All Forced Refreshing Cleared	Clearing all forced refreshing values was specified.	Clearing all forced refreshing values was specified by the user.					1	page 5-39
900B0000 hex	Memory All Cleared	All memory was cleared.	A user with Administrator rights cleared all of the memory.					V	page 5-39
900C0000 hex	Event Log Cleared	The event log was cleared.	The event log was cleared by the user.					1	page 5-39
90110000 hex	Power Turned ON	The power supply was turned ON.	The power supply was turned ON.					1	page 5-40
90120000 hex	Power Inter- rupted	The power supply was interrupted.	The power supply was inter- rupted.					1	page 5-40
90130000 hex	Operation Started	Operation was started.	A command to start operation was received.					1	page 5-40
90140000 hex	Operation Stopped	Operation was stopped.	A command to stop operation was received.					V	page 5-41
90150000 hex	Reset Exe- cuted	A reset was executed.	A reset command was received.					V	page 5-41
90160000 hex	User Program Execution ID Write	The user program execution ID was set or changed in the CPU Unit.	A user with Administrator rights changed the user program exe- cution ID that is set in the CPU Unit.					√	page 5-41
90180000 hex	All Controller Errors Cleared	All current errors were cleared.	All current errors were changed by the user.					V	page 5-42
90190000 hex	Forced Refreshing Cleared	Clearing a forced refreshing value was specified.	Clearing a forced refreshing value was specified by the user.					V	page 5-42

Error Descriptions 5-2-4

This section describes the information that is given for individual errors.

Controller Error Descriptions

The items that are used to describe individual errors (events) are described in the following copy of an error table.

Event name	Gives the name	of the error.		Event code	Gives the code of	f the error.		
Meaning	Gives a short des	scription of the error.						
Source	Gives the source	of the error.	Source details	Gives details on the source of the error.	Detection timing	Tells when the error is detected.		
Error attributes	Level	Tells the level of influence on control.*1	Recovery	Gives the recovery method.*2	Log category Tells which log the error is sat in.*3			
Effects	User program	Tells what will hap- pen to execution of the user pro- gram.*4	Operation	Provides special in from the error.	nformation on the operation that results			
Indicators		of the built-in EtherNe erCAT Master Function	•	•		tus is given only for		
System-defined	Variable		Data type		Name			
variables	Lists the variable names, data types, and meanings for system-defined variables that provide direct error notification, that are directly affected by the error, or that contain settings that cause the error.							
Cause and cor-	Assumed cause		Correction	Correction				
rection	Lists the possible causes, corrections, and preventive measures for the error.							
Attached information	This is the attach	This is the attached information that is displayed by the Sysmac Studio or an NS-series PT.						
Precautions/ Remarks	Provides precaut	ions, restrictions, and	supplemental infor	mation.				

*1 One of the following:

Major fault: Major fault level Partial fault: Partial fault level Minor fault: Minor fault level

Observation Information

*2 One of the following:

Automatic recovery: Normal status is restored automatically when the cause of the error is removed.

Error reset: Normal status is restored when the error is reset after the cause of the error is removed.

Cycle the power supply: Normal status is restored when the power supply to the Controller is turned OFF and then back ON after the cause of the error is removed.

Controller reset: Normal status is restored when the Controller is reset after the cause of the error is removed.

Depends on cause: The recovery method depends on the cause of the error.

*3 One of the following:

System: System event log Access: Access event log *4 One of the following:

Continues: Execution of the user program will continue.

Stops: Execution of the user program stops. Starts: Execution of the user program starts.

Errors for Self Diagnosis

Event name	DIP Switch Settir	ig Error		Event code	00090000 hex			
Meaning	An error was dete	ected in the DIP swite	ch setting.					
Source	PLC Function Mo	odule	Source details	None	Detection timing	At power ON or Controller reset		
Error attributes	Level	Major fault	Recovery	Cycle the power supply.	Log category	System		
Effects	User program	Stops.	Operation	All outputs are sto	pped.			
System-defined	Variable		Data type	Data type		Name		
variables	None							
Cause and	Assumed cause		Correction	Correction		Prevention		
correction	There is an error setting.	in the DIP switch	Turn OFF all pins	on the DIP switch.	Make sure that the DIP switch settings are correct.			
Attached information	Attached informa	Attached information 1: DIP switch readout value (00000000 hex to 0000000F hex)						
Precautions/ Remarks	None	None						

Event name	Internal NJ-series	Bus Check Error		Event code	000D0000 hex			
Meaning	A fatal error was	detected on the interr	nal bus.					
Source	PLC Function Mo	dule	Source details	None	Detection timing	Continuously		
Error attributes	Level	Major fault	Recovery	Cycle the power supply.	Log category	System		
Effects	User program Stops. Operation All outputs are sto dio may not be po			n to the Sysmac Stu-				
System-defined	Variable None		Data type		Name			
variables								
Cause and	Assumed cause		Correction		Prevention			
correction	Conductive material has gotten inside.		If there is conductive material nearby, blow out the CPU Unit with air.		Do not do any metal working in the vicinity of the control panel. Also, make sure that the operating environment is free of dirt and dust. Close the control panel.			
	Noise There is data corruption in bus signals. There is malfunctioning in bus interface circuits.		If the error occurs even after making the above correction, check the FG, and power supply lines, and other noise entry paths, and implement noise countermeasures as required.		Implement noise countermeasures.			
	The CPU Unit has failed. The internal bus is disconnected.		If this error persists even after you make the above two corrections, replace the CPU Unit.		None			
Attached information	Attached information 1: Controller information							
Precautions/ Remarks	troller clears the e	When this error occurs, the CPU Unit stops and the error is recorded in the event log. If cycling the power to the Con- roller clears the error, you will be able to see whether this error occurred by checking the event log. However, a restart is sometimes not possible depending on the error location.						

Event name	Non-volatile Memo	ory Life Exceeded		Event code	000E0000 hex		
Meaning	The specified num exceeded the specified		non-volatile memory	was exceeded. Or, t	the number of bad	blocks in memory	
Source	PLC Function Mod	lule	Source details	None	Detection timing	Continuously	
Error attributes	Level	Major fault	Recovery	Cycle the power supply.	Log category	System	
Effects	User program	Stops.	Operation	All outputs are sto	pped.		
System-defined	Variable		Data type		Name		
variables	None						
Cause and	Assumed cause		Correction		Prevention		
correction	Non-volatile memo	ory life expired.	Replace the CPU	Unit.			
Attached information	None						
Precautions/ Remarks	None						
Event name	Non-volatile Memo	ory Restored or Form	natted	Event code	10010000 hex		
Meaning	An error was detective files may have been		le memory check an	d file system recover	ry or formatting wa	s executed. Previous	
Source	PLC Function Mod	lule	Source details	None	Detection timing	At power ON or Controller reset	
Error attributes	Level	Major fault	Recovery	Cycle the power supply or reset the Controller.	Log category	System	
Effects	User program	Stops.	Operation	All outputs are sto	pped.	•	
System-defined	Variable		Data type		Name		
variables	None						
Cause and	Assumed cause		Correction		Prevention		
correction	The Controller pov turned OFF while t was lit.	ver supply was the BUSY indicator	Compare the project with the project on the Sysmac Studio. If they match, cycle the power supply to the Control-		Do not turn OFF the power supply while the BUSY indicator is lit.		
	The power supply was interrupted mo BUSY indicator wa	mentarily while the	clears the error. If the check that the devicetly. If the comparison if the error is not condevice does not operate all of memorical the project from the Controller of the Controller does not clear all of the Controller of the Controller does not clear all of the Controller does not clear	shows a mismatch, leared, or if the perate correctly, y and then downorm the Sysmac Stug the power supply resetting the Contact the error, the ed. Replace the stion may occur and prous if the power to ycled or the Control-	that the specified voltage and frequency	measures to ensure power with the rated uency is supplied in e power supply is	
Attached information	Attached information ted)	on 1: Recovered cor	ntent (00000000 hex	: File system recove	ry successful, 000	00001 hex: Format-	
Precautions/ Remarks			·	rates correctly, or tra to this, unexpected o		gain. If you cycle the r and can be very	

Event name	Non-volatile Memo	ory Data Corrupted		Event code	10020000 hex			
Meaning	A file that must be	in non-volatile mem	ory is missing or co	orrupted.	•			
Source	PLC Function Mod	dule	Source details	None	Detection timing	At power ON or Controller reset		
Error attributes	Level	Major fault	Recovery	Cycle the power supply or reset the Controller.	Log category	System		
Effects	User program	Stops.	Operation	All outputs are sto	pped.	·		
System-defined	Variable		Data type		Name			
variables	None							
Cause and	Assumed cause		Correction	Correction		Prevention		
correction	The Controller power supply was turned OFF while the BUSY indicator was lit.		Clear all of memory and then download the project from the Sysmac Studio.		Do not turn OFF the power supply while the BUSY indicator is lit.			
	The power supply to the Controller was interrupted momentarily while the BUSY indicator was lit.				Take appropriate measures to ensure that the specified power with the rated voltage and frequency is supplied in places where the power supply is unstable.			
	The CPU Unit has failed.		If this error remains even after making the above corrections, replace the CPU Unit.		None			
Attached information	None		•		•			
Precautions/ Remarks	None							

Event name	Main Memory Check Error Event code 10080000 hex						
Meaning	An error was dete	ected in the memory of	check of the main m	emory in the CPU U	nit.		
Source	PLC Function Mo	odule	Source details	None	Detection timing	Continuously	
Error attributes	Level	Major fault	Recovery	Cycle the power supply.	Log category	System	
Effects	User program	Stops.	Operation	All outputs are sto	pped.		
System-defined	Variable		Data type	_	Name		
variables	None	None					
Cause and	Assumed cause		Correction		Prevention		
correction	Conductive mate inside.	rial has gotten	If there is conduct blow out the CPU	tive material nearby, Unit with air.	vicinity of the con	etal working in the trol panel. Use the when it is closed	
	Noise Data corruption Microcomputer Memory write of		above causes, cyc Controller and sec error. If the error occurs the FG and power if noise is entering	If the error occurs frequently, check the FG and power supply lines to see if noise is entering on them. Imple- ment noise countermeasures as		countermeasures.	
	There is a softwa	re error.	If the error did not result from the		None		
	Data corruption mic rays or rad	n was caused by cosiation.	above causes, and cycling the power to the Controller or resetting the Controller does not clear the error.				
	The CPU Unit ha	s failed.	replace the CPU	,	Perform regular i	nspections.	
	Memory eleme	nt failure	.,				
	Memory periph	eral circuit failure					
Attached information	Attached informa	tion 1: Controller infor	rmation				
Precautions/ Remarks	None						
Event name	Real-Time Clock	Stopped		Event code	00070000 hex		
Meaning	The oscillation of	the real-time clock st	opped. The real-tim	e clock is set to an il	legal time.		
Source	PLC Function Mo	odule	Source details	None	Detection timing	At power ON or Controller reset	
Error attributes	Level	Minor fault	Recovery	Cycle the power supply.	Log category	System	
Effects	User program	Continues.	Operation		is not defined. The eries Units is also n		
System-defined	Variable		Data type		Name		
variables	_CurrentTime		DATE_AND_TIME		System Time		
Cause and	Assumed cause		Correction		Prevention		
correction	The battery volta	ge is low.	Replace the Batte real-time clock time	ery. Then adjust the ne.	Regularly replace	e the Battery.	
	The battery conn loose.	The battery connector has come loose.		Reconnect the connector and make sure it is mated correctly. Then adjust the real-time clock time.		n and shock.	
	The Battery is mi	ssing.	Install a Battery. T time clock time.	Install a Battery. Then adjust the real-time clock time.			
Attached information	None						
Precautions/	This error is ched	ked only when the po	wer is turned ON.				

Remarks

Event name	Real-Time Clock	Failed		Event code	00080000 hex			
Meaning	The real-time clo	ck in the CPU Unit	failed.					
Source	PLC Function Mo	odule	Source details	None	Detection timing	At power ON or Controller reset		
Error attributes	Level	Minor fault	Recovery	Cycle the power supply.	Log category	System		
Effects	User program	Continues.	Operation	•	ystem Time is not defined. The clock information ed by CJ-series Units is also not defined.			
System-defined	Variable		Data type	Data type		Name		
variables	_CurrentTime		DATE_AND_TIM	DATE_AND_TIME		System Time		
Cause and	Assumed cause		Correction	Correction		Prevention		
correction	The CPU Unit clo	ock has failed.	Replace the CPL	Replace the CPU Unit.		None		
Attached information	None		•					
Precautions/ Remarks	None							

Event name	Low Battery Volta	ge		Event code	000B0000 hex			
Meaning	The voltage of the	Battery has dropp	ed.					
Source	PLC Function Mo	dule	Source details	None	Detection timing	Continuously		
Error attributes	Level	Minor fault	Recovery	Error reset	Log category	System		
Effects	User program	Continues.	Operation	on No affected				
System-defined	Variable		Data type	Data type		Name		
variables	None							
Cause and	Assumed cause		Correction	Correction		Prevention		
correction	The battery voltage is low.		Replace the Battery.		Regularly replace the Battery.			
	The battery connector has come loose.			Reconnect the connector and make sure it is mated correctly.		Check for vibration and shock.		
	The Battery is mis	ssing.	Install a Battery.	Install a Battery.		Install a Battery.		
Attached information	None							
Precautions/ Remarks	You may loose the user data the next time that the power supply is interrupted.							

Event name	Battery-backup Me	emory Check Error		Event code	10090000 hex				
Meaning	An error was detec	cted in the memory of	check of the battery-	backup memory in th	ne CPU Unit.				
Source	PLC Function Modutrol Function Modu	lule or Motion Con- ile	Source details	PLC Function Module: None Motion Control Function Mod- ule: MC Common	Detection timing	At power ON or Controller reset			
Error attributes	Level	Minor fault	Recovery	Error reset	Log category	System			
Effects	User program	Continues.	Operation	series Units in the	s with a Retain attribute and memory for in the DM, EM, and Holding Areas were nal user program execution or normal Uray not be possible.				
System-defined	Variable		Data type		Name				
variables	_RetainFail		BOOL	BOOL		tion Failure Flag			
Cause and	Assumed cause		Correction		Prevention				
correction	The battery voltage	e is low.	Replace the Batte	Replace the Battery.		the Battery.			
	The battery connector has come loose.		Reconnect the cor sure it is mated co		Check for vibration	and shock.			
	The Battery is mis	sing.	Install a Battery.		Install a Battery.				
Attached information	None								
Precautions/ Remarks	, ,	After you implement the above countermeasures, set the correct data for the variables wit memory for CJ-series Units in the DM, EM, and Holding Areas.							
Event name	CPU Unit Overhea	ıt		Event code	000C0000 hex				
Meaning	The temperature in	nside the CPU Unit e	exceeded the specifi	eeded the specified value.					
Source	PLC Function Mod	lule	Source details	None	Detection timing	Continuously			
Error attributes	Level	Observation	Recovery		Log category	System			
Effects	User program	Continues.	Operation	Not affected.					
System-defined	Variable		Data type		Name				
variables	None								
Cause and	Assumed cause		Correction		Prevention				
correction	The ambient operation high.	ating temperature is			Make sure that the ambient temperature stays between 0 and 55°C.				
			If the ambient te	mperature exceeds poling fan or air con-					
Attached	None								

information Precautions/

Remarks

None

Event name	SD Memory Card	Invalid Type		Event code	000F0000 hex		
Meaning	The current SD M	emory Card is not su	ipported.				
Source	PLC Function Mod	dule	Source details	timing Control or whe Memor		At power ON, at Controller reset, or when SD Memory Card is inserted	
Error attributes	Level	Observation	Recovery		Log category	System	
Effects	User program	Continues.	Operation	SD PWR indicator Card is stopped.	r is not lit. Power supply to SD Memory		
System-defined	Variable		Data type		Name		
variables	_Card1Ready		BOOL		SD Memory Card Ready Flag		
Cause and	Assumed cause		Correction		Prevention		
correction	An SD Memory Card that is not supported was inserted into the CPU Unit.		Replace the SD Memory Card with an SD/SDHC card with a capacity of 32 GB or less.		Use an SD/SDHC card with a capacity of 32 GB or less for the SD Memory Card.		
Attached information	None						
Precautions/ Remarks	None						

Event name	SD Memory Card Life Exceeded			Event code	00100000 hex			
Meaning	The specified num specified value.	ber of deletions for	the SD Memory Car	d was exceeded. O	r, the number of bad	blocks exceeded the		
Source	PLC Function Module Source		Source details	None	Detection timing	At power ON, at Controller reset, or periodically		
Error attributes	Level	Observation	Recovery		Log category	System		
Effects	User program	Continues.	Operation	Not affected.		· · · · · · · · · · · · · · · · · · ·		
System-defined	Variable		Data type	Data type		Name		
variables	_Card1Deteriorated		BOOL	BOOL		d Life Warning Flag		
Cause and	Assumed cause		Correction		Prevention			
correction	The service life of Card was exceeded	,		Back up necessary files in the SD Memory Card. Or replace the SD Memory Card.		Regularly replace the SD Memory Card.		
Attached information	None		•		•			
Precautions/ Remarks		The data on the SD Memory Card may be corrupted. Normal user program operation may not be possible.						

Event name	SD Memory Card	Invalid Format		Event code 10030000 hex			
Meaning	The file format of t	he SD Memory Card	is not FAT16 or FAT32.				
Source	PLC Function Module		Source details	None	Detection timing	At power ON, at Controller reset, or when SD Memory Card is inserted	
Error attributes	Level	Observation	Recovery		Log category	System	
Effects	User program	Continues.	Operation	eration SD PWR indicator is not lit. You can fo ory Card from the Sysmac Studio.		rmat the SD Mem-	
System-defined	Variable		Data type		Name		
variables	_Card1Ready		BOOL	BOOL		Ready Flag	
Cause and	Assumed cause		Correction		Prevention		
correction	The file format of the SD Memory Card inserted in the CPU Unit is not FAT16 or FAT32.		Make sure that the correct SD Memory Card is inserted in the CPU Unit. If an incorrect SD Memory Card is inserted, replace it with the correct one. If the correct SD Memory Card is inserted, format it correctly before you use it.		Use an OMRON SD Memory Card. Do not format the SD Memory Card on a computer.		
Attached information	None						
Precautions/ Remarks	None						

Event name	SD Memory Card	Restored or Formatt	ed	Event code	10040000 hex			
Meaning	An error was dete	cted during the file s	ystem check and the	stem check and the file system was restored. Files may have been deleted.				
Source	PLC Function Module		Source details	None	Detection timing	At power ON or Controller reset		
Error attributes	Level	Observation	Recovery I		Log category	System		
Effects	User program	Continues.	Operation If the file is deleted, not be possible.		I, normal user progra	am operation may		
System-defined			Data type		Name			
variables	None							
Cause and	Assumed cause		Correction		Prevention			
correction	The Controller power supply was turned OFF while the SD BUSY indicator was lit.		Check that the correct file is on the SD Memory Card, or that the device operates correctly. If the correct file is		Do not turn OFF the power supply while the SD BUSY indicator is lit.			
	was interrupted me	The power supply to the Controller was interrupted momentarily while the SD BUSY indicator was lit.		not on the SD Memory Card, or if the device does not operate correctly, download the correct file to the SD Memory Card. Cycle the power supply to the Controller or reset the Controller and confirm that the system operates correctly.		Take appropriate measures to ensure that the specified power with the rated voltage and frequency is supplied in places where the power supply is unstable.		
		The SD Memory Card was removed while the SD PWR indicator was lit.				Do not remove the SD Memory Card while the SD PWR indicator is lit.		
	The SD Memory Card is damaged.		If this error occurs even though the above problem does not exist, replace the SD Memory Card and download the correct files to it.		None			
Attached information	None		•					
Precautions/ Remarks	The error is detect	ted at power ON or a	at a Controller reset o	only when SD Memo	ry Card diagnosis a	t startup is enabled		

Event name	SD Memory Card	Data Corrupted		Event code	10060000 hex	
			Sord is missing or as		10000000110x	
Meaning		in the SD Memory C		· .		I
Source	PLC Function Module		Source details	None	Detection timing	At power ON or Controller reset
Error attributes	Level	Observation	Recovery		Log category	System
Effects	User program	Continues.	Operation		is not lit. You can fo Sysmac Studio. Nor be possible.	
System-defined	Variable _Card1Ready		Data type		Name	
variables			BOOL		SD Memory Card	Ready Flag
Cause and			Correction		Prevention	
-	The Controller power supply was turned OFF while the SD BUSY indicator was lit.		Format the SD Memory Card and download the correct file.		Do not turn OFF the power supply while the SD BUSY indicator is lit.	
	The power supply to the Controller was interrupted momentarily while the SD BUSY indicator was lit.				Take appropriate measures to ensure that the specified power with the rated voltage and frequency is supplied in places where the power supply is unstable.	
	The SD Memory Card was removed while the SD PWR indicator was lit.				Do not remove the SD Memory Card while the SD PWR indicator is lit.	
	The SD Memory Card is damaged.		If the error cannot be cleared with the above corrections, replace the SD Memory Card with one that operates normally.		None	
Attached information	None					
Precautions/ Remarks	The error is detect	ed at power ON or a	t a Controller reset o	only when SD Memo	ry Card diagnosis at	startup is enabled.

Event name	SD Memory Card	Access Power OFF	Error	Event code	10070000 hex		
Meaning	The power supply	to the Controller was	interrupted during access to the SD Memory Card.				
Source	PLC Function Mod	dule	Source details	None	Detection timing	At power ON or Controller reset	
Error attributes	Level	Observation	Recovery		Log category	System	
Effects	User program	Continues.	Operation Operation is control is corrupted.		olled by the user pro	gram when the file	
System-defined	ned Variable		Data type		Name		
variables	_Card1PowerFail		BOOL	BOOL		Access Power	
Cause and	Assumed cause		Correction		Prevention		
correction	The Controller power supply was turned OFF while the SD BUSY indicator was lit.		Check that the correct file is on the SD Memory Card, or that the device operates correctly.		Do not turn OFF the power supply while the SD BUSY indicator is lit.		
The power supply to the Controller was interrupted momentarily while the SD BUSY indicator was lit.		If the correct file is not on the SD Memory Card, or if the device does not operate correctly, download the correct file to the SD Memory Card. Cycle the power supply to the Controller or reset the Controller and confirm that the system operates correctly. When you have finished the corrections, set the SD Memory Card Access Power Interruption Flag (_Card1PowerFail) to FALSE.		Take appropriate measures to ensure that the specified power with the rated voltage and frequency is supplied in places where the power supply is unstable.			
Attached information	None		,				
Precautions/ Remarks	When the measure	e is completed, chan	ge the SD Memory	Card Access Power	Interruption Flag to I	FALSE.	

Errors Related to Unit Configuration

Event name	I/O Bus Check Erro	or		Event code	04010000 hex	
Meaning		n a bus line transmis nd CPU Bus Units w				
Source	PLC Function Mod	ule	Source details	I/O bus master	Detection timing	Continuously
Error attributes	Level	Major fault	Recovery	Cycle the power supply.	Log category	System
Effects	User program Stops.		Operation	All outputs are stop	pped.	
System-defined	Variable		Data type		Name	
variables	None					
Cause and	Assumed cause		Correction		Prevention	
correction	The I/O Connecting Cable is disconnected or wires inside it are broken.		tor is mated proper	Make sure that the I/O cable connector is mated properly and then reconnect the connector. If the I/O cable is broken, replace it.		le is mated prop- on. Check for vibra-
	Conductive material has gotten inside.		If there is conductive material nearby, blow out the Units with air.		Do not do any metal working in the vicinity of the control panel. Use the control panel only when it is closed.	
	The connector contact is faulty due to foreign material in the connector.		If foreign material is stuck to the con- nector, take off the connector and remove the foreign material.		Make sure that the operating environment is free of dirt and dust.	
	Noise There is data corruption in bus signals. There is malfunctioning in bus interface circuits.		If the error did not result from the above causes, cycle the power to the Controller and see if that clears the error. If the error occurs frequently, check the FG, power supply lines, I/O Connecting Cables, and other noise entry paths, and implement noise countermeasures as required.		Implement noise countermeasures.	
	A Unit has failed. CPU Unit Special I/O Unit CPU Bus Unit I/O Connecting Cable		If the error did not result from the above causes, and cycling the power to the Controller or resetting the Controller does not clear the error, replace the attached Unit or the CPU Unit.		Perform regular inspections.	
Attached information	None					
Precautions/ Remarks	None					

Event name	Unsupported Unit	Detected		Event code	24010000 hex				
Meaning	An unsupported 0	CJ-series Unit or Pow	er Supply Unit is mo	ounted.					
Source	PLC Function Module Source details		I/O bus master	Detection timing	At power ON or Controller reset				
Error attributes	Level	Major fault	Recovery	Cycle the power supply.	Log category	System			
Effects	User program	Stops.	Operation	Operation All outputs are stop		oped.			
System-defined	efined Variable		Data type		Name				
variables	None								
Cause and	Assumed cause		Correction		Prevention				
correction	An unsupported CJ-series Unit or Power Supply Unit was detected.		CPU Unit or Powe	Remove the unsupported CJ-series CPU Unit or Power Supply Unit and replace it with a supported one.		Use a Unit that is supported by this CPU Unit.			
Attached	Attached informat	Attached information 1: Rack number where error was detected, 0 to 3							
information	Attached informat	ion 2: Slot number w	here error was dete	cted, 0 to 9					
	Attached informat	Attached information 3: Profile code that gives the Unit type							
Precautions/ Remarks				its that are mounted e e supported before u	•	Make sure that the			

Event name	Too Many I/O Points			Event code	24020000 hex		
Meaning	The total number of	of I/O points in the co	onnected CJ-series l	Jnits exceeds the ma	aximum specified va	lue of the CPU Unit.	
Source	PLC Function Module		Source details	I/O bus master	Detection timing	At power ON or Controller reset	
Error attributes	Level	Major fault	Recovery	Cycle the power supply.	Log category	System	
Effects	User program	Stops.	Operation All outputs are stop		oped.		
System-defined	Variable		Data type		Name		
variables	None						
Cause and	Assumed cause		Correction		Prevention		
correction	The total number of I/O points in the connected CJ-series Basic I/O Units exceeds 2,560.		Set the total number of I/O points in the CJ-series Basic I/O Units to 2,560 or less.		Set the total number of I/O points in the CJ-series Basic I/O Units to 2,560 or less.		
Attached information	Attached informati	on 1: Total number o	of I/O points in the C	J-series Basic I/O U	nits		
Precautions/ Remarks	None						

Event name	End Cover Missing	J		Event code	24030000 hex	
Meaning	The End Cover is a	not connected to righ	nt end of the CPU Ra	ack or an Expansion	Rack.	
Source	PLC Function Mod	lule	Source details	I/O bus master	Detection timing	Continuously
Error attributes	Level	Major fault	Recovery	Cycle the power supply.	Log category	System
Effects	User program	Stops.	Operation	All outputs are sto	pped.	
System-defined	Variable		Data type		Name	
variables	None					
Cause and	Assumed cause		Correction		Prevention	
correction	The End Cover is not co right end of the CPU Ra Expansion Rack.		Check that the End connected and firm not, connect it prop	•	Design a unit confincludes the End C	•
	The End Cover is not connected properly.				Confirm that End (correctly when you Controller.	Cover is connected assemble the
Attached information	None					
Precautions/ Remarks	None					
Event name	Incorrect Unit/Expa	ansion Rack Connec	tion	Event code	24040000 hex	
Meaning			ks exceeds the maxi ot or to an Expansion		for the CPU Unit. O	r, an Interrupt Input
Source	PLC Function Mod	lule	Source details	I/O bus master	Detection timing	At power ON or Controller reset
Error attributes	Level	Major fault	Recovery	Cycle the power supply.	Log category	System
Effects	User program	Stops.	Operation	All outputs are sto	pped.	
System-defined	Variable		Data type		Name	
variables	None					
Cause and	Assumed cause		Correction		Prevention	
correction	More than 10 Units one Rack.	s are connected to	Reduce the number of Units connected to the Rack to 10 or fewer.		Check the maximum number of connections allowed and design a config-	
	More than three Exconnected.	pansion Racks are	Reduce the number Racks to three or f		uration that fits within those ranges.	
	More than two Inte	errupt Input Units	Reduce the number Units to two or few	er of Interrupt Input er.		
	An Interrupt Input Unit was mounted to a unsupported slot or to an Expansion Rack.		Mount the Interrupt Input Units to slots 0 to 4 on the CPU Rack (i.e., as one of the five Units to the right of the CPU Unit).			
Attached information	None					
Precautions/ Remarks	None					

Event name	Duplicate Unit Nun	nhor		Event code	24050000 hex		
	<u>'</u>		than and Special I/O				
Meaning		nber is set for more t				A	
Source	PLC Function Mod	ule	Source details	I/O bus master	Detection timing	At power ON or Controller reset	
Error attributes	Level	Major fault	Recovery	Cycle the power supply.	Log category	System	
Effects	User program	Stops.	Operation	All outputs are sto	pped.		
System-defined	Variable		Data type		Name		
variables	None						
Cause and	Assumed cause		Correction		Prevention		
correction	The same unit number is set for more than one Special I/O Unit or more than one CPU Bus Unit.		Check that the same unit number is not used for more than one Special I/O Unit or CPU Bus Unit by checking the rotary switches. If the same unit number is used more than once for the same Unit configuration, change the unit number.		Make sure that the same unit number is not used for more than one Special I/O Unit. Also, make sure that the same unit number is not used for more than one CPU Bus Unit.		
	The same unit number is assigned to a Special I/O Unit that uses more than one unit number and another Special I/O Unit.		Check whether a Special I/O Unit or CPU Bus Unit that uses more than one unit number is included in the configuration. If there is, check to see if one of the unit numbers assigned to it is used by another Special I/O Unit or CPU Bus Unit. If it is, change the unit number.				
Attached	Attached information	on 1: Rack number	where error was dete	ected, 0 to 3			
information	Attached information	on 2: Slot number w	here error was dete	cted, 0 to 9			
	Attached information	Attached information 3: Special I/O Unit: Duplicated unit number + 20 hex CPU But Unit: Duplicated unit number + 10 hex					
Precautions/ Remarks	Check the model of	of the Special I/O Un	it. Some Special I/O	Units use up to fou	r unit numbers.		

Event name	I/O Setting Check	Error		Event code	34010000 hex				
Meaning	There is an incons mounted in the Co		Init model in the Uni	t Configuration in the	CPU Unit and the	Unit model that is			
Source	PLC Function Module		Source details	I/O bus master	Detection timing	At power ON, Controller reset, or Unit Configura- tion and Setup transfer			
Error attributes	Level	Major fault	Recovery	Cycle the power supply or reset the Controller.	Log category	System			
Effects	User program	Stops.	Operation	All outputs are stop	oped.				
System-defined	Variable		Data type		Name				
variables	None								
Cause and	Assumed cause		Correction	Correction					
correction	A Unit model in the Unit Configuration in the CPU Unit is different from the Unit model that is mounted in the Controller.		CPU Unit or the p	Correct the Unit Configuration in the CPU Unit or the physical Unit configuration so that there are no inconsistencies.		Make sure that the Unit Configuration in the CPU Unit and the physical Unit configuration are consistent.			
Attached information	Attached information 1: The lowest slot number where an error was detected on the CPU Rack: 0 to 9, When the CPU Rack is normal: 10								
	Attached informati	Attached information 2: The lowest slot number where an error was detected on Expansion Rack 1: 0 to 9, When Expansion Rack 1 is normal: 10							
	Attached informati		t number where an ck 2 is normal: 10	error was detected o	n Expansion Rack 2	2: 0 to 9, When			
	Attached informati		t number where an ck 3 is normal: 10	error was detected o	n Expansion Rack (3: 0 to 9, When			
Precautions/ Remarks	None								

Event name	Impossible to Acce	ess Special Unit		Event code	64010000 hex		
Meaning	An error occurred	in data exchange be	tween the CPU Unit	and a Special Unit.			
Source	PLC Function Mod	dule			Detection timing	Continuously	
Error attributes	Level	Minor fault	Recovery	Reset error, cycle power supply, or reset Controller.	Log category	System	
Effects	User program	Continues.	Operation	The Special Unit s	tops.	•	
System-defined	Variable		Data type		Name		
variables	None						
Cause and	Assumed cause		Correction		Prevention		
correction	An error occurred in the Special Unit.		Refer to the releva bleshoot the error.	Refer to the relevant manual to troubleshoot the error.		Refer to the Unit manual and use the Unit correctly.	
	The Unit connection is faulty.		Connect the Unit so that the connectors mate correctly and slide the yellow sliders on the top and on the bottom toward the back to lock them into place.		Make sure that the Units are connected correctly. Check for vibration and shock.		
	Noise There is data conals.	There is data corruption in bus sig-		If the error did not result from the above causes, cycle the power to the Controller and see if that clears the error. If the error occurs frequently, check the FG and power supply lines to see if noise is entering on them. Implement noise countermeasures as required.		countermeasures.	
	A Unit has failed.		If the error did not result from the above causes, and cycling the power to the Controller or resetting the Controller does not clear the error, replace the Special Unit.		Perform regular in	spections.	
Attached information	Attached informati		nit: Error unit number Error unit number +				
	Attached informati	on 2: Controller info	rmation				
Precautions/ Remarks	None						

Event name	Illegal Packet Disc	arded		Event code	80010000 hex		
Meaning	An illegal packet w	as received during r	nessage communica	cations. The illegal packet was discarded.			
Source	PLC Function Mod	tion Module Source details		I/O bus master	Detection timing	Continuously	
Error attributes	Level	Observation	Recovery		Log category	System	
Effects	User program	Continues.	Operation Not affected.				
System-defined	System-defined Variable		Data type		Name		
variables	None						
Cause and correction	Assumed cause		Correction	Correction			
	Noise There is data corruption in bus signals.		Cycle the power to the Controller and see if this clears the error. If the error occurs frequently, check the FG and power supply lines to see if noise is entering on them. Implement noise countermeasures as required.		Implement noise	countermeasures.	
Attached information	None						
Precautions/ Remarks	None						

Errors Related to Controller Operation

Event name	User Program/Col fer Error	ntroller Configuration	Event code	10200000 hex			
Meaning	The user program	or Controller Config	urations and Setup v	vere not transferred	correctly.		
Source	PLC Function Module Motion Control Function Module EtherCAT Master Function Module EtherNet/IP Function Module		Source details	None	Detection timing	At power ON or Controller reset	
Error attributes	Level	Major fault	Recovery	Cycle the power supply or reset the Controller.	Log category	System	
Effects	User program	Stops.	Operation	All outputs are sto	pped.		
System-defined	Variable		Data type		Name		
variables	None						
Cause and	Assumed cause		Correction		Prevention		
correction	The user program or Controller Configurations and Setup are not correct because the power supply to the Controller was interrupted or communications with the Sysmac Studio were disconnected during a download of the user program or the Controller Configurations and Setup.		Clear all of memory and then download the project from the Sysmac Studio. If attached information is registered, cycle the power supply to the Controller and then implement the above correction.		Do not turn OFF the power supply to the Controller or disconnect commu- nications with the Sysmac Studio dur- ing a download of the user program or the Controller Configurations and Setup.		
	The user program or Controller Configurations and Setup are not correct because the power supply to the Controller was interrupted during online editing.				Do not interrupt the power supply to the Controller during online editing.		
	The user program or Controller Configurations and Setup are not correct because the power supply to the Controller was interrupted during a Clear All Memory operation.				Do not interrupt the power supply to the Controller during a Clear All Memory operation.		
	Non-volatile memo	Non-volatile memory failed.		If the error persists even after you make the above correction, replace the CPU Unit.		None	
Attached	Attached Informat	ion 1: Cause Details	•		•		
information	None: Power was ing online editing.	interrupted or comm	unications were disc	connected during a d	lownload or power v	vas interrupted dur-	
	Downloading/Pred preparations) is gi	downloading: For other ven.	er causes, the timing	g of error occurrence	(during download o	or during download	
Precautions/ Remarks	None						

Event name	Illegal User Progra	am Execution ID		Event code	10210000 hex		
Meaning	The user program	The user program execution IDs set in the user program and in the CPU Unit do not match.					
Source	PLC Function Module		Source details	None	Detection timing	At user program download, power ON, or Controller reset	
Error attributes	Level	Major fault	Recovery	Cycle the power supply or reset the Controller.	Log category	System	
Effects	User program	Stops.	Operation	All outputs are sto	pped.		
System-defined	Variable		Data type		Name		
variables	None						
Cause and	Assumed cause		Correction		Prevention		
correction		The user program execution IDs set in the user program and in the CPU Unit do not match.		Correct the settings so that the same user program execution ID is set in the user program and in the CPU Unit.		Set the same user program execution ID in the user program and CPU Unit. Keep a record of the user program execution IDs set in the user program	
	A user program execution ID is set in the CPU Unit but not in the user program.		If user program execution ID is not set in the user program, clear the user program execution ID set in the CPU Unit by clearing all memory in the CPU Unit.		and in the CPU Unit. They are not displayed.		
Attached information	None						
Precautions/ Remarks	None						

Event name	Illegal User Program			Event code	10240000 hex			
Meaning	The user progran	The user program is not correct.						
Source	PLC Function Module S		Source details	None	Detection timing	At download, power ON, or Controller reset		
Error attributes	Level	Major fault	Recovery	Cycle the power supply or reset the Controller.	Log category	System		
Effects	User program	Stops.	Operation	All outputs are stopped.				
System-defined	Variable		Data type		Name			
variables	None							
Cause and	Assumed cause		Correction		Prevention			
correction	There are more than 8 nesting levels for functions or function blocks.		with more than 8 r functions or functi reduce the numbe	Find the location in the user program with more than 8 nesting levels for functions or function blocks and reduce the number of nesting levels to 8 or fewer. The, download the user program again.		Write the user program so that there is never more than 8 nesting levels for functions or function blocks. Use the program check on the Sysmac Studio to confirm that there are not more than 8 nesting levels.		
Attached information	None							
Precautions/ Remarks	None	,						

Event name	Illegal User Progra	am/Controller Config	urations and Setup	Event code	10250000 hex	
Meaning	The user program	or Controller Config	jurations and Setup i	is corrupted.		
Source	PLC Function Mod	dule	Source details	None	Detection timing	At download, power ON, or Controller reset
Error attributes	Level	Major fault	Recovery	Cycle the power supply or reset the Controller.	Log category	System
Effects	User program	Stops.	Operation	All outputs are sto	pped.	
System-defined	Variable		Data type		Name	
variables	None					
Cause and	Assumed cause		Correction		Prevention	
correction	Power was interru the user program figurations and Se memory.		troller Configuration	er program or Con- ons and Setup of memory. If this lace the CPU Unit.	Do not turn OFF t while the BUSY in	
	Non-volatile memor has failed.	ory is deteriorating			None	
Attached information	None					
Precautions/ Remarks	None					
Event name	Safe Mode			Event code	40160000 hex	
Meaning	The Controller sta	rted in Safe Mode.				
Source	PLC Function Mo	dule	Source details	None	Detection timing	At power ON or Controller reset
Error attributes	Level	Major fault	Recovery	Cycle the power supply or reset the Controller.	Log category	System
Effects	User program	Stops.	Operation	All outputs are sto	pped.	•
System-defined	Variable		Data type		Name	
variables	None					
Cause and	Assumed cause		Correction		Prevention	
correction		was turned ON to en Safe Mode was itch on the CPU				
Attached information	None					
Precautions/ Remarks	If the Controller st	arts in Safe Mode, th	ne user program is n	ot executed even if t	the startup mode is	set to RUN mode.

Event name	Event Log Restor	ation Error		Event code	10230000 hex		
Meaning	Restoring the eve	ent log failed.					
Source	PLC Function Mo	odule	Source details	None	Detection timing	At power ON or Controller reset	
Error attributes	Level	Observation	Recovery		Log category	System	
Effects	User program	Starts.	Operation	Not affected. How checked.	vever, the past event log cannot be		
System-defined	Variable		Data type		Name		
variables	None						
Cause and	Assumed cause		Correction		Prevention		
correction	A low battery voltage prevented retention of memory during a power interruption.		Replace the Batt	ery.	Replace the Batt	ery periodically.	
Attached information	0	tion 1: Error Details : Failure to restore al : Failure to restore ac				og	
Precautions/ Remarks	None						
Event name	Trace Setting Tra	nsfer Failure		Event code	10260000 hex		
Meaning		was interrupted whi					
Source	PLC Function Mo	odule	Source details	None	Detection At power ON controller research		
Error attributes	Level	Observation	Recovery	Cycle the power supply or reset the Controller.	Log category	System	
Effects	User program	Continues.	Operation	Not affected.		•	
System-defined	Variable		Data type		Name		
variables	None						
Cause and	Assumed cause		Correction		Prevention		
correction	The power supply while transferring	y was interrupted the trace settings.	Transfer the trace	settings again. Do not interrupt the power supply while transferring the trace setting			
Attached information	None						
Precautions/ Remarks	All trace settings	are initialized when th	nis error occurs.				
	1						
Event name	Clock Changed			Event code	90010000 hex		
Meaning	The clock time wa			_		_	
Source	PLC Function Mo		Source details	None	Detection timing	Commands from user	
Error attributes	Level	Information	Recovery		Log category	Access	
Effects	User program	Continues.	Operation	Not affected.			
System-defined	Variable		Data type		Name		
variables	_CurrentTime		DATE_AND_TIM	E	System Time		
Cause and	Assumed cause		Correction		Prevention		
correction	The clock time wa	as changed.					
Attached information	Attached informa	tion 1: Time before ch	nange				

Clock changes by the NTP Set Time instruction (SetTime) are not recorded in the event log.

The time stamp for this event will be for the time after the change.

Precautions/

Remarks

Event name	Time Zone Changed			Event code	90020000 hex			
Meaning	The time zone wa	s changed.						
Source	PLC Function Mod		Source details	None	Detection timing	When download-ing		
Error attributes	Level	Information	Recovery		Log category	Access		
Effects	User program	Continues.	Operation	Not affected.		_		
System-defined	Variable		Data type		Name			
variables	_CurrentTime		DATE_AND_TIM	E	System Time			
Cause and	Assumed cause		Correction		Prevention			
correction	The time zone wa	s changed.						
Attached information	None	None						
Precautions/ Remarks	None							
Event name	Variable Changed	to TRUE with Force	d Refreshing	Event code	90080000 hex			
Meaning	Changing a variab	le to TRUE with force	ed refreshing was	specified.				
Source	PLC Function Mod	dule	Source details	None	Detection timing	Commands from user		
Error attributes	Level	Information	Recovery		Log category	Access		
Effects	User program	Continues.	Operation	Operation is perfervalues.	ormed according to t	med according to the forced refreshing		
System-defined	Variable		Data type		Name			
variables	None							
Cause and	Assumed cause		Correction		Prevention			
correction	Changing a variable forced refreshing variable user.	ole to TRUE with was specified by the						
Attached information	None							
Precautions/ Remarks	None							
Event name	Variable Changed	to FALSE with Force	ed Refreshing	Event code	90090000 hex			
Meaning	Changing a variab	ole to FALSE with for	ced refreshing was	specified.				
Source	PLC Function Mod	dule	Source details	None	Detection timing	Commands from user		
Error attributes	Level	Information	Recovery		Log category	Access		
Effects	User program	Continues.	Operation	Operation is perfo	ormed according to t	he forced refreshing		
System-defined	Variable		Data type		Name			
variables	None							
Cause and	Assumed cause		Correction		Prevention			
correction	Changing a variable forced refreshing variable user.	ole to FALSE with was specified by the						
Attached information	None							
Precautions/ Remarks	None							

Event name	All Forced Refreshing Cleared			Event code	900A0000 hex			
Meaning	Clearing all forced	Clearing all forced refreshing values was specified.						
Source	PLC Function Module		Source details	None	Detection timing	Commands from user		
Error attributes	Level	Information	Recovery		Log category	Access		
Effects	User program	Continues.	Operation	Forced refreshing values are all cleared and operation performed according to the user program.				
System-defined	Variable		Data type		Name			
variables	None							
Cause and	Assumed cause	Assumed cause		Correction		Prevention		
correction	Clearing all forced refreshing values was specified by the user.							
Attached information	None		•		•			
Precautions/ Remarks	None							

Event name	Memory All Cleared			Event code	900B0000 hex			
Meaning	All memory was cl	All memory was cleared.						
Source	PLC Function Module		Source details	None	Detection timing	Commands from user		
Error attributes	Level	Information	Recovery		Log category	Access		
Effects	User program		Operation	Operation returns	ation returns to the factory state.			
System-defined	Variable		Data type		Name			
variables	None							
Cause and	Assumed cause	Assumed cause		Correction		Prevention		
correction	A user with Administrator rights cleared all of the memory.							
Attached information	None							
Precautions/ Remarks	None							

Event name	Event Log Cleared E			Event code	900C0000 hex	
Meaning	The event log was	cleared.			•	
Source	PLC Function Module		Source details	None	Detection timing	Commands from user
Error attributes	Level	Information	Recovery		Log category	Access
Effects	User program	Continues.	Operation	Not affected.		·
System-defined variables	Variable		Data type		Name	
	None					
Cause and	Assumed cause		Correction		Prevention	
correction	The event log was cleared by the user.					
Attached	Attached informati	on 1: Cleared items				
information	0:	All log categories	were cleared			
	1:	The system event	log was cleared.			
	2:	The access event	log was cleared.			
	10	0: The user-defined	event log was clear	ed.		
Precautions/ Remarks	None					

Event name	Power Turned ON			Event code	90110000 hex	
Meaning	The power supply	was turned ON.				
Source	PLC Function Mod	lule	Source details	None	Detection timing	At power ON
Error attributes	Level	Information	Recovery		Log category	System
Effects	User program		Operation	Operation starts.		
System-defined	Variable		Data type	_	Name	
variables	None					
Cause and	Assumed cause		Correction		Prevention	
correction	The power supply	was turned ON.				
Attached information	None					
Precautions/ Remarks	None					
Event name	Power Interrupted			Event code	90120000 hex	
Meaning	The power supply	was interrupted.				
Source	PLC Function Mod	lule	Source details	None	Detection timing	At power inter- ruption
Error attributes	Level	Information	Recovery		Log category	System
Effects	User program	Stops.	Operation	All operation stop	s.	
System-defined	Variable		Data type		Name	
variables	None					
Cause and	Assumed cause		Correction	Correction		
correction	The power supply	was interrupted.				
Attached information	None					
Precautions/ Remarks	None					
	-					
Event name	Operation Started			Event code	90130000 hex	
Meaning	Operation was sta	rted.				
Source	PLC Function Mod	lule	Source details	None	Detection timing	When changing to RUN mode
Error attributes	Level	Information	Recovery		Log category	System
Effects	User program	Starts.	Operation	User program exe	ecution starts.	•
System-defined	Variable		Data type		Name	
variables	None					
Cause and	Assumed cause		Correction		Prevention	
correction	A command to sta received.	rt operation was				
Attached information	None		•		•	
Precautions/ Remarks	None					

Event name	Operation Stopped			Event code	90140000 hex				
Meaning	Operation was sto	Operation was stopped.							
Source	PLC Function Module		Source details	None	Detection timing	When changing to PROGRAM mode			
Error attributes	Level	Information	Recovery		Log category	System			
Effects	User program	Stops.	Operation	User program stop	program stops.				
System-defined	Variable		Data type		Name				
variables	None	None							
Cause and	Assumed cause		Correction		Prevention				
correction	A command to stop operation was received.								
Attached information	None								
Precautions/ Remarks	None								

Event name	Reset Executed			Event code	90150000 hex			
Meaning	A reset was execu	A reset was executed.						
Source	PLC Function Module		Source details	None	Detection timing	Commands from user		
Error attributes	Level	Information	Recovery		Log category	Access		
Effects	User program		Operation	Operation is starte	d after a reset is executed.			
System-defined	Variable		Data type		Name			
variables	None							
Cause and	Assumed cause		Correction		Prevention			
correction	A reset command was received.							
Attached information	None	None						
Precautions/ Remarks	None							

Event name	User Program Execution ID Write			Event code	90160000 hex		
Meaning	The user program execution ID was set or changed in the CPU Unit.						
Source	PLC Function Module		Source details	None	Detection timing	When download-ing	
Error attributes	Level	Information	Recovery		Log category	Access	
Effects	User program	Continues.	Operation	Not affected.	·		
System-defined variables	Variable		Data type		Name		
	None						
Cause and correction	Assumed cause		Correction		Prevention	Prevention	
	A user with Administrator rights changed the user program execution ID that is set in the CPU Unit.						
Attached information	None		•				
Precautions/ Remarks	None						

Event name	All Controller Errors Cleared			Event code	90180000 hex			
Meaning	All current errors were cleared.							
Source	PLC Function Module		Source details	None	Detection timing	Commands from user		
Error attributes	Level	Information	Recovery		Log category	Access		
Effects	User program	Continues.	Operation	All errors for which cleared.	h the causes have been removed are			
System-defined variables	Variable		Data type		Name			
	None							
Cause and correction	Assumed cause		Correction		Prevention			
	All current errors were changed by the user.							
Attached information	None							
Precautions/ Remarks	None							

Event name	Forced Refreshing Cleared			Event code	90190000 hex			
Meaning	Clearing a forced refreshing value was specified.							
Source	PLC Function Module		Source details	None	Detection timing	Commands from user		
Error attributes	Level	Information	Recovery		Log category	Access		
Effects	User program	Continues.	Operation		shing values are cleared and operation is per- rding to the user program.			
System-defined variables	Variable		Data type		Name			
	None							
Cause and correction	Assumed cause		Correction		Prevention			
	Clearing a forced refreshing value was specified by the user.							
Attached information	None							
Precautions/ Remarks	None							

5-2-5 Troubleshooting Errors That Are Not in the CPU Unit

Input Units

No.	Abnormal condition	Cause	Correction
1	None of the inputs turn ON and the operation	The external input power is not supplied.	Supply suitable input power.
	indicators do not light.	2. The external input power supply voltage is low.	Maintain the external input power supply voltage within the rating.
		3. Loose screws on the terminal block	Tighten the screws.
		4. Faulty contact on the terminal block or connectors	Replace the terminal block or connector.
2	None of the inputs turn ON, but the operation indicators are lit.	Faulty circuits in the Input Unit	Replace the Input Unit.
3	None of the inputs turn OFF.	Faulty input circuits	Replace the Input Unit.
4	A specific input does not	1. Faulty input device	Replace the input device.
	turn ON.	2. Input wiring is broken.	Check the input wiring.
		3. Loose screws on the terminal block	Tighten the screws.
		4. Faulty contact on the terminal block or connectors	Replace the terminal block or connector.
		5. The external input ON time is too short or the input response time is too long.	Adjust the input device or correct the setting of the input response time.
		6. Faulty input circuits	Replace the Input Unit.
		7. An input bit is used in an Out instruction in the user program.	Correct the user program.
5	A specific input does not	1. Faulty input circuits	Replace the Input Unit.
	turn OFF.	2. An input bit is used in an Out instruction in the user program.	Correct the user program.
		3. The leakage current or residual voltage is too large.	Replace the external load or add a dummy resistor.
		4. More than one power supply is used and unwanted current paths exist.	Check the external circuits.
6	The input bits turns ON and OFF irregularly.	1. The external input power supply voltage is low or unstable.	Maintain the external input power supply voltage within the rating.
		2. Malfunction caused by noise	Implement noise countermeasures.
			 Attach a surge suppressor. Install an isolation transformer. Use a shielded cable between the Input Unit and the load. Check the setting of the input response time.
		3. Loose terminal block	Tighten the screws.
		Eaulty contact on the terminal block or connectors	Replace the terminal block or connector.

No.	Abnormal condition	Cause	Correction
7	Abnormal operation occurs for the input	1. Loose screws on the common terminal	Tighten the screws.
	points for the same common (8 or 16 points).	2. Faulty contact on the terminal block or connectors	Replace the terminal block or connector.
		3. Faulty circuits in the Input Unit	Replace the Input Unit.
		4. Faulty CPU Unit	Replace the CPU Unit.
8	The input operation indicators do not light even though operation is normal.	Faulty LEDs or LED circuits	Replace the Input Unit.

Output Units

No.	Abnormal condition	Cause	Correction
1	None of the outputs turn	The load power is not supplied.	Supply power.
	ON.	2. The load power supply voltage is low.	Maintain the power supply voltage within the rating.
		3. Loose screws on the terminal block	Tighten the screws.
		4. Faulty contact on the terminal block or connectors	Replace the terminal block or connector.
		5. The fuse in the Output Unit has burned out due to overcurrent, e.g., from a load short-circuit. (You can confirm the fuse status on a fuse indicator for some Output Units.	Replace the Unit.
		6. Faulty contact on Unit connector	Replace the Output Unit.
		7. Faulty output circuits	Replace the Output Unit.
		8. Load short-circuit protection has oper-	Check the load.
		ated. (You can confirm this on an indicator.)	Check the output wiring.
2	None of the outputs turn OFF.	Faulty output circuits	Replace the Output Unit.
3	A specific output does not turn ON and the	1. The output ON time is too short in the user program.	Correct the user program to make a longer output ON time.
	operation indicator does not light.	2. The output bit is used in more than one Out instruction in the user program.	Correct the user program so that only one Out instruction controls the output bit.
		3. Faulty output circuits	Replace the Output Unit.
4	A specific output does	Faulty output device	Replace the device.
	not turn ON, but the operation indicator is lit.	2. Output wiring is broken.	Check the output wiring.
	operation indicator is it.	3. Loose screws on the terminal block	Tighten the screw.
		4. Faulty contact on the terminal block or connectors	Replace the terminal block or connector.
		5. The relay is faulty for a Relay Output Unit.	Replace the Output Unit.
		6. Faulty output circuits	Replace the Output Unit.
5	A specific output does not turn OFF, but the	The output relay is faulty for a Relay Output Unit.	Replace the Output Unit.
	operation indicator is not lit.	2. The leakage current or residual voltage prevents resetting.	Replace the external load or add a dummy resistor.

No.	Abnormal condition	Cause	Correction
6	A specific output does not turn OFF and the operation indicator is lit.	The output bit is used in more than one Out instruction in the user program.	Correct the user program so that only one Out instruction controls the output bit.
		2. Faulty output circuits	Replace the Output Unit.
7	The output turns ON and OFF irregularly.	1. The load power supply voltage is low or unstable.	Maintain the load power supply voltage within the rating.
		2. The output bit is used in more than one Out instruction in the user program.	Correct the user program so that only one Out instruction controls the output bit.
		3. Malfunction caused by noise	Implement noise countermeasures.
			 Attach a surge suppressor. Install an isolation transformer. Use a shielded cable between the Output Unit and the load.
		4. Loose terminal block	Tighten the screws.
		5. Faulty contact on the terminal block or connectors	Replace the terminal block or connector.
8	Abnormal operation	1. Loose screws on the common terminal	Tighten the screws.
	occurs for the output points for the same common (8 or 16	2. Faulty contact on the terminal block or connectors	Replace the terminal block or connector.
	points).	3. The fuse in the Output Unit has burned out due to overcurrent, e.g., from a load short-circuit.	Replace the Output Unit.
		4. Faulty circuits in the Output Unit	Replace the Output Unit.
		5. Faulty CPU Unit	Replace the CPU Unit.
		6. Load short-circuit protection has oper-	Check the load.
		ated. (You can confirm this on an indicator.)	Check the output wiring.
9	The output operation indicators do not light even though operation is normal.	Faulty LEDs or LED circuits	Replace the Unit.
10	The ERR indicator (load short-circuit alarm) is lit and the output is OFF.	The load is short-circuited externally or disconnected.	Refer to A-4-1 Load Short-circuit Protection and Line Disconnec- tion Detection for CJ1W-OD202.



Inspection and Maintenance

This section describes the required inspections and maintenance. It also describes the service lives and replacement procedures for the Battery and Power Supply Units.

6-1	Period	lic Maintenance and Inspection	6-2
	6-1-1	Periodic Inspection	6-2
	6-1-2	Unit Replacement Precautions	6-3
6-2	Renlac	cing the Battery	6-/
0-2	ricpiac	ing the battery	0-4
0-2	•	Battery Replacement	
0-2	6-2-1	•	6-4

Periodic Maintenance and Inspection 6-1

Daily or periodic inspections are required in order to maintain the Controller's functions in peak operating condition.

Periodic Inspection 6-1-1

Although the major components in NJ-series Controllers have an extremely long life time, they can deteriorate under improper environmental conditions. Periodic inspections are thus required to ensure that the required conditions are being kept.

Inspection is recommended at least once every six months to a year, but more frequent inspections will be necessary in adverse environments.

Take immediate steps to correct the situation if any of the conditions in the following table are not met.

Periodic Inspection Points

No.	Item	Inspection	Criteria	Action
1	Source Power Supply	Check for voltage fluctuations at the power supply terminals.		
2	I/O Power Supply	Check for voltage fluctuations at the I/O terminals.	Voltages must be within specifications for each Unit.	Use a voltage tester to check the I/O power supply at the terminals. Take necessary steps to bring voltage fluctuations within limits.
3	Ambient environ- ment	Check the ambient temperature. (Inside the control panel if the Controller is in a control panel.)	0 to 55°C	Use a thermometer to check the temperature and ensure that the ambient temperature remains within the allowed range of 0 to 55°C.
		Check the ambient humidity. (Inside the control panel if the Controller is in a control panel.)	Relative humidity must be 10% to 90% with no condensation.	Use a hygrometer to check the humidity and ensure that the ambient humidity remains between 10% and 90%. Make sure that condensation does not occur due to rapid changes in temperature.
		Check that the Controller is not in direct sunlight.	Not in direct sunlight	Protect the Controller if necessary.
		Check for accumulation of dirt, dust, salt, metal powder, etc.	No accumulation	Clean and protect the Controller if necessary.
		Check for water, oil, or chemical sprays hitting the Controller.	No spray	Clean and protect the Controller if necessary.
		Check for corrosive or flam- mable gases in the area of the Controller.	No corrosive or flammable gases	Check by smell or use a sensor.
		Check the level of vibration or shock.	Vibration and shock must be within specifications.	Install cushioning or shock absorbing equipment if necessary.
		Check for noise sources near the Controller.	No significant noise sources	Either separate the Controller and noise source or protect the Controller.

No.	Item	Inspection	Criteria	Action
4	Installation and wiring	Check that each Unit is connected and locked to the next Unit securely.	No looseness	Press the connectors together completely and lock them with the sliders.
		Check that cable connectors are fully inserted and locked.	No looseness	Correct any improperly installed connectors.
		Check for loose screws in external wiring.	No looseness	Tighten loose screws with a Phillips-head screwdriver.
		Check crimp connectors in external wiring.	Adequate spacing between connectors	Check visually and adjust if necessary.
		Check for damaged external wiring cables.	No visible damage	Check visually and replace cables if necessary.
5	User-serviceable parts	Check whether the battery has reached its service life.	Service life expectancy is 5 years at 25°C.	Replace the battery when its service life has passed even if a bat-
		CJ1W-BAT01	(From 0.75 to 5 years depending on model, and ambient temperature.)	tery error has not occurred. (Battery life depends upon the model, and ambient conditions.)

Tools Required for Inspections

Required Tools

- · Slotted and Phillips-head screwdrivers
- · Voltage tester or digital voltmeter
- · Industrial alcohol and clean cotton cloth

Tools Required Occasionally

- Oscilloscope
- Thermometer and hygrometer (humidity meter)

6-1-2 Unit Replacement Precautions

Check the following after replacing any faulty Unit.

- Do not replace a Unit until the power is turned OFF.
- · Check the new Unit to make sure that there are no errors.
- If you return a faulty Unit for repair, describe the problem in as much detail as possible, enclose this description with the Unit, and return the Unit to your OMRON representative.
- For poor contact, take a clean cotton cloth, soak the cloth in industrial alcohol, and carefully wipe the contacts clean. Be sure to remove any lint prior to remounting the Unit.



Precautions for Correct Use

- If you replaced the CPU Unit, transfer the user program and the variables with a Retain attribute (i.e., variables retained during power interruptions) that are required at startup, before you start operation. Unexpected accidents may occur depending on the relation between the user program and the status of variables retained during power interruptions.
- Routing tables, network parameters, and CPU Bus Unit system settings are stored in the CPU
 Unit. Be sure to reload this data if you replace the CPU Unit.
- Refer to the CPU Bus Unit and Special I/O Unit operation manuals for details on the data required by each Unit.

6-2 Replacing the Battery

The Battery in the NJ-series CPU Unit must be replaced periodically as preventative maintenance. (The Battery is a backup power supply for the CPU Unit's internal clock and the variables that are retained during power interruptions.) This section describes how to replace the Battery.

6-2-1 **Battery Replacement**


Purpose of the Battery

The Battery maintains the CPU Unit internal clock and the variables retained during power interruptions while the main power supply is OFF. If the Battery is not installed or Battery voltage drops too low, the internal clock will stop and the variables that are retained for power interruptions will be lost when the main power supply goes OFF.

Battery Service Life and Replacement Period


Model Approx. maximum lifetime		Approx. minimum lifetime*	Approx. typical lifetime*
NJ501-□□□□	5 years	1.1 years	5 years

The minimum lifetime is the memory backup time at an ambient temperature of 55°C. The typical lifetime is the memory backup time at an ambient temperature of 25°C.

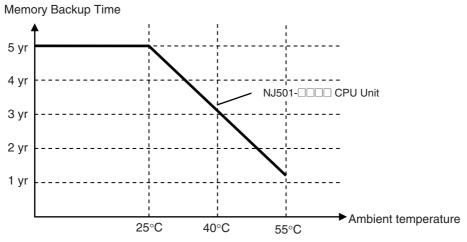

Low Battery Indicators

If the Controller Setup has been set to detect a low-battery error, the ERROR indicator on the front of the CPU Unit will flash when the battery is nearly discharged.

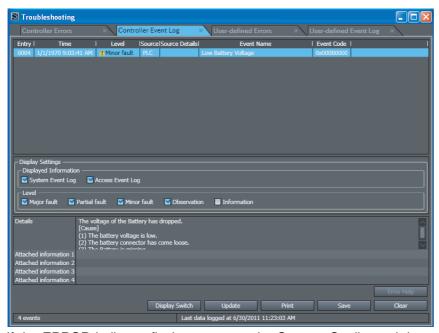

If the ERROR indicator flashes, connect the Sysmac Studio, and then check the CPU Unit's Battery connection if the Sysmac Studio shows a Low Battery Voltage, Battery-backup Memory Check Error, or Clock Oscillator Stopped event. If the Battery is properly connected, replace the Battery with a new one as soon as possible.

Once a low-battery error has been detected, it will take 5 days (at an ambient temperature of 25°C) before the battery fails if power has been supplied at least once a day. Clock data and variables that are retained during power interruptions can be retained by ensuring that the CPU Unit power is not turned OFF until the Battery has been replaced.



Precautions for Correct Use

The Battery will loose its charge faster at high ambient temperatures.

Replacement Battery

Use the CJ1W-BAT01 Battery Set.



Precautions for Correct Use

Be sure to install a replacement Battery within two years of the production date shown on the Battery label.



OMRON CJ1W-BAT01 08-06

Manufactured in June 2008.

Replacement Procedure

Use the following procedure to replace the battery when the previous battery has become completely discharged.



Precautions for Safe Use

We recommend replacing the battery with the power OFF to prevent the CPU Unit's sensitive internal components from being damaged by static electricity. The battery can be replaced without turning OFF the power supply. To do so, always touch a grounded piece of metal to discharge static electricity from your body before starting the procedure.

After replacing the Battery, connect the Sysmac Studio and clear the Low Battery Voltage event.

Turn OFF the power supply to the Controller.


If the CPU Unit has not been ON, turn it ON for at least five minutes and then turn it OFF.



Additional Information

If power is not turned ON for at least five minutes before replacing the battery, the capacitor that backs up memory when the battery is removed will not be fully charged and memory may be lost before the new battery is inserted.

2 Open the compartment on the upper left of the CPU Unit and carefully draw out the battery.

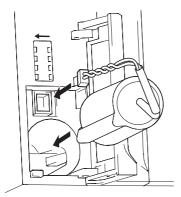



Precautions for Safe Use

- Before you replace the Battery, you must first supply power to the Controller for at least 5 minutes, and then you must complete this procedure within five minutes at 25°C after turning OFF the power to the CPU Unit to ensure memory backup.
- Never short-circuit the battery terminals; never charge the battery; never disassemble the battery; and never heat or incinerate the battery. Doing any of these may cause the battery to leak, heat, ignite, or rupture. Also, never use a battery that has been dropped on the floor or otherwise subject to shock. It may leak.
- UL standards require that batteries be replaced by experienced technicians. Always place an experienced technician in charge or battery replacement.
- Turn ON the power after replacing the battery for a CPU Unit that has been unused for a long time. Leaving the CPU Unit unused again without turning ON the power even once after the battery is replaced may result in a shorter battery life.



Additional Information

The Low Battery Voltage event is cleared automatically the next time the Controller is turned ON after replacing the Battery.

6-2-2 **Operation without a Battery**

If a Battery is not connected or the Battery voltage is too low, the following operation occurs.

- · A battery voltage drop, battery-backed-up memory check error, and clock oscillation stopping are detected.
- The system-defined variable _RetainFail (Power Retention Failure Flag) will be TRUE.

CPU Unit

Battery-free operation

- Values of variables with a Retain attribute will not be retained.
- Time data will be incorrect.



Retaining or Not Retaining Data in the CPU Unit

Data in the CPU Unit will be retained or not retained as described in the following table according to whether there is a Battery.

	Type of data			Power to	Power turned ON		
		Type of dat	a	Battery	No Battery		
User progra	User program				r interruption will be		
Controller C	onfiguration	s and Setup		retained by the built memory.	-in non-volatile		
Event log	Event log			Values before power interruption will be retained.	Values before power interruption will not be retained.		
Clock data				Correct values	Illegal value		
	No Retain attribute			Initial values*	Initial values*		
	Retain attribute		Values before power interruption will be retained.	Initial values*			
Values of	AT (allocated memory) specification	Non-retained Areas	d areas: CIO and Work	Initial values*	Initial values*		
variables		cated memory)	AT (allo- cated memory)	Retained areas: DM	Words allocated to Special Units (and device variables for Special Units)	Values before power interruption will be retained.	Initial values*
		Alea	Words that are not allo- cated to Special Units				
		Retained are	eas: Holding and EM Areas				
			d areas: CIO and Work	Cleared to zeros.	Cleared to zeros.		
CJ-series Unit memory		Retained areas: Holding, DM, and EM Areas		Values before power interruption will be retained.	Unstable		

^{*} These are cleared to zero if there are no initial settings.



Appendices

A-1	Specifi	ications	A- 3
A-2	Specifi	cations of Basic I/O Units	A- 4
	A-2-1	Overview of Units	A-4
	A-2-2	Basic I/O Units	A-6
	A-2-3	Precautions on Contact Output Units	A-53
	A-2-4	Connecting Connector-Terminal Block Conversion Units and I/O Relay Terminals	A-55
A-3	Dimen	sions	. A-93
	A-3-1	NJ-series CPU Units	A-93
	A-3-2	NJ-series Power Supply Units	A-94
	A-3-3	CJ-series Basic I/O Units	A-95
	A-3-4	B7A Interface Unit	A-98
	A-3-5	CJ-series I/O Control Unit and I/O Interface Unit	A-98
	A-3-6	SD Memory Card	A-98
A-4	Load S	Short-circuit Protection and Line Disconnection Detection for	
	CJ-ser	ies Basic I/O Units	. A-99
	A-4-1	Load Short-circuit Protection and Line Disconnection Detection for CJ1W-OD202	Δ_90
	A-4-2	Load Short-circuit Protection for CJ1W-OD204/OD212/OD232/MD232	
۸-5		irective Measures for Relay Outputs	
		n-defined Variables	
A-0	•	System-defined Variables for the Overall NJ-series Controller	A-100
	A-6-1	(No Category)	Δ-106
	A-6-2	PLC Function Module, Category Name: _PLC	
	A-6-3	PLC Function Module, Category Name: _CJB	
	A-6-4	Motion Control Function Module, Category Name: _MC	
	A-6-5	EtherCAT Master Function Module, Category Name: _EC	
	A-6-6	EtherNet/IP Function Module, Category Name: _EIP	
	A-6-7	Meanings of Error Status Bits	
A-7	Specifi	cations for Individual System-defined Variables	
	A-7-1	System-defined Variables for the Overall NJ-series Controller	
		(No Category)	. A-127
	A-7-2	PLC Function Module, Category Name: _PLC	
	A-7-2	PLC Function Module, Category Name: _PLC	. A-13

\ -7-3	PLC Function Module, Category Name: _CJB	.A-135
\-7-4	Motion Control Function Module, Category Name: _MC	.A-139
A-7- 5	EtherCAT Master Function Module, Category Name: _EC	.A-141
∖ -7-6	EtherNet/IP Function Module, Category Name: EIP	.A-148

Specifications A-1

This section gives the specifications of the NJ-series Controllers.

General Specifications A-1-1

	Item	NJ501-1300	NJ501-1400	NJ501-1500	
Enclosure		Mounted in a panel			
Grounding me	ethod	Ground to less than 100 Ω .			
Dimensions		90 mm × 90 mm × 90	mm		
Weight		550 g (including the E	nd Cover)		
Current consu	umption	5 VDC 1.90 A (includ	ing SD Memory Card a	and End Cover)	
Operating environment	Ambient operating temperature	0 to 55°C			
	Ambient operating humidity	10% to 90% (with no	condensation)		
	Atmosphere	Must be free from cor	rosive gases.		
	Ambient storage temperature	ure -20 to 75°C (excluding battery)			
	Altitude	2,000 m max.			
	Pollution degree	2 or less: Conforms to JIS B3502 and IEC 61131-2.			
	Noise immunity	2 kV on power supply line (Conforms to IEC 61000-4-4.)			
	Overvoltage category	Category II: Conforms to JIS B3502 and IEC 61131-2.			
	EMC immunity level	Zone B			
	Vibration resistance	Conforms to JIS C60068-2-6.			
			.5-mm amplitude, 8.4 t 00 min in X, Y, and Z o 100 min total)		
	Shock resistance	Conforms to JIS C60	068-2-27.		
		147 m/s ² , 3 times in X, Y, and Z directions (100 m/s ² for Output Units)			
Battery	Life	5 years at 25°C			
	Model	CJ1W-BAT01			
Applicable sta	andards	Conforms to cULus, E	C Directives, NK, and	LR.	

A-2 Specifications of Basic I/O Units

A-2-1 Overview of Units

Basic I/O Units

Basic Input Units

Type of Unit	Name	Specifications		Model	Page
Basic Input	DC Input Units	Terminal block, 12 to 24 VDC	8 inputs	CJ1W-ID201*	A-6
Units		Terminal block, 24 VDC,	16 inputs	CJ1W-ID211	A-7
				CJ1W-ID212	A-8
		Fujitsu connector, 24 VDC	32 inputs	CJ1W-ID231	A-9
		MIL connector, 24 VDC	32 inputs	CJ1W-ID232	A-10
				CJ1W-ID233	A-11
		Fujitsu connector, 24 VDC	64 inputs	CJ1W-ID261	A-12
		MIL connector, 24 VDC	64 inputs	CJ1W-ID262	A-14
	AC Input Units	Terminal block, 200 to 240 VAC	8 inputs	CJ1W-IA201*	A-16
		Terminal block, 100 to 120 VAC	16 inputs	CJ1W-IA111	A-17
	Interrupt Input Unit	Terminal block, 24 VDC	16 inputs	CJ1W-INT01	A-18
	Quick-response Input Unit	Terminal block, 24 VDC	16 inputs	CJ1W-IDP01	A-19

^{*} Although 16 I/O bits (1 word) are allocated, only 8 of these can be used for external I/O. These Units are also treated as 16-point I/O Units in the Unit configuration.

Basic Output Units

Type of Unit	Relay Output Units		Specifications		Model	Page
Basic Out- put Units			Terminal block, 250 VAC/24 VDC, 2 A, 8 independent contacts	8 outputs	CJ1W-OC201*	A-20
			Terminal block, 250 VAC/24 VDC, 2 A	16 outputs	CJ1W-OC211	A-21
	Triac Outp	out Unit	Terminal block, 250 VAC/24 VDC, 0.6 A	8 outputs	CJ1W-OA201*	A-22
	Transis-	Sinking	Terminal block, 12 to 24 VDC, 2 A	8 outputs	CJ1W-OD201*	A-23
	tor Out- put Units	outputs	Terminal block, 12 to 24 VDC, 0.5 A	8 outputs	CJ1W-OD203*	A-24
			Terminal block, 12 to 24 VDC, 0.5 A	16 outputs	CJ1W-OD211	A-25
			Terminal block, 24 VDC, 0.5 A	16 outputs	CJ1W-OD213	A-26
			Fujitsu connector, 12 to 24 VDC, 0.5 A	32 outputs	CJ1W-OD231	A-27
			MIL connector, 12 to 24 VDC, 0.5 A	32 outputs	CJ1W-OD233	A-28
			MIL connector, 24 VDC, 0.5 A	32 outputs	CJ1W-OD234	A-29
			Fujitsu connector, 12 to 24 VDC, 0.3 A	64 outputs	CJ1W-OD261	A-31
			MIL connector, 12 to 24 VDC, 0.3 A	64 outputs	CJ1W-OD263	A-33
		Sourc- ing out-	Terminal block, 24 VDC, 2 A, load short-circuit protection, line disconnection detection	8 outputs	CJ1W-OD202*	A-35
		puts	Terminal block, 24 VDC, 0.5 A, load short-circuit protection	8 outputs	CJ1W-OD204*	A-37
			Terminal block, 24 VDC, 0.5 A, load short-circuit protection	16 outputs	CJ1W-OD212	A-38
			MIL connector, 24 VDC, 0.5 A, load short-circuit protection	32 outputs	CJ1W-OD232	A-39
			MIL connector, 12 to 24 VDC, 0.3 A	64 outputs	CJ1W-OD262	A-40

* Although 16 I/O bits (1 word) are allocated, only 8 of these can be used for external I/O. These Units are also treated as 16-point I/O Units in the Unit configuration.

Basic Mixed I/O Units

e of nit	Name		Specifications		Model	Page
c I/O	24-VDC	Sinking	Fujitsu connector	16 inputs	CJ1W-MD231	A-42
5	Inputs/Transis-	output	Inputs: 24 VDC	16 outputs		
	tor Output Units		Outputs: 12 to 24 VDC, 0.5 A			
			MIL connector		CJ1W-MD233	A-44
			Inputs: 24 VDC			
			Outputs: 12 to 24 VDC, 0.5 A			
			Fujitsu connector	32 inputs	CJ1W-MD261	A-45
			Inputs: 24 VDC	32 outputs		
			Outputs: 12 to 24 VDC, 0.3 A			
			MIL connector	1	CJ1W-MD263	A-47
			Inputs: 24 VDC			
			Outputs: 12 to 24 VDC, 0.3 A			
		Sourcing	MIL connector	16 inputs	CJ1W-MD232	A-49
		output	Input: 24 VDC	16 outputs		
			Outputs: 24 VDC, 0.5 A, load short-circuit protection			
	TTL I/O Units	•	Inputs: 5 VDC	32 inputs	CJ1W-MD563	A-51
			Outputs: 5 VDC, 35 mA	32 outputs		
	Precautions for C	or Contact Output Units			A-53	
	Load short-circuit	ad short-circuit protection and line disconnection detection for CJ1W-OD202			A-99	
	Load short-circuit protection for CJ1W-OD204/OD212/OD232/MD232			A-102		

Reading External Connection and Terminal-Device Variable Diagrams

- I/O terminals in the external connection and terminal-device variable diagrams are shown as viewed from the front panel of the Unit.
- Terminal numbers A0 to A9 and B0 to B9 are used in this manual, but they are not printed on all Units.
- A0 to A20 and B0 to B20 are printed on the Units.
- The signal names of the terminals are the device variable names. The device variable names are the names that use "Jxx" as the device name.

A-2-2 Basic I/O Units

Basic Input Units with Terminal Blocks

• CJ1W-ID201 DC Input Unit (12 to 24-VDC, 8 Points)

Name	8-point DC Input Unit with Terminal Block		
Model	CJ1W-ID201		
Allowable Input Voltage Range	12 to 24 VDC		
	10.2 to 26.4 VDC		
Input Impedance	2.4 kΩ		
Input Current	10 mA typical (at 24 VDC)		
ON Voltage/ON Current	8.8 VDC min./3 mA min.		
OFF Voltage/OFF Current	3 VDC max./1 mA max.		
ON Response Time	8.0 ms max. (Can be set to between 0 and 32 ms in the Unit Information settings.)*1		
OFF Response Time	8.0 ms max. (Can be set to between 0 and 32 ms in the Unit Information settings.)*1		
Number of Circuits	8 independent circuits		
Number of Simultaneously ON Points	100% simultaneously ON		
Insulation Resistance	20 $M\Omega$ between external terminals and the GR terminal (100 VDC)		
Dielectric Strength	1,000 VAC between the external terminals and the GR terminal for 1 minute at a leakage current of 10 mA max.		
Internal Current Consumption	80 mA max.		
Weight	110 g max.		
Circuit Configuration	Signal name Jxx_Ch1_In00 COM0 Input indicator Jxx_Ch1_In07 COM7 Lagrange Lagr		
External connection and terminal- device variable diagram	Signal name Connector Signal pin 2 Signal pin 2		

^{*1} The ON response time will be 20 μ s maximum and OFF response time will be 400 μ s maximum even if the response time are set to 0 ms due to internal element delays.

^{*2} Terminal numbers A0 to A8 and B0 to B8 are used in the external connection and terminal-device variable diagrams. They are not printed on the Units.

Note Although 16 I/O bits (1 word) are allocated, only 8 of these can be used for external I/O. These Units are also treated as 16-point I/O Units in the Unit configuration.

• CJ1W-ID211 DC Input Unit (24 VDC, 16 Points)

Name	16-point DC Input Unit with Terminal Block		
Model	CJ1W-ID211		
Rated Input Voltage	24 VDC		
Allowable Input Voltage Range	20.4 to 26.4 VDC		
Input Impedance	3.3 kΩ		
Input Current	7 mA typical (at 24 VDC)		
ON Voltage/ON Current	14.4 VDC min./3 mA min.		
OFF Voltage/OFF Current	5 VDC max./1 mA max.		
ON Response Time	8.0 ms max. (Can be set to between 0 and 32 ms in the Unit Information settings.)*1		
OFF Response Time	8.0 ms max. (Can be set to between 0 and 32 ms in the Unit Information settings.)*1		
Number of Circuits	16 (16 points/common, 1 circuit)		
Number of Simultaneously ON Points	100% simultaneously ON (at 24 VDC) (Refer to the following illustration.)		
Insulation Resistance	20 M $Ω$ between external terminals and the GR terminal (100 VDC)		
Dielectric Strength	1,000 VAC between the external terminals and the GR terminal for 1 minute at a leakage current of 10 mA max.		
Internal Current Consumption	80 mA max.		
Weight	110 g max.		
Circuit Configuration	Signal name Jxx_Ch1_In00 to Jxx_Ch1_In15 COM Input indicator Temperature characteristics for simultaneously ON points at 45°C. 18 Input voltage: 26.4 VDC 12 12 points at 55°C. 18 Input voltage: 26.4 VDC Ambient temperature		
External connection and ter- minal-device variable diagram	Signal Connector Signal name		

- The ON response time will be 20 µs maximum and OFF response time will be 400 µs maximum even if the response time are set to 0 ms due to internal element delays.
- Terminal numbers A0 to A8 and B0 to B8 are used in the external connection and terminal-device variable diagrams. They are not printed on the Units.

• CJ1W-ID212 DC Input Unit (24 VDC, 16 Points)

Name	16-point DC Input Unit with Terminal Block		
Model	CJ1W-ID212		
Rated Input Voltage Allowable Input Voltage Range	24 VDC 20.4 to 26.4 VDC		
Input Impedance			
Input Current	$3.3 \text{ k}\Omega$ 7 mA typical (at 24 VDC)		
ON Voltage/ON Current	14.4 VDC min./3 mA min.		
OFF Voltage/OFF Current	5 VDC max./1 mA max.		
ON Response Time	8.0 ms max. (Can be set to between 0 and 32 ms in the Unit Information settings.)*1		
OFF Response Time	8.0 ms max. (Can be set to between 0 and 32 ms in the Unit Information settings.)*1		
Number of Circuits	16 (16 points/common, 1 circuit)		
Number of Simultaneously ON Points	100% simultaneously ON (at 24 VDC) (Refer to the following illustration.)		
Insulation Resistance	20 M Ω between external terminals and the GR terminal (100 VDC)		
Dielectric Strength	1,000 VAC between the external terminals and the GR terminal for 1 minute at a leakage current of 10 mA max.		
Internal Current Consumption	130 mA max.		
Weight	110 g max.		
Circuit Configuration	Signal name Jxx_Ch1_In00 to Jxx_Ch1_In15 COM COM Input indicator Temperature characteristics 16 points at 45°C. 18 10 10 10 10 10 10 10 10 10 10 10 10 10		
External connection and terminal-device variable diagram	Signal name Connector pin ·2 Signal name Jxx_Ch1_In00 A0 Jxx_Ch1_In02 A1 B1 Jxx_Ch1_In03 Jxx_Ch1_In05 Jxx_Ch1_In06 A3 B3 Jxx_Ch1_In07 Jxx_Ch1_In10 A5 Jxx_Ch1_In09 Jxx_Ch1_In10 A6 B7 A8 B8 A8 B8 A8 B9 A8 B0 A8 B2 AX B1 AX B1 AX B2 AX B2 AX AX B3 AX AX Ch1_In09 AX AX AX AX AX CM1_In11 AX COM A8 B8 A8 B8 A8 B8 A8 B8 COM Polarity of the input power supply can be connected in either direction.		

- *1 The ON response time will be 15 μ s maximum and OFF response time will be 90 μ s maximum even if the response time are set to 0 ms due to internal element delays.
- *2 Terminal numbers A0 to A8 and B0 to B8 are used in the external connection and terminal-device variable diagrams. They are not printed on the Units.

• CJ1W-ID231 DC Input Unit (24 VDC, 32 Points)

Name	32-point DC Input Unit with Fujitsu Connector		
Model	CJ1W-ID231		
Rated Input Voltage	24 VDC		
Allowable Input Voltage Range	20.4 to 26.4 VDC		
nput Impedance	5.6 kΩ		
nput Current	4.1 mA typical (at 24 VDC)		
ON Voltage/ON Current	19.0 VDC min./3 mA min.		
OFF Voltage/OFF Current	5 VDC max./1 mA max.		
ON Response Time	8.0 ms max. (Can be set to between 0 and 32 ms in the Unit Information settings.)*		
OFF Response Time	8.0 ms max. (Can be set to between 0 and 32 ms in the Unit Information settings.)*		
Number of Circuits	32 (16 points/common, 2 circuits)		
Number of Simultaneously ON Points	75% (12 points/common) simultaneously ON (at 24 VDC) (Refer to the following illustration.)		
nsulation Resistance	20 M Ω between external terminals and the GR terminal (100 VDC)		
Dielectric Strength	1,000 VAC between the external terminals and the GR terminal for 1 minute at a leakage current of 10 mA max.		
Internal Current Consump- tion	90 mA max.		
Weight	70 g max.		
Accessories	None		
Circuit Configuration	Allocated Signal name Connector row A Connector row B Connector row B Allocated Signal name 5.6 kΩ SW SW SW SW SW SW SW SW SW S		
External connection and terminal-device variable diagram	Signal Connec Signal name tor pin name		


 * The ON response time will be 20 μ s maximum and OFF response time will be 400 μ s maximum even if the response times are set to 0 ms due to internal element delays.

Note Observe the following restrictions when connecting to a 2-wire sensor.

- Make sure the input power supply voltage is larger than the ON voltage (19 V) plus the residual voltage of the sensor (approx. 3 V).
- Use a sensor with a minimum load current of 3 mA min.
- Connect bleeder resistance if you connect a sensor with a minimum load current of 5 mA or higher.

• CJ1W-ID232 DC Input Unit (24 VDC, 32 Points)

Name	32-point DC Input Unit with MIL Connector			
Model	CJ1W-ID232			
Rated Input Voltage	24 VDC			
Allowable Input Voltage Range	20.4 to 26.4 VDC			
Input Impedance	5.6 kΩ			
Input Current	4.1 mA typical (at 24 VDC)			
ON Voltage/ON Current	19.0 VDC min./3 mA min.			
OFF Voltage/OFF Current	5 VDC max./1 mA max.			
ON Response Time	8.0 ms max. (Can be set to between 0 and 32 ms in the Unit Information settings.)*			
OFF Response Time	8.0 ms max. (Can be set to between 0 and 32 ms in the Unit Information settings.)*			
Number of Circuits	32 (16 points/common, 2 circuits)			
Number of Simulta- neously ON Points	75% (12 points/common) simultaneously ON (at 24 VDC) (Refer to the following illustration.)			
Insulation Resistance	20 M Ω between external terminals and the GR terminal (100 VDC)			
Dielectric Strength	1,000 VAC between the external terminals and the GR terminal for 1 minute at a leakage current of 10 mA max.			
Internal Current Consumption	90 mA max.			
Weight	70 g max.			
Accessories	None			
Circuit Configuration	Allocated Signal name Connector row A Connector row B Connector row B Allocated Signal name Signal name			

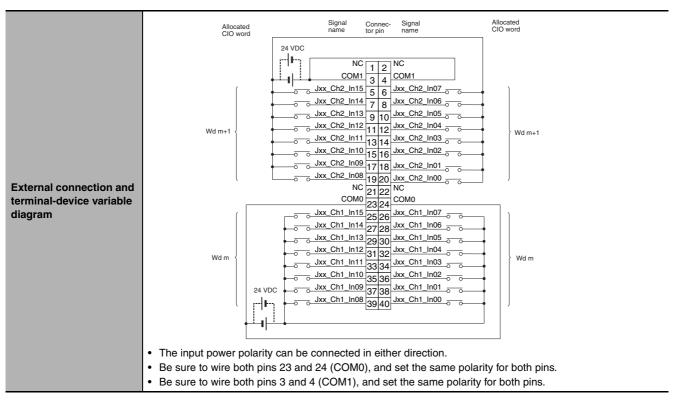


 $^{^{\}star}$ The ON response time will be 20 μs maximum and OFF response time will be 400 μs maximum even if the response times are set to 0 ms due to internal element delays.

- Make sure the input power supply voltage is larger than the ON voltage (19 V) plus the residual voltage of the sensor (approx. 3 V).
- Use a sensor with a minimum load current of 3 mA min.
- · Connect bleeder resistance if you connect a sensor with a minimum load current of 5 mA or higher.

CJ1W-ID233 DC Input Unit (24 VDC, 32 Points)

Name	32-point DC Input Unit with MIL Connector	
Model	CJ1W-ID233	
Rated Input Voltage	24 VDC	
Allowable Input Voltage Range	20.4 to 26.4 VDC	
Input Impedance	5.6 kΩ	
Input Current	4.1 mA typical (at 24 VDC)	
ON Voltage/ON Current	19.0 VDC min./3 mA min.	
OFF Voltage/OFF Current	5 VDC max./1 mA max.	
ON Response Time	8.0 ms max. (Can be set to between 0 and 32 ms in the Unit Information settings.)*	
OFF Response Time	8.0 ms max. (Can be set to between 0 and 32 ms in the Unit Information settings.)*	
Number of Circuits	32 (16 points/common, 2 circuits)	
Number of Simulta- neously ON Points	75% (12 points/common) simultaneously ON (at 24 VDC) (Refer to the following illustration.)	
Insulation Resistance	20 $M\Omega$ between external terminals and the GR terminal (100 VDC)	
Dielectric Strength	1,000 VAC between the external terminals and the GR terminal for 1 minute at a leakage current of 10 mA max.	
Internal Current Consumption	200 mA max.	
Weight	70 g max.	
Accessories	None	

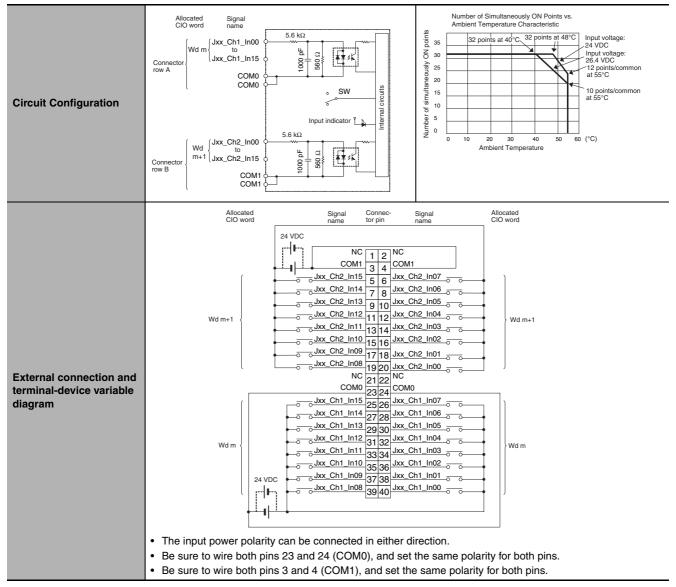

 $^{^*}$ The ON response time will be 15 μ s maximum and OFF response time will be 90 μ s maximum even if the response times are set to 0 ms due to internal element delays.

- Make sure the input power supply voltage is larger than the ON voltage (19 V) plus the residual voltage of the sensor (approx. 3 V).
- Use a sensor with a minimum load current of 3 mA min.
- · Connect bleeder resistance if you connect a sensor with a minimum load current of 5 mA or higher.

• CJ1W-ID261 DC Input Unit (24 VDC, 64 Points)

Name	64-point DC Input Unit with Fujitsu Connector
Model	CJ1W-ID261
Rated Input Voltage	24 VDC
Allowable Input Voltage Range	20.4 to 26.4 VDC
Input Impedance	5.6 kΩ
Input Current	4.1 mA typical (at 24 VDC)
ON Voltage/ON Cur- rent	19.0 VDC min./3 mA min.
OFF Voltage/OFF Current	5 VDC max./1 mA max.


ON Response Time	8.0 ms max. (Can be set to between 0 and 32 ms in the	Unit Information settings.)*				
OFF Response Time	8.0 ms max. (Can be set to between 0 and 32 ms in the Unit Information settings.)*					
Number of Circuits	64 (16 points/common, 4 circuits)					
Number of Simulta- neously ON Points	, ,	60% (16 points/common) simultaneously ON (at 24 VDC) (Refer to the following illustrations.)				
Insulation Resistance	20 $\text{M}\Omega$ between external terminals and the GR terminal ($20~\text{M}\Omega$ between external terminals and the GR terminal (100 VDC)				
Dielectric Strength	1,000 VAC between the external terminals and the GR terminal for 1 minute at a leakage current of 10 mA max.					
Internal Current Consumption) mA max.					
Weight	110 g max.					
Accessories	None					
Circuit Configura- tion	Allocated Signal name	Number of Simultaneously ON Points vs. Ambient Temperature Characteristic 64 points at 47°C 64 points at 35°C 64 points at 47°C 125°C 1 points/common (total: 45 points/common (total: 45 points/common (total: 26 points/common)				
	CN1	CN2				
External connection and terminal-device variable diagram	Allocated CIO word NC B20 A20 NC NC B19 A19 NC	Allocated CIO word Signal Connector pin Indian Ind				

^{*} The ON response time will be 120 μs maximum and OFF response time will be 400 μs maximum even if the response times are set to 0 ms due to internal element delays.

- Make sure the input power supply voltage is larger than the ON voltage (19 V) plus the residual voltage of the sensor (approx. 3 V).
- Use a sensor with a minimum load current of 3 mA min.
- · Connect bleeder resistance if you connect a sensor with a minimum load current of 5 mA or higher.

• CJ1W-ID262 DC Input Unit (24 VDC, 64 Points)

Name	64-point DC Input Unit with MIL Connector		
Model	CJ1W-ID262		
Rated Input Voltage	24 VDC		
Allowable Input Voltage Range	20.4 to 26.4 VDC		
Input Impedance	5.6 kΩ		
Input Current	4.1 mA typical (at 24 VDC)		
ON Voltage/ON Cur- rent	19.0 VDC min./3 mA min.		
OFF Voltage/OFF Current	5 VDC max./1 mA max.		
ON Response Time	8.0 ms max. (Can be set to between 0 and 32 ms in the Unit Information settings.)*		
OFF Response Time	8.0 ms max. (Can be set to between 0 and 32 ms in the Unit Information settings.)*		
Number of Circuits	64 (16 points/common, 4 circuits)		
Number of Simulta- neously ON Points	50% (8 points/common) simultaneously ON (at 24 VDC) (Refer to the following illustrations.)		
Insulation Resistance	20 $M\Omega$ between external terminals and the GR terminal (100 VDC)		
Dielectric Strength	1,000 VAC between the external terminals and the GR terminal for 1 minute at a leakage current of 10 mA max.		
Internal Current Consumption	90 mA max.		
Weight	110 g max.		
Accessories	None		
Circuit Configura- tion	Allocated CIO word and name Allocated CIO word Signal name Signal		

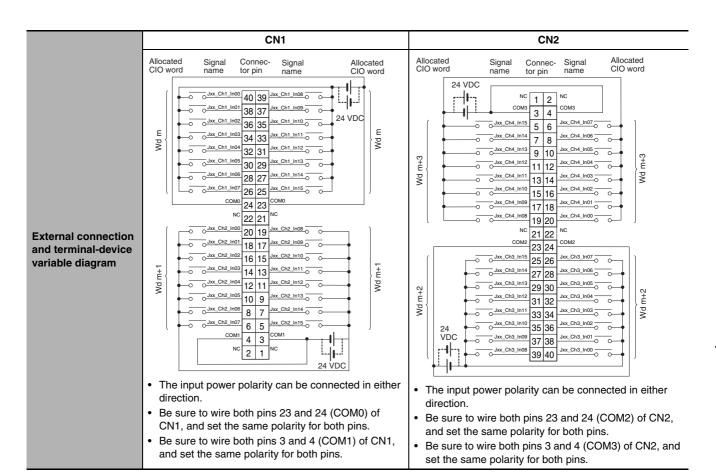

^{*} The ON response time will be 120 μs maximum and OFF response time will be 400 μs maximum even if the response times are set to 0 ms due to internal element delays.

- Make sure the input power supply voltage is larger than the ON voltage (19 V) plus the residual voltage of the sensor (approx. 3 V).
- Use a sensor with a minimum load current of 3 mA min.
- Connect bleeder resistance if you connect a sensor with a minimum load current of 5 mA or higher.

• CJ1W-IA201 AC Input Unit (200 VAC, 8 Points)

Name	8-point AC Input Unit with Terminal Block
Model	CJ1W-IA201
Rated Input Voltage	200 to 240 VAC 50/60 Hz
Allowable Input Voltage Range	170 to 264 VAC
Input Impedance	21 kΩ (50 Hz), 18 kΩ (60 Hz)
Imput Current	9 mA typical (at 200 VAC, 50 Hz),
Input Current	11 mA typical (at 200 VAC, 60 Hz)
ON Voltage/ON Current	120 VAC min./4 mA min.
OFF Voltage/OFF Current	40 VAC max./2 mA max.
ON Response Time	18.0 ms max. (Default setting in Unit Information: 8 ms)*1
OFF Response Time	48.0 ms max. (Default setting in Unit Information: 8 ms)*1
Number of Circuits	8 (8 points/common, 1 circuit)
Number of Simultaneously ON Points	100% (8 points/common) simultaneously ON
Insulation Resistance	20 M Ω between external terminals and the GR terminal (500 VDC)
Dielectric Strength	2,000 VAC between the external terminals and the GR terminal for 1 minute at a leakage current of 10 mA max.
Internal Current Consumption	80 mA max.
Weight	130 g max.
Accessories	None
Circuit Configuration	Signal name Input indicator
Terminal Connections	NC A0 B0 Jxx_Ch1_ln00 O

- *1 Can be set to 0 ms, 0.5 ms, 1 ms, 2 ms, 4 ms, 8 ms, 16 ms, or 32ms in the Unit Information settings. When the response times have been set to 0 ms, the ON response time will be 10 ms maximum and the OFF response time will be 40 ms maximum due to internal element delays.
- *2 Terminal numbers A0 to A8 and B0 to B8 are used in the external connection and terminal-device variable diagrams. They are not printed on the Units.

Note Although 16 I/O bits (1 word) are allocated, only 8 of these can be used for external I/O. These Units are also treated as 16-point I/O Units in the Unit configuration.

• CJ1W-IA111 AC Input Unit (100 VAC, 16 points)

Name	16-point AC Input Unit with Terminal Block
Model	CJ1W-IA111
Rated input voltage	100 to 120 VAC 50/60 Hz ^{*2}
Allowable Input Voltage Range	85 to 132 VAC
Input Impedance	14.5 kΩ (50 Hz), 12 kΩ (60 Hz)
Imput Current	7 mA typical (at 100 VAC, 50 Hz),
Input Current	8 mA typical (at 100 VAC, 60 Hz)
ON Voltage/ON Current	70 VAC min./4 mA min
OFF Voltage/OFF Current	20 VAC max./2 mA max
ON Response Time	18.0 ms max. (Default setting in Unit Information: 8 ms)*1
OFF Response Time	48.0 ms max. (Default setting in Unit Information: 8 ms)*1
Number of Circuits	16 (16 points/common, 1 circuit)
Number of Inputs ON Simultaneously	100% simultaneously ON (16 points/common)
Insulation Resistance	20 $M\Omega$ between external terminals and the GR terminal (500 VDC)
Dielectric Strength	2,000 VAC between the external terminals and the GR terminal for 1 minute at a leakage current of 10 mA max.
Internal Current Consumption	90 mA max.
Weight	130 g max.
Accessories	None
Circuit Layout	Signal name Input indicator Jxx_Ch1_In00
External connection and terminal- device variable diagram	Signal name Connector pin '3 Signal name Jxx_Ch1_In00 A0 Jxx_Ch1_In02 A1 B1 Jxx_Ch1_In03 Jxx_Ch1_In05 Jxx_Ch1_In05 Jxx_Ch1_In07 Jxx_Ch1_In10 A5 Jxx_Ch1_In10 A5 B4 Jxx_Ch1_In109 Jxx_Ch1_In11 A6 A7 COM A8 B8 A8 B8 COM B8 B8 COM

- *1 Can be set to 0 ms, 0.5 ms, 1 ms, 2 ms, 4 ms, 8 ms, 16 ms, or 32ms in the Unit Information settings. When the response times have been set to 0 ms, the ON response time will be 10 ms maximum and the OFF response time will be 40 ms maximum due to internal element delays.
- *2 Use an input voltage of 90 VAC or higher when connecting 2-wire sensors.
- *3 Terminal numbers A0 to A8 and B0 to B8 are used in the external connection and terminal-device variable diagrams. They are not printed on the Units.

• CJ1W-INT01 Interrupt Input Unit (16 Points)

Name	16 point Interrupt Input Unit with Terminal Plack
Model	16-point Interrupt Input Unit with Terminal Block CJ1W-INT01
	24 VDC
Rated Input Voltage	
Allowable Input Voltage Range	20.4 to 26.4 VDC
Input Impedance	3.3 kΩ
Input Current	7 mA typical (at 24 VDC)
ON Voltage/ON Current	14.4 VDC min./3 mA min.
OFF Voltage/OFF Current	5 VDC max./1 mA max.
ON Response Time	0.05 ms max.
OFF Response Time	0.5 ms max.
Number of Circuits	16 (16 points/common, 1 circuit)
Number of Simultaneously ON Points	100% (16 points/common) simultaneously ON (24 VDC)
Insulation Resistance	20 MΩ between external terminals and GR terminal (at 100 VDC)
Dielectric Strength	1,000 VAC between external terminals and GR terminal for 1 minute at a leakage current of 10 mA
-	max.
Internal Current Consumption	80 mA max.
Weight	110 g max.
Accessories	None
Circuit Configuration	 Up to two Interrupt Input Units can be mounted to the CPU Rack. They must be connected as one of the five Units immediately next to the CPU Unit. If an Interrupt Input Unit is connected in any other position, an Incorrect Unit/Expansion Rack Connection error will occur. Set the pulse width of signals input to the Interrupt Input Unit so they satisfy the following conditions.
External connection and terminal-device variable diagram	Signal Connector pin

^{*} Terminal numbers A0 to A8 and B0 to B8 are used in the external connection and terminal-device variable diagrams. They are not printed on the Units.

Note Interrupt Input Units can be used as normal Basic I/O Units. They cannot be used to start I/O interrupt tasks.

• CJ1W-IDP01 Quick-response Input Unit (16 Points)

	- Quick response input offit (10 1 offits)
Name	16-point Quick-response Input Unit with Terminal Block
Model	CJ1W-IDP01
Rated Input Voltage	24 VDC
Allowable Input Voltage Range	20.4 to 26.4 VDC
Input Impedance	3.3 kΩ
Input Current	7 mA typical (at 24 VDC)
ON Voltage/ON Current	14.4 VDC min./3 mA min.
OFF Voltage/OFF Current	5 VDC max./1 mA max.
ON Response Time	0.05 ms max.
OFF Response Time	0.5 ms max.
Number of Circuits	16 (16 points/common, 1 circuit)
Number of Simultaneously ON Points	100% (16 points/common) simultaneously ON (24 VDC)
Insulation Resistance	20 M Ω between external terminals and GR terminal (at 100 VDC)
Dielectric Strength	1,000 VAC between external terminals and GR terminal for 1 minute at a leakage current of 10 mA max.
Internal Current Consumption	80 mA max.
Weight	110 g max.
Accessories	None
Circuit Configuration	Signal name 3.3 kΩ Jxx_Ch1_In00 To Input indicator Number of simultaneously ON points — 16 points at 45°C Ambient temperature characteristics 18 18 19 10 10 11 12 12 15 16 17 16 17 17 18 18 18 19 10 10 10 10 10 10 10 10 10
External connection and terminal-device variable diagram	Signal name pin* name O Jxx_Ch1_In00 A0 B1 Jxx_Ch1_In01 O O

- · With quick-response inputs, pulse inputs shorter than the CPU Unit's cycle time can be read by the CPU Unit.
- The pulse width (ON time) that can be read by the Quick-response Input Unit is 0.05 ms.
- Inputs read by the internal circuits are cleared when inputs are refreshed.
- * Terminal numbers A0 to A8 and B0 to B8 are used in the external connection and terminal-device variable diagrams. They are not printed on the Units.

Basic Output Units

• CJ1W-OC201 Contact Output Unit (Independent Relays, 8 Points)

Name	8-point Contact Output Unit with Terminal Block (Independent Relays)
Model	CJ1W-OC201
Max. Switching Capacity	2 A 250 VAC (cosφ = 1), 2 A 250 VAC (cosφ = 0.4), 2 A 24 VDC (16 A/Unit)
Min. Switching Capacity	1 mA 5 VDC
Relays	NY-24W-K-IE (Fujitsu Takamizawa Components, Ltd.), Cannot be replaced.
Service Life of Relay	Electrical: 150,000 operations (24 VDC, resistive load)/100,000 operations (240 VAC, cosφ = 0.4, inductive load) Mechanical: 20,000,000 operations Service life will vary depending on the connected load. Refer to page A-53 for information on service life according to the load.
ON Response Time	15 ms max.
OFF Response Time	15 ms max.
Number of Circuits	8 independent contacts
Insulation Resistance	20 $M\Omega$ between external terminals and the GR terminal (500 VDC)
Dielectric Strength	2,000 VAC between the external terminals and the GR terminal for 1 minute at a leakage current of 10 mA max.
Internal Current Consumption	90 mA 5 VDC max. 48 mA 24 VDC max. (6 mA × No. of ON points)
Weight	140 g max.
Circuit Configuration	Signal name Jxx_Ch1_Out00 Jxx_Ch1_Out00
External connection and terminal-device variable diagram	Signal connector pin aname Jxx Ch1 Out00 A0 B0 Jxx Ch1 Out00 L Jxx Ch1 Out00 L Jxx Ch1 Out01 L Jxx Ch1 Out03 A3 B2 Jxx Ch1 Out02 L Jxx Ch1 Out03 A3 B3 Jxx Ch1 Out03 L Jxx Ch1 Out04 L Jxx Ch1 Out05 A6 B6 Jxx Ch1 Out05 L Jxx Ch1 Out05 L Jxx Ch1 Out05 L Jxx Ch1 Out06 A6 B6 Jxx Ch1 Out05 L Jxx Ch1 Out07 L Jxx Ch

^{*} Terminal numbers A0 to A8 and B0 to B8 are used in the external connection and terminal-device variable diagrams. They are not printed on the Units.

Note Although 16 I/O bits (1 word) are allocated, only 8 of these can be used for external I/O. These Units are also treated as 16-point I/O Units in the Unit configuration.

• CJ1W-OC211 Contact Output Unit (16 Points)

Name	16-point Contact Output Unit with Terminal Block
Model	CJ1W-OC211
Max. Switching Capacity	2 A 250 VAC (cosφ = 1), 2 A 250 VAC (cosφ = 0.4), 2 A 24 VDC (8 A/Unit)
Min. Switching Capacity	1 mA 5 VDC
Relays	NY-24W-K-IE (Fujitsu Takamizawa Components, Ltd.), Cannot be replaced.
Service Life of Relay	Electrical: 150,000 operations (24 VDC, resistive load)/ 100,000 operations (240 VAC, cosφ = 0.4, inductive load) Mechanical: 20,000,000 operations Service life will vary depending on the connected load. Refer to page A-53 for information on service life according to the load.
ON Response Time	15 ms max.
OFF Response Time	15 ms max.
Number of Circuits	16 points/common, 1 circuit
Insulation Resistance	20 $M\Omega$ between external terminals and the GR terminal (500 VDC)
Dielectric Strength	2,000 VAC between the external terminals and the GR terminal for 1 minute at a leakage current of 10 mA max.
Internal Current Consumption	110 mA 5 VDC max. 96 mA 24 VDC max. (6 mA × No. of ON points)
Weight	170 g max.
Circuit Configuration	Signal name Jxx_Ch1_Out00 to Jxx_Ch1_Out15 COM COM
External connection and terminal-device variable diagram	Signal name

^{*} Terminal numbers A0 to A8 and B0 to B8 are used in the external connection and terminal-device variable diagrams. They are not printed on the Units.

• CJ1W-OA201 Triac Output Unit (8 Points)

Name	8-point Triac Output Unit with Terminal Block
Model	CJ1W-OA201
Max. Switching Capacity	0.6 A 250 VAC, 50/60 Hz (2.4 A/Unit)
Max. Inrush Current	15 A (pulse width: 10 ms max.)
Min. Switching Capacity	50 mA 75 VAC
Leakage Current	1.5 mA (200 VAC) max.
Residual Voltage	1.6 VAC max.
ON Response Time	1 ms max.
OFF Response Time	1/2 of load frequency + 1 ms or less.
Number of Circuits	8 (8 points/common, 1 circuit)
Surge Protector	C.R Absorber + Surge Absorber
Fuses	5 A (1/common, 1 used) The fuse cannot be replaced by the user.
Insulation Resistance	20 $M\Omega$ between the external terminals and the GR terminal (500 VDC)
Dielectric Strength	2,000 VAC between the external terminals and the GR terminal for 1 minute at a leakage current of 10 mA max.
Internal Current Consumption	220 mA max.
Weight	150 g max.
Circuit Configuration	Output indicator Signal name Jxx_Ch1_Out00 to Jxx_Ch1_Out07 COM Fuse
External connection and terminal- device variable diagram	Connector pin* Signal name NC A0 B0 Jxx_Ch1_Out00 L NC A1 B1 Jxx_Ch1_Out01 L NC A2 B2 Jxx_Ch1_Out02 L NC A3 B3 Jxx_Ch1_Out04 L NC A5 B5 Jxx_Ch1_Out05 L NC A6 B6 Jxx_Ch1_Out06 L NC A7 B7 NC A8 B8

^{*} Terminal numbers A0 to A8 and B0 to B8 are used in the external connection and terminal-device variable diagrams. They are not printed on the Units.

Note Although 16 I/O bits (1 word) are allocated, only 8 of these can be used for external I/O. These Units are also treated as 16-point I/O Units in the Unit configuration.

• CJ1W-OD201 Transistor Output Unit (8 Points)

Name	8-point Transistor Output Unit with Terminal Block (Sinking Outputs)
Model	CJ1W-OD201
Rated Voltage	12 to 24 VDC
Operating Load Voltage Range	10.2 to 26.4 VDC
Maximum Load Current	2.0 A/point, 8.0 A/Unit
Maximum Inrush Current	10 A/point, 10 ms max.
Leakage Current	0.1 mA max.
Residual Voltage	1.5 V max.
ON Response Time	0.5 ms max.
OFF Response Time	1.0 ms max.
Insulation Resistance	20 MΩ between the external terminals and the GR terminal (100 VDC)
Dielectric Strength	1,000 VAC between the external terminals and the GR terminal for 1 minute at a leakage current of 10 mA max.
Number of Circuits	8 (4 points/common, 2 circuits)
Internal Current Consumption	90 mA max.
Fuse	6.3 A (1/common, 2 used) The fuse cannot be replaced by the user.
External Power Supply	12 to 24 VDC, 10 mA min.
Weight	110 g max.
Circuit Configuration	Signal name +V Jxx_Ch1_Out00 to Jxx_Ch1_Out03 Fuse COM0 +V Jxx_Ch1_Out04 to Jxx_Ch1_Out04 to Jxx_Ch1_Out07 Fuse COM1
External connection and terminal-device variable diagram	Signal name Connector pin's name Data Ch1_Out00

Terminal numbers A0 to A8 and B0 to B8 are used in the external connection and terminal-device variable diagrams. They are not printed

on the Units.

Note Although 16 I/O bits (1 word) are allocated, only 8 of these can be used for external I/O. These Units are also treated as 16-point I/O Units in the Unit configuration.

• CJ1W-OD203 Transistor Output Unit (8 Points)

Name	8-point Transistor Output Unit with Terminal Block (Sinking Outputs)
Model	CJ1W-OD203
Rated Voltage	12 to 24 VDC
Operating Load Voltage Range	10.2 to 26.4 VDC
Maximum Load Current	0.5 A/point, 4.0 A/Unit
Maximum Inrush Current	4.0 A/point, 10 ms max.
Leakage Current	0.1 mA max.
Residual Voltage	1.5 V max.
ON Response Time	0.1 ms max.
OFF Response Time	0.8 ms max.
Insulation Resistance	20 $M\Omega$ between the external terminals and the GR terminal (100 VDC)
Dielectric Strength	1,000 VAC between the external terminals and the GR terminal for 1 minute at a leakage current of 10 mA max.
Number of Circuits	8 (8 points/common, 1 circuit)
Internal Current Consumption	100 mA max.
Fuse	None
External Power Supply	10.2 to 26.4 VDC, 20 mA min.
Weight	110 g max.
Circuit Configuration	Output indicator
External connection and terminal- device variable diagram	Signal name Corpin - Signal name L Jxx_Ch1_Out00 A0 B0 Jxx_Ch1_Out01 L Jxx_Ch1_Out04 A2 B1 Jxx_Ch1_Out03 L Jxx_Ch1_Out06 A3 B2 Jxx_Ch1_Out05 L Jxx_Ch1_Out06 A3 B3 NC NC A4 B4 NC NC A5 NC NC A6 B6 NC NC A7 B8 NC NC A8 B8 NC NC A8 B8 NC NC A6 B6 NC NC A7 B7 +V • When wiring, pay careful attention to the polarity of the external power supply. The load may operate incorrectly if the polarity is reversed.

^{*} Terminal numbers A0 to A8 and B0 to B8 are used in the external connection and terminal-device variable diagrams. They are not printed on the Units.

Note Although 16 I/O bits (1 word) are allocated, only 8 of these can be used for external I/O. These Units are also treated as 16-point I/O Units in the Unit configuration.

• CJ1W-OD211 Transistor Output Unit (16 Points)

Name	16-point Transistor Output Unit with Terminal Block (Sinking Outputs)
Model	CJ1W-OD211
Rated Voltage	12 to 24 VDC
Operating Load Voltage Range	10.2 to 26.4 VDC
Maximum Load Current	0.5 A/point, 5.0 A/Unit
Maximum Inrush Current	4.0 A/point, 10 ms max.
Leakage Current	0.1 mA max.
Residual Voltage	1.5 V max.
ON Response Time	0.1 ms max.
OFF Response Time	0.8 ms max.
Insulation Resistance	20 M Ω between the external terminals and the GR terminal (100 VDC)
Dielectric Strength	1,000 VAC between the external terminals and the GR terminal for 1 minute at a leakage current of 10 mA max.
Number of Circuits	16 (16 points/common, 1 circuit)
Internal Current Consumption	5 VDC 100 mA max.
Fuse	None
External Power Supply	10.2 to 26.4 VDC, 20 mA min.
Weight	110 g max.
Circuit Configuration	Output indicator +V Jxx_Ch1_Out00 to Jxx_Ch1_Out15
External connection and terminal-device variable diagram	Signal name Connector pin Signal name L Jxx_Ch1_Out00 A0 B0 Jxx_Ch1_Out01 L Jxx_Ch1_Out04 A2 B2 Jxx_Ch1_Out05 L Jxx_Ch1_Out08 A4 B4 Jxx_Ch1_Out07 L Jxx_Ch1_Out10 A5 B5 Jxx_Ch1_Out11 L Jxx_Ch1_Out14 A7 COM A8 B7 12 to 24 VDC • When wiring, pay careful attention to the polarity of the external power supply. The load may operate incorrectly if the polarity is reversed.

^{*} Terminal numbers A0 to A8 and B0 to B8 are used in the external connection and terminal-device variable diagrams. They are not printed on the Units.


• CJ1W-OD213 Transistor Output Unit (16 Points)

Name	16-point Transistor Output Unit with Terminal Block (Sinking Outputs)
Model	CJ1W-OD213
Rated Voltage	24 VDC
Operating Load Voltage Range	20.4 to 26.4 VDC
Maximum Load Current	0.5 A/point, 5.0 A/Unit
Maximum Inrush Current	4.0 A/point, 10 ms max.
Leakage Current	0.1 mA max.
Residual Voltage	1.5 V max.
ON Response Time	15 μs max.
OFF Response Time	80 μs max.
Insulation Resistance	20 MΩ between the external terminals and the GR terminal (100 VDC)
Dielectric Strength	1,000 VAC between the external terminals and the GR terminal for 1 minute at a leakage current of 10 mA max.
Number of Circuits	16 (16 points/common, 1 circuit)
Internal Current Consumption	5 VDC 150 mA max.
Fuse	None
External Power Supply	20.4 to 26.4 VDC, 55 mA min.
Weight	110 g max.
Circuit Configuration	Signal name +V Jxx_Ch1_Out00 to Jxx_Ch1_Out15 COM
External connection and terminal-device variable diagram	Signal connector pin Signal name L Jxx_Ch1_Out00 A0 B0 Jxx_Ch1_Out01 L Jxx_Ch1_Out04 A2 B2 Jxx_Ch1_Out05 L Jxx_Ch1_Out08 A3 B3 Jxx_Ch1_Out07 L Jxx_Ch1_Out10 A5 B5 Jxx_Ch1_Out11 L Jxx_Ch1_Out12 A6 B5 Jxx_Ch1_Out13 L Jxx_Ch1_Out14 A7 B8 Jxx_Ch1_Out15 L Jxx_Ch1_Out15 L When wiring, pay careful attention to the polarity of the external power supply. The load may operate incorrectly if the polarity is reversed.

^{*} Terminal numbers A0 to A8 and B0 to B8 are used in the external connection and terminal-device variable diagrams. They are not printed on the Units.


• CJ1W-OD231 Transistor Output Unit (32 Points)

Name	32-point Transistor Output Unit with Fujitsu Connector (Sinking Outputs)
Model	CJ1W-OD231
Rated Voltage	12 to 24 VDC
Operating Load Voltage Range	10.2 to 26.4 VDC
Maximum Load Current	0.5 A/point, 2.0 A/common, 4.0 A/Unit
Maximum Inrush Current	4.0 A/point, 10 ms max.
Leakage Current	0.1 mA max.
Residual Voltage	1.5 V max.
ON Response Time	0.1 ms max.
OFF Response Time	0.8 ms max.
Insulation Resistance	$20~\text{M}\Omega$ between the external terminals and the GR terminal (100 VDC)
Dielectric Strength	1,000 VAC between the external terminals and the GR terminal for 1 minute at a leakage current of 10 mA max.
Number of Circuits	32 (16 points/common, 2 circuits)
Internal Current Consumption	5 VDC 140 mA max.
Fuse	None
External Power Supply	10.2 to 26.4 VDC, 30 mA min.
Weight	70 g max.
Accessories	None
Circuit Configuration	Signal name Allocated CIO word +V Jxx_Ch1_Out00 to Jxx_Ch1_Out15 Wd m Connector row A COM0 COM0 To Jxx_Ch2_Out00 to Jxx_Ch2_Out15 COM1 COM1 COM1

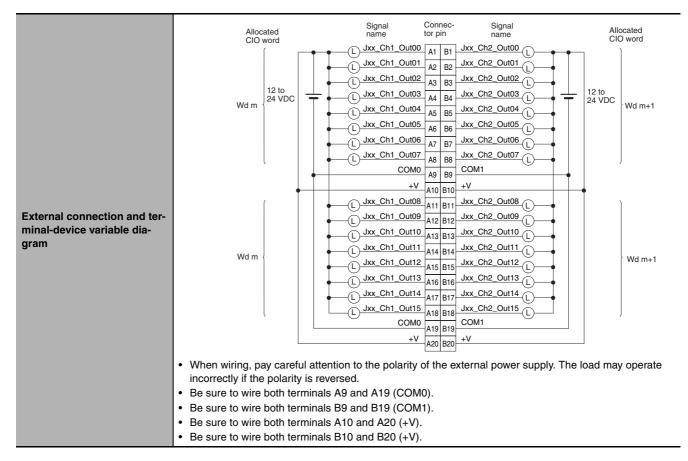


CJ1W-OD233 Transistor Output Unit (32 Points)

Name	32-point Transistor Output Unit with MIL Connector (Sinking Outputs)
Model	CJ1W-OD233
Rated Voltage	12 to 24 VDC
Operating Load Voltage Range	10.2 to 26.4 VDC
Maximum Load Current	0.5 A/point, 2 A/common, 4 A/Unit
Maximum Inrush Current	4.0 A/point, 10 ms max.
Leakage Current	0.1 mA max.
Residual Voltage	1.5 V max.
ON Response Time	0.1 ms max.
OFF Response Time	0.8 ms max.
Insulation Resistance	20 $M\Omega$ between the external terminals and the GR terminal (100 VDC)
Dielectric Strength	1,000 VAC between the external terminals and the GR terminal for 1 minute at a leakage current of 10 mA max.
Number of Circuits	32 (16 points/common, 2 circuits)
Internal Current Consumption	140 mA max.
Fuse	None
External Power Supply	12 to 24 VDC, 30 mA min.
Weight	70 g max.

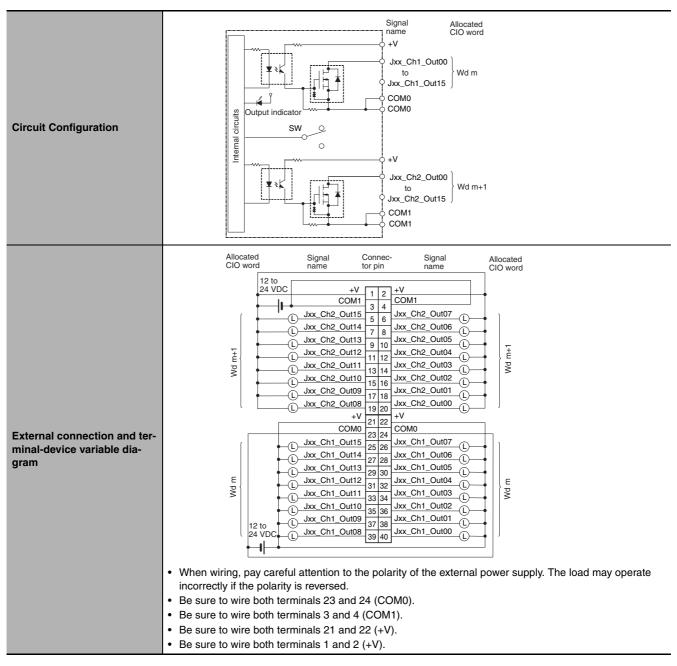


• CJ1W-OD234 Transistor Output Unit (32 Points)

Name	32-point Transistor Output Unit with MIL Connector (Sinking Outputs)
Model	CJ1W-OD234
Rated Voltage	24 VDC
Operating Load Voltage Range	20.4 to 26.4 VDC
Maximum Load Current	0.5 A/point, 2 A/common, 4 A/Unit
Maximum Inrush Current	4.0 A/point, 10 ms max.
Leakage Current	0.1 mA max.
Residual Voltage	1.5 V max.
ON Response Time	15 μs max.
OFF Response Time	80 μs max.
Insulation Resistance	20 $M\Omega$ between the external terminals and the GR terminal (100 VDC)
Dielectric Strength	1,000 VAC between the external terminals and the GR terminal for 1 minute at a leakage current of 10 mA max.
Number of Circuits	32 (16 points/common, 2 circuits)

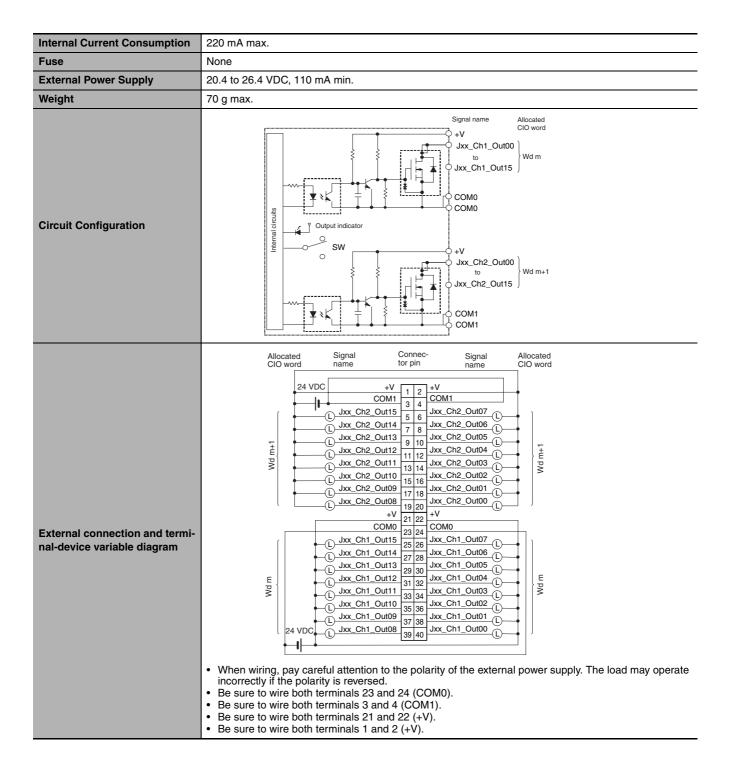


• CJ1W-OD261 Transistor Output Unit (64 Points)

Name	64-point Transistor Output Unit with Fujitsu Connectors (Sinking Outputs)
Model	CJ1W-OD261
Rated Voltage	12 to 24 VDC
Operating Load Voltage Range	10.2 to 26.4 VDC
Maximum Load Current	0.3 A/point, 1.6 A/common, 6.4 A/Unit
Maximum Inrush Current	3.0 A/point, 10 ms max.
Leakage Current	0.1 mA max.
Residual Voltage	1.5 V max.
ON Response Time	0.5 ms max.
OFF Response Time	1.0 ms max.
Insulation Resistance	20 M Ω between the external terminals and the GR terminal (100 VDC)
Dielectric Strength	1,000 VAC between the external terminals and the GR terminal for 1 minute at a leakage current of 10 mA max.
Number of Circuits	64 (16 points/common, 4 circuits)
Internal Current Consumption	5 VDC, 170 mA max.
Fuse	None
External Power Supply	10.2 to 26.4 VDC, 50 mA min.
Weight	110 g max.
Accessories	None
Circuit Configuration	Signal name Allocated CIO word +V Jxx_Ch1_Out00 Jxx_Ch2_Out00 COM0 COM0 COM0 COM1 Jxx_Ch2_Out15 COM1 COnnector row B Connector row B

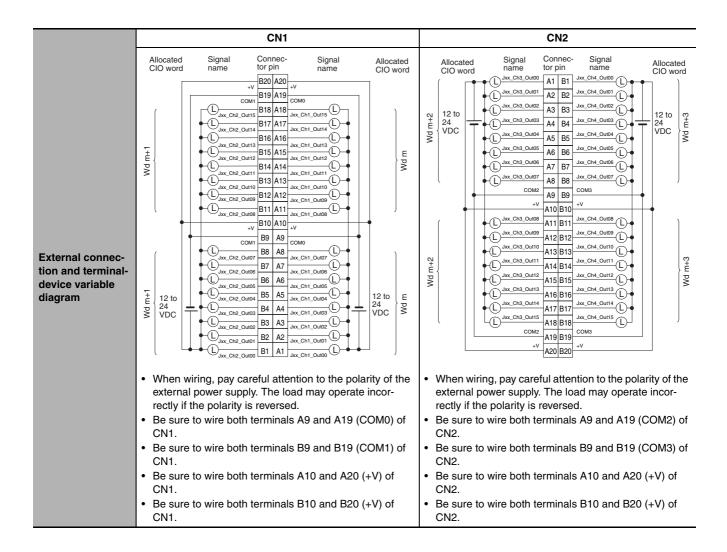


• CJ1W-OD263 Transistor Output Unit (64 Points)

Name	64-point Transistor Output Unit with MIL Connectors (Sinking Outputs)
Model	CJ1W-OD263
Rated Voltage	12 to 24 VDC
Operating Load Voltage Range	10.2 to 26.4 VDC
Maximum Load Current	0.3 A/point, 1.6 A/common, 6.4 A/Unit
Maximum Inrush Current	3.0 A/point, 10 ms max.
Leakage Current	0.1 mA max.
Residual Voltage	1.5 V max.
ON Response Time	0.5 ms max.
OFF Response Time	1.0 ms max.
Insulation Resistance	20 M Ω between the external terminals and the GR terminal (100 VDC)
Dielectric Strength	1,000 VAC between the external terminals and the GR terminal for 1 minute at a leakage current of 10 mA max.
Number of Circuits	64 (16 points/common, 4 circuits)
Internal Current Consumption	170 mA max.
Fuse	None
External Power Supply	12 to 24 VDC, 50 mA min.
Weight	110 g max.
Circuit Configuration	Signal name CiO word +V Jxx_Ch1_Out00 Jxx_Ch1_Out15 COM0 +V Jxx_Ch2_Out00 Lv Jxx_Ch2_Out15 Output indicator COM1 -V Jxx_Ch3_Out15 COM2 -V Jxx_Ch4_Out00 Jxx_Ch4_Out15 COM2 COM3 COM3 COM3 COM3

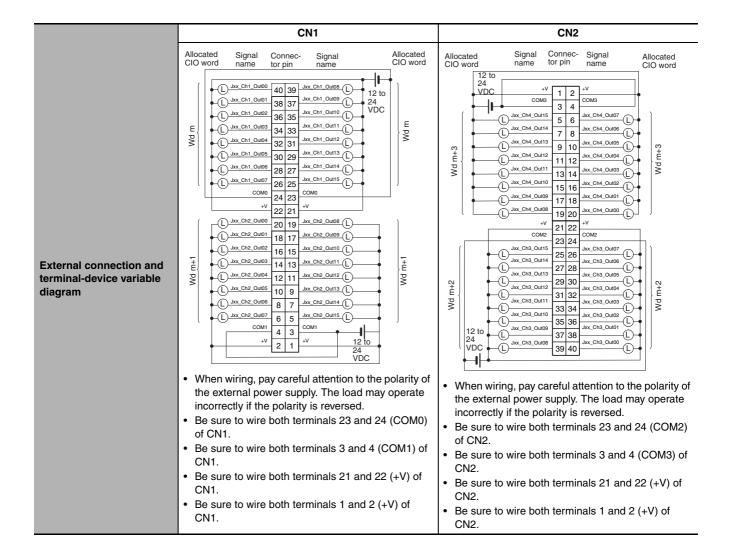

• CJ1W-OD202 Transistor Output Unit (8 Points)

Name	8-point Transistor Output Unit with Terminal Block (Sourcing Outputs)
Model	CJ1W-OD202
Rated Voltage	24 VDC
Operating Load Voltage Range	20.4 to 26.4 VDC
Maximum Load Current	2 A/point, 8 A/Unit
Leakage Current	0.1 mA max.
Residual Voltage	1.5 V max.
ON Response Time	0.5 ms max.
OFF Response Time	1.0 ms max.
Load Short-circuit Protection	Detection current: 6 A min. Automatic restart after error clearance. (Refer to page A-99.)
Line Disconnection Detection	Detection current: 200 mA (Refer to page A-99.)
Insulation Resistance	20 M Ω between the external terminals and the GR terminal (100 VDC)
Dielectric Strength	1,000 VAC between the external terminals and the GR terminal for 1 minute at a leakage current of 10 mA max.
Number of Circuits	8 (4 points/common, 2 circuits)
Internal Current Consumption	110 mA max.
Fuse	None
External Power Supply	24 VDC, 50 mA min.
Weight	120 g max.
Circuit Configuration	Signal name COM0 (+V) Jxx_Ch1_Out00 Jxx_Ch1_Out03 0 V COM1 (+V) Jxx_Ch1_Out04 to Jxx_Ch1_Out04 to Jxx_Ch1_Out07 0 V • When an overcurrent or line disconnection is detected, the ERR indicator will light. At the same time, the corresponding bit (two points per bit) in the Basic I/O Unit Information Area system-defined variable (A050 to A069) will change to TRUE.

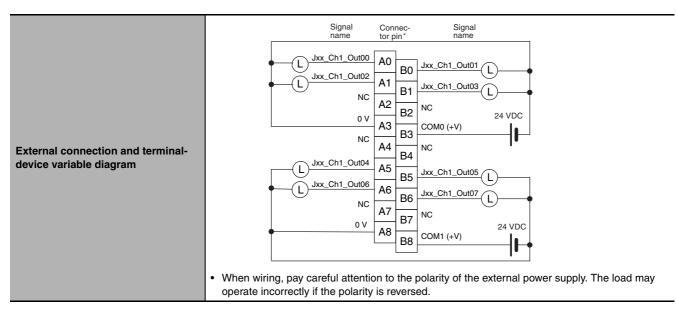

^{*} Terminal numbers A0 to A8 and B0 to B8 are used in the external connection and terminal-device variable diagrams. They are not printed on the Units.

Note Although 16 I/O bits (1 word) are allocated, only 8 of these can be used for external I/O. These Units are also treated as 16-point I/O Units in the Unit configuration.

• CJ1W-OD204 Transistor Output Unit (8 Points)

Name	8-point Transistor Output Unit with Terminal Block (Sourcing Outputs)
Model	CJ1W-OD204
Rated Voltage	24 VDC
Operating Load Voltage Range	20.4 to 26.4 VDC
Maximum Load Current	0.5 A/point, 4.0 A/Unit
Leakage Current	0.1 mA max.
Residual Voltage	1.5 V max.
ON Response Time	0.5 ms max.
OFF Response Time	1.0 ms max.
Load Short-circuit Protection	Detection current: 0.7 to 2.5 A Automatic restart after error clearance. (Refer to page A-102.)
Insulation Resistance	20 M Ω between the external terminals and the GR terminal (100 VDC)
Dielectric Strength	1,000 VAC between the external terminals and the GR terminal for 1 minute at a leakage current of 10 mA max.
Number of Circuits	8 (8 points/common, 1 circuit)
Internal Current Consumption	100 mA max.
Fuse	None
External Power Supply	20.4 to 26.4 VDC, 40 mA min.
Weight	120 g max.
Circuit Configuration	Signal name COM (+V) Jxx_Ch1_Out00 to O V • When an overcurrent is detected, the ERR indicator will light. At the same time, the corresponding bit (two points per bit) in the Basic I/O Unit Information Area system-defined variable (A050 to A069) will change to TRUE.
External connection and terminal- device variable diagram	Signal connector pin Signal name Jax_Ch1_Out00 AD BD Jax_Ch1_Out01 D Jax_Ch1_Out02 AT BD Jax_Ch1_Out03 D Jax_Ch1_Out04 AZ BD Jax_Ch1_Out05 D Jax_Ch1_Out05 D Jax_Ch1_Out05 D Jax_Ch1_Out07 D Jax_Ch1_Out03 D Jax_Ch1_Out03 D Jax_Ch1_Out05 D Jax_Ch1_Out0

Terminal numbers A0 to A8 and B0 to B8 are used in the external connection and terminal-device variable diagrams. They are not printed on the Units.

Note Although 16 I/O bits (1 word) are allocated, only 8 of these can be used for external I/O. These Units are also treated as 16-point I/O Units in the Unit configuration.


• CJ1W-OD212 Transistor Output Unit (16 Points)

Name	16-point Transistor Output Unit with Terminal Block (Sourcing Outputs)
Model	CJ1W-OD212
Rated Voltage	24 VDC
Operating Load Voltage Range	20.4 to 26.4 VDC
Maximum Load Current	0.5 A/point, 5.0 A/Unit
Maximum Inrush Current	0.1 mA max.
Leakage Current	1.5 V max.
ON Response Time	0.5 ms max.
OFF Response Time	1.0 ms max.
Load Short-circuit Protection	Detection current: 0.7 to 2.5 A Automatic restart after error clearance. (Refer to page A-102.)
Insulation Resistance	20 MΩ between the external terminals and the GR terminal (100 VDC)
Dielectric Strength	1,000 VAC between the external terminals and the GR terminal for 1 minute at a leakage current of 10 mA max.
Number of Circuits	16 (16 points/common, 1 circuit)
Internal Current Consumption	5 VDC, 100 mA max.
External Power Supply	20.4 to 26.4 VDC, 40 mA min.
Weight	120 g max.
Circuit Configuration	Signal name COM (+V) Jxx_Ch1_Out00 Jxx_Ch1_Out15 0 V When an overcurrent is detected, the ERR indicator will light. At the same time, the corresponding bit (two points per bit) in the Basic I/O Unit Information Area system-defined variable (A050 to A069) will change to TRUE.
External connection and terminal-device variable diagram	Signal name Data D

^{*} Terminal numbers A0 to A8 and B0 to B8 are used in the external connection and terminal-device variable diagrams. They are not printed on the Units.


• CJ1W-OD232 Transistor Output Unit (32 Points)

Name	32-point Transistor Output Unit with MIL Connector (Sourcing Outputs)
Model	CJ1W-OD232
Rated Voltage	24 VDC
Operating Load Voltage Range	20.4 to 26.4 VDC
Maximum Load Current	0.5 A/point, 2.0 A/common, 4.0 A/Unit
Leakage Current	0.1 mA max.
Residual Voltage	1.5 V max.
ON Response Time	0.5 ms max.
OFF Response Time	1.0 ms max.
Load Short-circuit Protection	Detection current: 0.7 to 2.5 A Automatic restart after error clearance. (Refer to page A-102.)
Insulation Resistance	20 MΩ between the external terminals and the GR terminal (100 VDC)
Dielectric Strength	1,000 VAC between the external terminals and the GR terminal for 1 minute at a leakage current of 10 mA max.
Number of Circuits	32 (16 points/common, 2 circuits)
Internal Current Consumption	5 VDC 150 mA max.
External Power Supply	20.4 to 26.4 VDC, 70 mA min.
Weight	80 g max.
Accessories	None
Circuit Configuration	Signal name COM0 (+V) COM0 (+V) COM0 (+V) Wd m Sw Output indicator COM1 (+V) COM1 (+V) COM1 (+V) COM1 (+V) COM1 (+V) COM1 (+V) COM1 (+V) COM2 Ch2 Out15 Wd m+1 When an overcurrent is detected, the ERR indicator will light. At the same time, the corresponding bit (two points per bit) in the Basic I/O Unit Information Area system-defined variable (A050 to
	bit (two points per bit) in the Basic I/O Unit Information Area system-defined variable (A050 to A069) will change to TRUE.

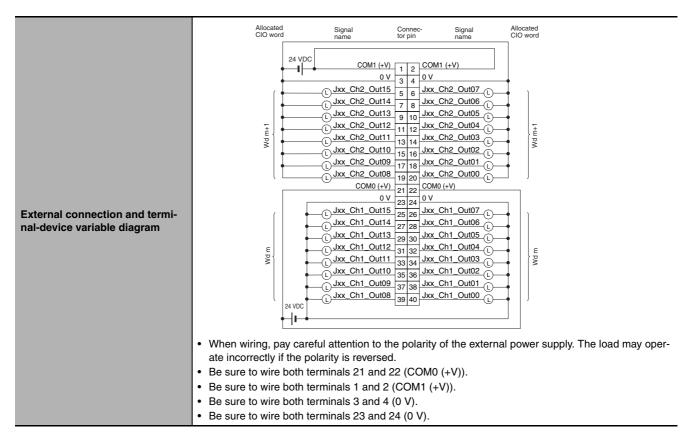

CJ1W-OD262 Transistor Output Unit (64 Points)


Name	64-point Transistor Output Unit with MIL Connectors (Sourcing Outputs)
Model	CJ1W-OD262
Rated Voltage	12 to 24 VDC
Operating Load Voltage Range	10.2 to 26.4 VDC
Maximum Load Cur- rent	0.3 A/point, 1.6 A/common, 6.4 A/Unit
Maximum Inrush Current	3.0 A/point, 10 ms max.
Leakage Current	0.1 mA max.
Residual Voltage	1.5 V max.
ON Response Time	0.5 ms max.
OFF Response Time	1.0 ms max.
Insulation Resistance	20 M Ω between the external terminals and the GR terminal (100 VDC)
Dielectric Strength	1,000 VAC between the external terminals and the GR terminal for 1 minute at a leakage current of 10 mA max.
Number of Circuits	64 (16 points/common, 4 circuits)
Internal Current Consumption	170 mA max. (5 VDC)
Fuse	None
External Power Supply	10.2 to 26.4 VDC, 50 mA min.
Weight	110 g max.
Accessories	None

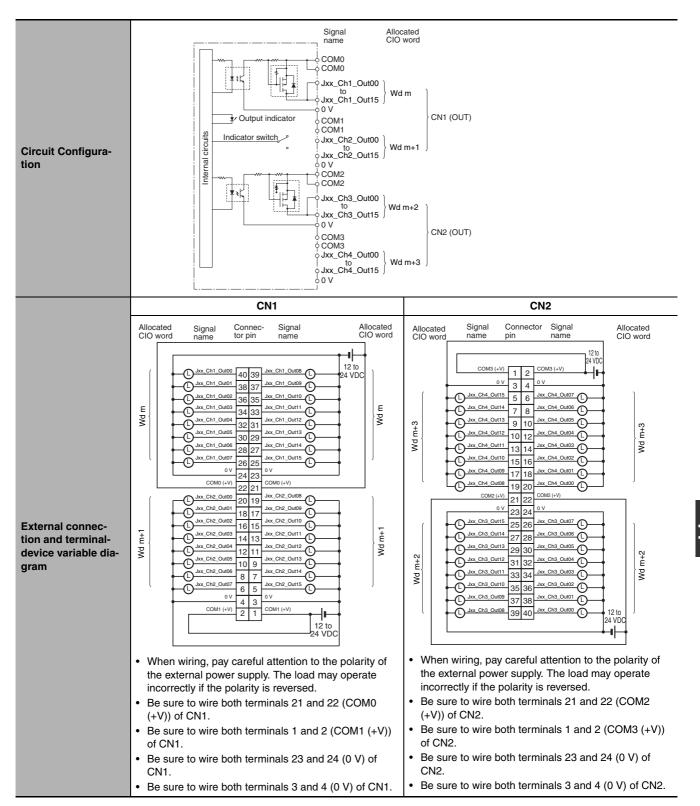

Mixed I/O Units

• CJ1W-MD231 DC Input/Transistor Output Unit (24 VDC, 16 Inputs/16 Outputs)


Name	16-point DC Input/16-point	Transistor Output Unit with	Fujitsu Connectors (Sinking Outputs)			
Model	CJ1W-MD231					
Output section (CN1)		Input section (CN2)				
Rated Voltage	12 to 24 VDC	Rated Input Voltage	24 VDC			
Operating Load Voltage Range	10.2 to 26.4 VDC	Operating Input Voltage	20.4 to 26.4 VDC			
Maximum Load Current	0.5 A/point, 2.0 A/Unit	3.3 kΩ				
Maximum Inrush Current	4.0 A/point, 10 ms max.	Input Current	7 mA typical (at 24 VDC)			
Leakage Current	0.1 mA max.	ON Voltage/ON Cur- rent	14.4 VDC min./3 mA min.			
Residual Voltage	1.5 V max.	OFF Voltage/OFF Current	5 VDC max./1 mA max.			
ON Response Time	0.1 ms max.	ON Response Time	8.0 ms max. (Can be set to between 0 and 32 ms in the Unit Information settings.)*			
OFF Response Time	0.8 ms max.	ON nesponse fille	Unit Information settings.)*			
No. of Circuits	16 (16 points/common, 1 circuit)	OFF Response Time	8.0 ms max. (Can be set to between 0 and 32 ms in the Unit Information settings.)*			
Fuse	None					
	12 to 24 VDC, 20 mA min.	No. of Circuits	16 (16 points/common, 1 circuit)			
External Power Supply		Number of Simulta- neously ON Points	75% (at 24 VDC)			
Insulation Resistance	20 M Ω between the external	al terminals and the GR ter	minal (at 100 VDC)			
Dielectric Strength	1,000 VAC between the exte	ernal terminals and the GR	terminal for 1 minute at a leakage current of 10 mA max.			
Internal Current Consumption	5 VDC 130 mA max.					
Weight	90 g max.					
Accessories	None					
Circuit Configuration	CN1 ((gnal name Allocated CIO word x_Ch1_Out00 to x_Ch1_Out07 DM0 Allocated CIO word Connect or row A	Connect or row A Allocated Signal name CIO word Connect or row A Connect or row B Number of Simultaneously ON Points vs. Ambient Temperature Number of Simultaneously ON Points at 45°C Input voltage: 24 VDC Input voltage: 26.4 VDC			

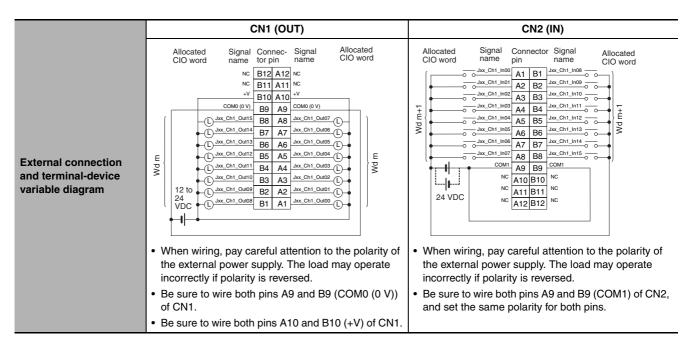

The ON response time will be 20 µs maximum and OFF response time will be 400 µs maximum even if the response times are set to 0 ms due to internal element delays.

• CJ1W-MD233 DC Input/Transistor Output Unit (24 VDC, 16 Inputs/16 Outputs)


Name	16-point DC Input/16-point Tra	ansistor Output Unit wi	th MIL Connectors (Sinking Outputs)
Model	CJ1W-MD233		
Output section (CN1)		Input section (CN2)	
Rated Voltage	12 to 24 VDC	Rated Input Voltage	24 VDC
Operating Load Voltage Range	10.2 to 26.4 VDC	Operating Input Voltage	20.4 to 26.4 VDC
Maximum Load Current	0.5 A/point, 2.0 A/Unit	Input Impedance	3.3 kΩ
Maximum Inrush Current	4.0 A/point, 10 ms max.	Input Current	7 mA typical (at 24 VDC)
Leakage Current	0.1 mA max.	ON Voltage/ON Current	14.4 VDC min./3 mA min.
Residual Voltage	1.5 V max.	OFF Voltage/OFF Current	5 VDC max./1 mA max.
ON Response Time	0.1 ms max.	ON Response	8.0 ms max. (Can be set to between 0 and 32 ms in
OFF Response Time	0.8 ms max.	Time	the Unit Information settings.)*
No. of Circuits	16 (16 points/common, 1 circuit)	OFF Response	8.0 ms max. (Can be set to between 0 and 32 ms in the Unit Information settings.)*
Fuse	None	Time	
	12 to 24 VDC, 20 mA min.	No. of Circuits	16 (16 points/common, 1 circuit)
External Power Supply		Number of Simultaneously ON Points	75% (at 24 VDC)
Insulation Resistance	20 $M\Omega$ between the external t	terminals and the GR t	erminal (at 100 VDC)
Dielectric Strength	1,000 VAC between the externmax.	nal terminals and the G	GR terminal for 1 minute at a leakage current of 10 mA
Internal Current Consumption	5 VDC 130 mA max.		
Weight	90 g max.		
Accessories	None		
	CN1 (OU	T)	CN2 (IN)
Circuit Configuration	Untermal circuits Output indicator	Signal name Allocated CIO word +V DAX_Ch1_Out00 to JAX_Ch1_Out07 COM0 +V DAX_Ch1_Out08 to JAX_Ch1_Out08 COM0 COM0 COM0 COM0 COM0	Allocated CIO word Wd m+1 Signal name 3.3 kΩ Input indicator Signal name 3.3 kΩ Input indicator Signal name 3.3 kΩ Input indicator Signal name COM1 Allocated Signal name 3.3 kΩ Input indicator Signal name Signal name COM1 Input indicator In
			12 points at 55°C 12 points at 55°C 9 points at 55°C 9 points at 55°C Ambient Temperature

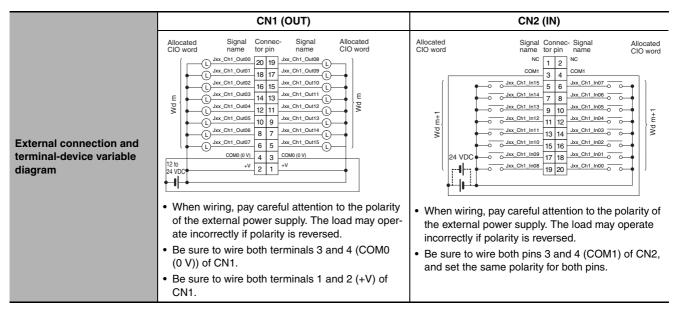

^{*} The ON response time will be 20 µs maximum and OFF response time will be 400 µs maximum even if the response times are set to 0 ms due to internal element delays.

• CJ1W-MD261 DC Input/Transistor Output Unit (24 VDC 32 Inputs/32 Outputs)


Name	32-point DC Input/32-point Transistor Output Unit with Fujitsu Connectors (Sinking Outputs)								
Model	CJ1W-MD261								
Output section (CN	1)	Input section (CN2)							
Rated Voltage	12 to 24 VDC	Rated Input Voltage	24 VDC						
Operating Load Voltage Range	10.2 to 26.4 VDC	Operating Input Voltage	20.4 to 26.4 VDC						
Maximum Load Current	0.3 A/point, 1.6 A/common, 3.2 A/Unit	Input Impedance	5.6 kΩ						
Maximum Inrush Current	3.0 A/point, 10 ms max.	Input Current	4.1 mA typical (at 24 VDC)						
Leakage Current	0.1 mA max.	ON Voltage/ON Current	19.0 VDC min./3 mA min. *1						
Residual Voltage	1.5 V max.	OFF Voltage/OFF Current	5 VDC max./1 mA max.						
ON Response Time	0.5 ms max.	ON Response Time	8.0 ms max. (Can be set to between 0 and 32 ms in the Unit Information						
OFF Response Time	1.0 ms max.	ON Nesponse Time	settings.)*2						
No. of Circuits	32 (16 points/common, 2 circuits)		8.0 ms max. (Can be set to between						
Fuse	None	OFF Response Time	0 and 32 ms in the Unit Information settings.)*2						
External Power	12 to 24 VDC, 30 mA min.	No. of Circuits	32 (16 points/common, 2 circuits)						
Supply		Number of Simultaneously ON Points	75% (24 points) (at 24 VDC)						
Insulation Resistance	20 $M\Omega$ between the external terminals and	the GR terminal (at 100 VDC)							
Dielectric Strength	1,000 VAC between the external terminals a	and the GR terminal for 1 minute a	at a leakage current of 10 mA max.						
Internal Current Consumption	5 VDC 140 mA max.								
Weight	110 g max.								
Accessories	None								

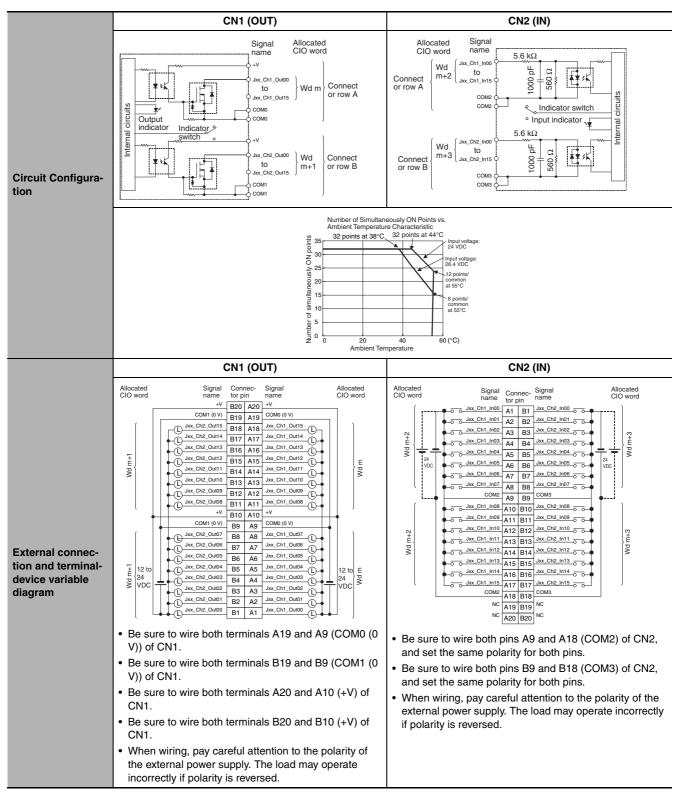

- *1 Observe the following restrictions when connecting to a 2-wire sensor.
 - Make sure the input power supply voltage is larger than the ON voltage (19 V) plus the residual voltage of the sensor (approx. 3 V).
 - Use a sensor with a minimum load current of 3 mA min.
 - · Connect bleeder resistance if you connect a sensor with a minimum load current of 5 mA or higher.
- *2 The ON response time will be 120 μ s maximum and OFF response time will be 400 μ s maximum even if the response times are set to 0 ms due to internal element delays.

• CJ1W-MD263 DC Input/Transistor Output Unit (24 VDC 32 Inputs/32 Outputs)


Name	32-point DC Input/32-point Transistor Output	ut Unit with MIL Conn	ectors (Si	nkina Outputs)
Model	CJ1W-MD263			
Output section (CN	1)	Input section (CN2	!)	
Rated Voltage	12 to 24 VDC	Rated Input Voltag		24 VDC
Operating Load Voltage Range	10.2 to 26.4 VDC	Operating Input Vo	oltage	20.4 to 26.4 VDC
Maximum Load Current	0.3 A/point, 1.6 A/common, 3.2 A/Unit	Input Impedance		5.6 kΩ
Maximum Inrush Current	3.0 A/point, 10 ms max.	Input Current		4.1 mA typical (at 24 VDC)
Leakage Current	0.1 mA max.	ON Voltage/ON Cu	rrent	19.0 VDC min./3 mA min.*1
Residual Voltage	1.5 V max.	OFF Voltage/OFF O	Current	5 VDC max./1 mA max.
ON Response Time	0.5 ms max.	ON Response Time	e	8.0 ms max. (Can be set to between 0 and 32 ms in the Unit Information set-
OFF Response Time	1.0 ms max.			tings.)*2
No. of Circuits Fuse	32 (16 points/common, 2 circuits) None	OFF Response Tin	ne	8.0 ms max. (Can be set to between 0 and 32 ms in the Unit Information set-
	12 to 24 VDC, 30 mA min.	No. of Circuits		tings.)*2 32 (16 points/common, 2 circuits)
External Power Supply	12 to 24 VDO, 30 HIA HIIII.	Number of Simultaneously ON Points		75% (24 points) (at 24 VDC)
Insulation Resistance	20 M Ω between the external terminals and	,		
Dielectric Strength	1,000 VAC between the external terminals	and the GR terminal f	or 1 minu	te at a leakage current of 10 mA max.
Internal Current Consumption	5 VDC 140 mA max.			
Weight	110 g max.			
Accessories	None			
	CN1 (OUT)			CN2 (IN)
Circuit Configuration	Signal name +V Jxx_Ch1_Ot to Jxx_Ch1_Ot COM0 COM0 Output indicator indicator yxx_Ch2_Ot to Jxx_Ch2_Ot COM1	Signal name xx_Ch1_ln00 xx_Ch1_ln15 COM2 COM2 Indicator switch Input indicator xx_Ch2_ln00 to xx_Ch2_ln15 COM3 COM3 COM3		
	Number of simultaneously ON points 0 9 01 91 05 97 08			age:

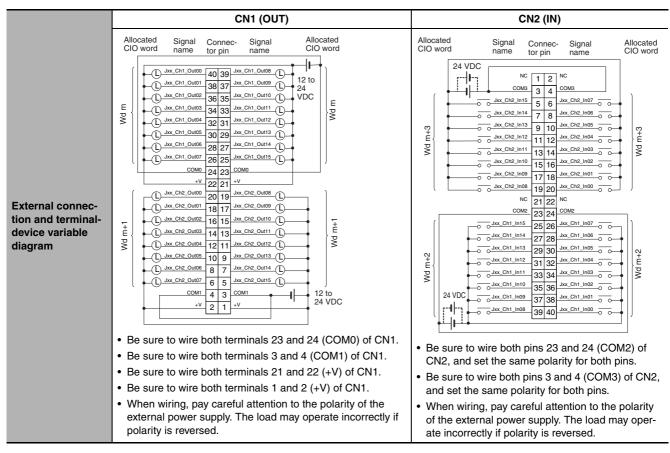

- *1 Observe the following restrictions when connecting to a 2-wire sensor.
 - Make sure the input power supply voltage is larger than the ON voltage (19 V) plus the residual voltage of the sensor (approx. 3 V).
 - Use a sensor with a minimum load current of 3 mA min.
 - · Connect bleeder resistance if you connect a sensor with a minimum load current of 5 mA or higher.
- * 2 The ON response time will be 120 μ s maximum and OFF response time will be 400 μ s maximum even if the response times are set to 0 ms due to internal element delays.

• CJ1W-MD232 DC Input/Transistor Output Unit (24 VDC, 16 inputs/16 Outputs)


Name	16-point DC Input/16-point Transisto	or Output Unit with MIL	Connectors (Sourcing Outputs)
Model	CJ1W-MD232		
Output section (CN1)		Input section (CN2)	
Rated Voltage	24 VDC	Rated Input Voltage	24 VDC
Operating Load Voltage Range	20.4 to 26.4 VDC	Operating Input Voltage	20.4 to 26.4 VDC
Maximum Load Current	0.5 A/point, 2.0 A/Unit	Input Impedance	3.3 kΩ
Leakage Current	0.1 mA max.	Input Current	7 mA typical (at 24 VDC)
Residual Voltage	1.5 V max.	ON Voltage/ON Current	14.4 VDC min./3 mA min.
ON Response Time	0.5 ms max.	OFF Voltage/OFF Current	5 VDC max./1 mA max.
OFF Response Time	1.0 ms max.	ON Response Time	8.0 ms max. (Can be set to between 0 and 32 ms in the Unit Information settings.)*
Load Short-circuit Protection	Detection current: 0.7 to 2.5 A min. Automatic restart after error clearance. (Refer to page A-102.)	OFF Response Time	8.0 ms max. (Can be set to between 0 and 32 ms in the Unit Information settings.)*
No. of Circuits	16 (16 points/common, 1 circuit)	No. of Circuits	16 (16 points/common, 1 circuit)
External Power Supply	20.4 to 26.4 VDC, 40 mA min.	Number of Simultaneously ON Points	75% (at 24 VDC)
Insulation Resistance	20 $M\Omega$ between the external termin	als and the GR termina	al (at 100 VDC)
Dielectric Strength	1,000 VAC between the external ter max.	rminals and the GR ter	minal for 1 minute at a leakage current of 10 mA
Internal Current Consumption	5 VDC 130 mA max.		
Weight	100 g max.		
Accessories	None		
	CN1 (OUT)		CN2 (IN)
Circuit Configuration	Output indicator	Signal Allocated COM0 (+V) Allocated CIO word	Allocated Signal CIO word name 3.3 kΩ 1

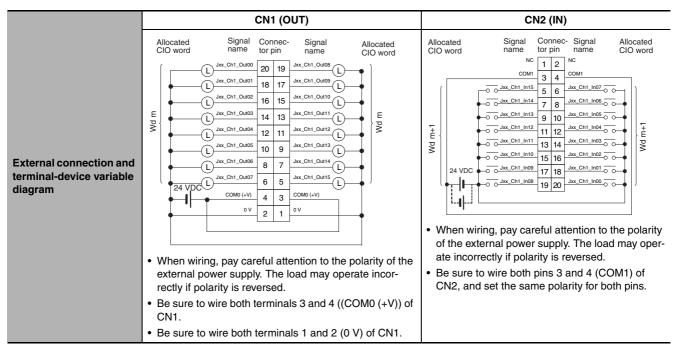

^{*} The ON response time will be 20 μs maximum and OFF response time will be 400 μs maximum even if the response times are set to 0 ms due to internal element delays.

• CJ1W-MD563 TTL I/O Unit (32 Inputs/32 Outputs)

Name	32-point Input /32-point Output TTI	L I/O Unit with MIL Cor	nnectors			
Model	CJ1W-MD563					
Output section (CN1)		Input section (CN2)				
Rated Voltage	5 VDC±10%	Rated Input Voltage	5 VDC±10%			
Operating Load Voltage Range	4.5 to 5.5 VDC	Input Impedance	1.1 kΩ			
Maximum Load Cur- rent	35 mA/point, 560 mA/common, 1.12 A/Unit	Approx. 3.5 mA (at 5 VDC)				
Leakage Current	0.1 mA max.	ON Voltage	3.0 VDC min.			
Residual Voltage	0.4 V max.	OFF Voltage	1.0 VDC max.			
ON Response Time	0.2 ms max.	ON Response Time	8.0 ms max. (Can be set to between 0 and 32 ms in the Unit Information settings.)*			
OFF Response Time	0.3 ms max.	OFF D				
No. of Circuits	32 points (16 points/common, 2 circuits)	OFF Response Time	8.0 ms max. (Can be set to between 0 and 32 ms in the Unit Information settings.)*			
Fuse	None	No. of Circuits	32 points (16 points/common, 2 circuits)			
External Power Supply	5 VDC±10%, 40 mA min. (1.2 mA × No. of ON points)	Number of Simultaneously ON Points	100% (16 points/common)			
Insulation Resistance	20 $M\Omega$ between the external termin	minals and the GR terminal (at 100 VDC)				
Dielectric Strength	1,000 VAC between the external te	erminals and the GR te	erminal for 1 minute at a leakage current of 10 mA max.			
Internal Current Consumption	5 VDC 190 mA max.					
Weight	110 g max.					
Accessories	None					
	CN1 (OUT)		CN2 (IN)			
Circuit Configuration	Se fig. Output indicator indicator switch s	Ch1_Out00 to Ch1_Out15 Wd m Ch2_Out00 Ch2_Out15 Wd m+1	Allocated CIO word Wd m+2 Jxx_Ch1_In00 To Jxx_Ch1_In15 COM2 Indicator switch Input indicator Wd m+3 Jxx_Ch2_In15 COM3 Wd m+3 Jxx_Ch2_In15 COM3 COM3			

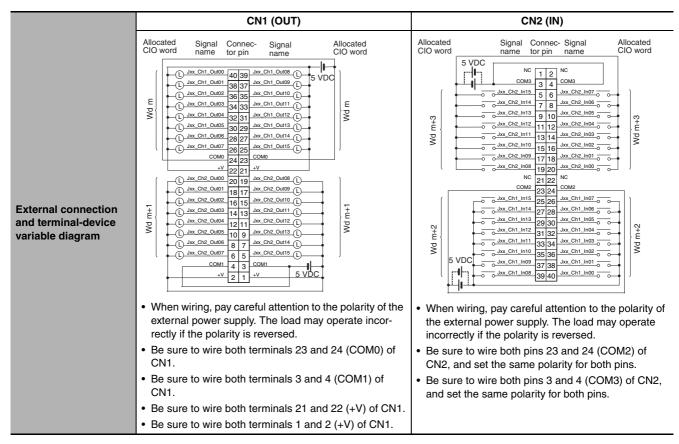


^{*} The ON response time will be 120 μs maximum and OFF response time will be 400 μs maximum even if the response times are set to 0 ms due to internal element delays.


A-2-3 **Precautions on Contact Output Units**

Service Life Expectancy

The service life expectancy of the relays (NY-24W-K-IE) in the CJ1W-OC201/211 Contact Output Units depends on the type of load, the contact current, and the ambient temperature. Use the following diagrams to calculate the relay service life based on the operating conditions, and replace the relay before the end of its service life.

Contact Current vs. Service Life Characteristic

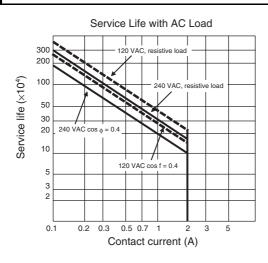

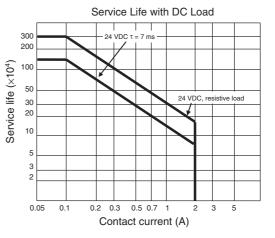

Switching frequency: 1,800 operations/hour max.



Precautions for Correct Use

The above charts show the life characteristics for the individual relays. Do not exceed the specifications of the Relay Output Units. If a switching capacity exceeding the specifications is used, the reliability and life expectancy of other parts will be reduced and the Unit may malfunction.

Inductive Load

The life of the Relay varies with the load inductance. If any inductive load is connected to the Contact Output Unit, use an arc killer with the Contact Output Unit. (See next page.)

Be sure to connect a diode in parallel with every DC inductive load that is connected to the Contact Output Unit.

Contact Protection Circuit


Arc killers are used with the Contact Output Unit in order to prolong the life of each Relay mounted to the Contact Output Unit, prevent noise, and reduce the generation of carbide and nitrate deposits. However, if arc killers are used incorrectly, they can reduce relay life. Using an arc killer can also cause a delay in the resetting time (shut-off time). Arc killer circuit examples are listed in the following table.

	Circuit	Cur	rent	Characteristic	Required element
	Circuit	AC	DC	Characteristic	nequired element
CR method	Power c c R C R	Yes	Yes	If the load is a relay or solenoid, there is a delay in the resetting time. If the supply voltage is 24 or 48 V, insert the arc killer in parallel with the load. If the supply voltage is 100 to 200 V, insert the arc killer between the contacts.	The capacitance of the capacitor should be approx. 1 to 0.5 μ F per contact current of 1 A and resistance of the resistor should be approx. 0.5 to 1 Ω per contact voltage of 1 V. These values, however, vary with the load and the characteristics of the relay. Decide these values from experiments, and take into consideration that the capacitance suppresses spark discharge when the contacts are separated and the resistance limits the current that flows into the load when the circuit is closed again. The dielectric strength of the capacitor must be 200 to 300 V. If the circuit is an AC circuit, use a capacitor with no polarity.
Diode method	Power supply	No	Yes	The diode connected in parallel with the load changes energy accumulated by the coil into a current, which then flows into the coil so that the current will be converted into Joule heat by the resistance of the inductive load. This delay in the resetting time caused by this method is longer than that caused by the CR method.	The reversed dielectric strength value of the diode must be at least 10 times as large as the circuit voltage value. The forward current of the diode must be the same as or larger than the load current. The reversed dielectric strength value of the diode may be two to three times larger than the supply voltage if the arc killer is applied to electronic circuits with low circuit voltages.
Varistor method	Power supply peol avitonpul	Yes	Yes	The varistor method prevents the imposition of high voltage between the contacts by using the constant voltage characteristic of the varistor. There is delay in the resetting time. If the supply voltage is 24 or 48 V, insert the varistor in parallel with the load. If the supply voltage is 100 to 200 V, insert the varistor between the contacts.	



Precautions for Correct Use

Do not connect a capacitor as an arc killer in parallel with an inductive load as shown in the diagram on the right. This arc killer is very effective for preventing spark discharge at the moment when the circuit is opened. However, at the moment the contacts are closed, the contacts may be welded due to the current charged in the capacitor.

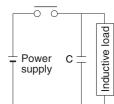

DC inductive loads can be more difficult to switch than resistive loads. If appropriate arc killers are used, however, DC inductive loads will be as easy to switch as resistive loads.

A-2-4 Connecting Connector-Terminal Block Conversion Units and I/O Relay Terminals


Patterns for Combining Connector-Terminal Block Conversion Units and I/O Relay Terminals

The following patterns can be used to connect Basic I/O Units with Connectors to OMRON Connector-Terminal Block Conversion Units and I/O Relay Terminals using OMRON Connecting Cables.

Connection Patterns for Connector-Terminal Block Conversion Units

Pattern	Configuration	Number of connectors	Branching
A	Connecting Cable Connector-Terminal Block Conversion Unit 40 or 60 terminals	1	None
В	Connecting Cable with two branches Connector-Terminal Block Conversion Unit 20 terminals 20 terminals		2 branches
С	Connecting Cable Connector-Terminal Block Conversion Unit 20 terminals Connector-Terminal Block Conversion Unit	2	None
D	Connecting Cable Connector-Terminal Block Conversion Unit 40 or 60 terminals Connector-Terminal Block Conversion Unit		
F	Connecting Cable with two branches Connector-Terminal Block Conversion Unit 20 terminals 20 terminals 20 terminals		2 branches

• Connection Patterns for I/O Relay Terminals

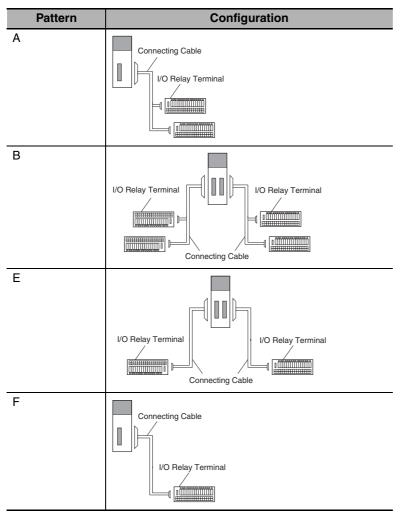

Combinations of Connections

Combinations of OMRON Connecting Cables with Connector-Terminal Block Conversion Units and I/O Relay Terminals are shown below.

Connections to Connector-Terminal Block Conversion Units

Unit	I/O capac- ity	Number of con- nectors	Polarity	Connec- tion pat- tern	Number of branches	Connecting Cable	Connector-Terminal Block Conversion Unit	Common terminal	Connec- tion dia- gram	
CJ1W-	32 inputs	1 Fujitsu	NPN/PNP	Α	None	XW2Z-□□□B	XW2D-40G6	None	A-65	
ID231		connector		Α	None	XW2Z-□□□B	XW2D-40G6-RF*2	None		
				Α	None	XW2Z-□□□B	XW2B-40G5	None		
				Α	None	XW2Z-□□□B	XW2B-40G4	None		
				Α	None	XW2Z-□□□BU	XW2D-40C6	None		
				В	2	XW2Z-□□□D	XW2D-20G6 (2 Units)	None		
				В	2	XW2Z-□□□D	XW2B-20G5 (2 Units)	None		
				В	2	XW2Z-□□□D	XW2B-20G4 (2 Units)	None		
				В	2	XW2Z-□□□D	XW2C-20G6-IO16 (2 Units)	Yes	A-65	
				В	2	XW2Z-□□□D	XW2C-20G5-IN16 (2 Units)*1	Yes		
				В	2	XW2Z-□□□D	XW2E-20G5-IN16 (2 Units)*1	Yes		
				В	2	XW2Z-□□□D	XW2F-20G7-IN16 (2 Units)*1	Yes		
				В	2	XW2Z-□□□D	XW2N-20G8-IN16 (2 Units)*1	Yes		
CJ1W-	32 inputs	1 MIL con-	NPN/PNP	Α	None	XW2Z-□□□K	XW2D-40G6	None	A-66	
ID232		nector	nector		Α	None	XW2Z-□□□K	XW2D-40G6-RM*2	None	
				Α	None	XW2Z-□□□K	XW2B-40G5	None		
				Α	None	XW2Z-□□□K	XW2B-40G4	None		
				В	2	XW2Z-□□□N	XW2D-20G6 (2 Units)	None		
				В	2	XW2Z-□□□N	XW2B-20G5 (2 Units)	None		
				В	2	XW2Z-□□□N	XW2B-20G4 (2 Units)	None		
				В	2	XW2Z-□□□N	XW2C-20G6-IO16 (2 Units)	Yes	A-66	
				В	2	XW2Z-□□□N	XW2C-20G5-IN16 (2 Units)*1	Yes		
				В	2	XW2Z-□□□N	XW2E-20G5-IN16 (2 Units)*1	Yes		
				В	2	XW2Z-□□□N	XW2F-20G7-IN16 (2 Units)*1	Yes		
				В	2	XW2Z-□□□N	XW2N-20G8-IN16 (2 Units)*1	Yes		
CJ1W-	32 inputs	1 MIL con-	NPN/PNP	Α	None	XW2Z-□□□K	XW2D-40G6	None	A-67	
ID233		nector		Α	None	XW2Z-□□□K	XW2D-40G6-RM*2	None		
				Α	None	XW2Z-□□□K	XW2B-40G5	None		
				Α	None	XW2Z-□□□K	XW2B-40G4	None		
				В	2	XW2Z-□□□N	XW2D-20G6 (2 Units)	None		
				В	2	XW2Z-□□□N	XW2B-20G5 (2 Units)	None		
				В	2	XW2Z-□□□N	XW2B-20G4 (2 Units)	None		
				В	2	XW2Z-□□□N	XW2C-20G6-IO16 (2 Units)	Yes	A-67	
				В	2	XW2Z-□□□N	XW2C-20G5-IN16 (2 Units)*1	Yes		
				В	2	XW2Z-□□□N	XW2E-20G5-IN16 (2 Units)*1	Yes		
				В	2	XW2Z-□□□N	XW2F-20G7-IN16 (2 Units)*1	Yes		
				В	2	XW2Z-□□□N	XW2N-20G8-IN16 (2 Units)*1	Yes		

^{*1} The inputs are NPN. For PNP inputs, reverse the polarity of the external power supply connections to the power supply terminals on the Connector-Terminal Block Conversion Unit.

^{*2} Bleeder resistance (5.6 $k\Omega)$ is built in.

Unit	I/O capac- ity	Number of con-nectors	Polarity	Connection pattern	Number of branches	Connecting Cable	Connector-Terminal Block Conversion Unit	Common terminal	Connec- tion dia- gram
CJ1W-	64 inputs	2 Fujitsu	NPN/PNP	D	None	XW2Z-□□□B	XW2D-40G6	None	A-68
ID261		connectors	3	D	None	XW2Z-□□□B	XW2D-40G6-RF ^{*2}	None	
				D	None	XW2Z-□□□B	XW2B-40G5	None	
				D	None	XW2Z-□□□B	XW2B-40G4	None	
				D	None	XW2Z-□□□BU	XW2D-40C6	None	
				F	2	XW2Z-□□□D	XW2D-40G6 (2 Units)	None	
				F	2	XW2Z-□□□D	XW2B-20G5 (2 Units)	None	
				F	2	XW2Z-□□□D	XW2B-20G4 (2 Units)	None	
				F	2	XW2Z-□□□D	XW2C-20G6-IO16 (2 Units)	Yes	A-68
				F	2	XW2Z-□□□D	XW2C-20G5-IN16 (2 Units)*1	Yes	
				F	2	XW2Z-□□□D	XW2E-20G5-IN16 (2 Units)*1	Yes	
				F	2	XW2Z-□□□D	XW2F-20G7-IN16 (2 Units)*1	Yes	
				F	2	XW2Z-□□□D	XW2N-20G8-IN16 (2 Units)*1	Yes	
CJ1W-	64 inputs	2 MIL con-	NPN/PNP	D	None	XW2Z-□□□K	XW2D-40G6	None	A-69
ID262		nectors		D	None	XW2Z-□□□K	XW2D-40G6-RM*2	None	
				D	None	XW2Z-□□□K	XW2B-40G5	None	
				D	None	XW2Z-□□□K	XW2B-40G4	None	
				F	2	XW2Z-□□□N	XW2D-20G6 (2 Units)	None	
				F	2	XW2Z-□□□N	XW2B-20G5 (2 Units)	None	
				F	2	XW2Z-□□□N	XW2B-20G4 (2 Units)	None	
				F	2	XW2Z-□□□N	XW2C-20G6-IO16 (2 Units)	Yes	A-69
				F	2	XW2Z-□□□N	XW2C-20G5-IN16 (2 Units)*1	Yes	
				F	2	XW2Z-□□□N	XW2E-20G5-IN16 (2 Units)*1	Yes	
				F	2	XW2Z-□□□N	XW2F-20G7-IN16 (2 Units)*1	Yes	
				F	2	XW2Z-□□□N	XW2N-20G8-IN16 (2 Units)*1	Yes	
CJ1W-	32 outputs	1 Fujitsu	NPN	A	None	XW2Z-□□□B	XW2D-40G6	None	A-70
OD231	OZ Guipuis	connector		A	None	XW2Z-□□□B	XW2B-40G5	None	
				A	None	XW2Z-□□□B	XW2B-40G4	None	
				A	None	XW2Z-□□□BU	XW2D-40C6	None	A-70
				В	2	XW2Z-□□□L	XW2D-20G6 (2 Units)	None	
				В	2	XW2Z-□□□L	XW2B-20G5 (2 Units)	None	
				В	2	XW2Z-□□□L	XW2B-20G4 (2 Units)	None	
				В	2	XW2Z-□□□L	XW2C-20G6-IO16 (2 Units)	Yes	A-70
				В	2	XW2Z-□□□L	XW2F-20G7-OUT16 (2 Units)	Yes	
CJ1W-	32 outputs	1 MIL con-	PNP	Α	None	XW2Z-□□□K	XW2D-40G6	None	A-71
OD232		nector		Α	None	XW2Z-□□□K	XW2B-40G5	None	
				A	None	XW2Z-□□□K	XW2B-40G4	None	
				В	2	XW2Z-□□□N	XW2D-20G6 (2 Units)	None	
				В	2	XW2Z-□□□N	XW2B-20G5 (2 Units)	None	
				В	2	XW2Z-□□□N	XW2B-20G4 (2 Units)	None	
				В	2	XW2Z-□□□N	XW2C-20G6-IO16 (2 Units)	Yes	A-71
				В	2	XW2Z-□□□N	XW2F-20G7-OUT16 (2 Units)	Yes	

^{*1} The inputs are NPN. For PNP inputs, reverse the polarity of the external power supply connections to the power supply terminals on the Connector-Terminal Block Conversion Unit.

^{*2} Bleeder resistance (5.6 k Ω) is built in.

Unit	I/O capac- ity	Number of con- nectors	Polarity	Connec- tion pat- tern	Number of branches	Connecting Cable	Connector-Terminal Block Conversion Unit	Common terminal	Connection diagram
CJ1W-	32 outputs	1 MIL con-	NPN	Α	None	XW2Z-□□□K	XW2D-40G6	None	A-72
OD233		nector		А	None	XW2Z-□□□K	XW2B-40G5	None	
				Α	None	XW2Z-□□□K	XW2B-40G4	None	
				В	2	XW2Z-□□□N	XW2D-20G6 (2 Units)	None	
				В	2	XW2Z-□□□N	XW2B-20G5 (2 Units)	None	
				В	2	XW2Z-□□□N	XW2B-20G4 (2 Units)	None	
				В	2	XW2Z-□□□N	XW2C-20G6-IO16 (2 Units)	Yes	A-72
				В	2	XW2Z-□□□N	XW2F-20G7-OUT16 (2 Units)	Yes	
CJ1W-	32 outputs	1 MIL con-	NPN	Α	None	XW2Z-□□□K	XW2D-40G6	None	A-73
OD234		nector		Α	None	XW2Z-□□□K	XW2B-40G5	None	
				Α	None	XW2Z-□□□K	XW2B-40G4	None	
				В	2	XW2Z-□□□N	XW2D-20G6 (2 Units)	None	
				В	2	XW2Z-□□□N	XW2B-20G5 (2 Units)	None	
				В	2	XW2Z-□□□N	XW2B-20G4 (2 Units)	None	
				В	2	XW2Z-□□□N	XW2C-20G6-IO16 (2 Units)	Yes	A-73
				В	2	XW2Z-□□□N	XW2F-20G7-OUT16 (2 Units)	Yes	
CJ1W-	64 outputs	2 Fujitsu	NPN	D	None	XW2Z-□□□B	XW2D-40G6	None	A-74
OD261		connectors	nectors	D	None	XW2Z-□□□B	XW2B-40G5	None	
				D	None	XW2Z-□□□B	XW2B-40G4	None	
				D	None	XW2Z-□□□BU	XW2D-40C6	None	A-74
				F	2	XW2Z-□□□L	XW2D-20G6 (2 Units)	None	
				F	2	XW2Z-□□□L	XW2B-20G5 (2 Units)	None	
				F	2	XW2Z-□□□L	XW2B-20G4 (2 Units)	None	
				F	2	XW2Z-□□□L	XW2C-20G6-IO16 (2 Units)	Yes	A-74
				F	2	XW2Z-□□□L	XW2F-20G7-OUT16 (2 Units)	Yes	
CJ1W-	64 outputs	2 MIL con-	PNP	D	None	XW2Z-□□□K	XW2D-40G6	None	A-76
OD262		nectors		D	None	XW2Z-□□□K	XW2B-40G5	None	
				D	None	XW2Z-□□□K	XW2B-40G4	None	
				F	2	XW2Z-□□□N	XW2D-20G6 (2 Units)	None	
				F	2	XW2Z-□□□N	XW2B-20G5 (2 Units)	None	
				F	2	XW2Z-□□□N	XW2B-20G4 (2 Units)	None	
				F	2	XW2Z-□□□N	XW2C-20G6-IO16 (2 Units)	Yes	A-76
				F	2	XW2Z-□□□N	XW2F-20G7-OUT16 (2 Units)	Yes	
CJ1W-	64 outputs	2 MIL con-	NPN	D	None	XW2Z-□□□K	XW2D-40G6	None	A-77
OD263		nectors		D	None	XW2Z-□□□K	XW2B-40G5	None	
				D	None	XW2Z-□□□K	XW2B-40G4	None	
				F	2	XW2Z-□□□N	XW2D-20G6 (2 Units)	None	
				F	2	XW2Z-□□□N	XW2B-20G5 (2 Units)	None	
				F	2	XW2Z-□□□N	XW2B-20G4 (2 Units)	None	
				F	2	XW2Z-□□□N	XW2C-20G6-IO16 (2 Units)	Yes	A-77
				F	2	XW2Z-□□□N	XW2F-20G7-OUT16 (2 Units)	Yes	

Unit	I/O capac- ity	Number of con- nectors	Polarity	Connection pattern	Number of branches	Connecting Cable	Connector-Terminal Block Conversion Unit	Common terminal	Connection diagram
CJ1W-	16 inputs	1 Fujitsu	NPN/PNP	С	None	XW2Z-□□□A	XW2D-20G6	None	A-78
MD231		connector		С	None	XW2Z-□□□A	XW2B-20G5	None	
				С	None	XW2Z-□□□A	XW2B-20G4	None	
				С	None	XW2Z-□□□A	XW2C-20G6-IO16	Yes	A-79
				С	None	XW2Z-□□□A	XW2C-20G5-IN16*1	Yes	
				С	None	XW2Z-□□□A	XW2E-20G5-IN16*1	Yes	
				С	None	XW2Z-□□□A	XW2F-20G7-IN16*1	Yes	
				С	None	XW2Z-□□□A	XW2N-20G8-IN16*1	Yes	
	16 outputs	1 Fujitsu	NPN	С	None	XW2Z-□□□A	XW2D-20G6	None	A-78
		connector		С	None	XW2Z-□□□A	XW2B-20G5		
				С	None	XW2Z-□□□A	XW2B-20G4	None	
				С	None	XW2Z-□□□A	XW2C-20G6-IO16	Yes	A-79
				С	None	XW2Z-□□□A	XW2F-20G7-OUT16	Yes	
CJ1W-	16 inputs	1 MIL con-	NPN/PNP	С	None	XW2Z-□□□X	XW2D-20G6	None	A-80
MD232		nector		С	None	XW2Z-□□□X	XW2B-20G5	terminal None None None Yes Yes Yes Yes None None None None Yes Yes	
				С	None	XW2Z-□□□X	XW2B-20G4	None	
	16 outputs	1 MIL con-	PNP	С	None	XW2Z-□□□X	XW2D-20G6		A-80
		nector		С	None	XW2Z-□□□X	XW2B-20G5	None	
				С	None	XW2Z-□□□X	XW2B-20G4	None	
CJ1W-	16 inputs	1 MIL con-	NPN/PNP	С	None	XW2Z-□□□X	XW2D-20G6	None	A-80
MD233		nector		С	None	XW2Z-□□□X	XW2B-20G5	None	
				С	None	XW2Z-□□□X	XW2B-20G4	None	
	16 outputs	1 MIL con-	NPN	С	None	XW2Z-□□□X	XW2D-20G6	None	A-80
		nector		С	None	XW2Z-□□□X	XW2B-20G5	None	
				С	None	XW2Z-□□□X	XW2B-20G4	None	
CJ1W-	32 outputs	1 Fujitsu	NPN/PNP	D	None	XW2Z-□□□B	XW2D-40G6	None	A-81
MD261		connector		D	None	XW2Z-□□□B	XW2D-40G6-RF*2	None	
				D	None	XW2Z-□□□B	XW2B-40G5	None	
				D	None	XW2Z-□□□B	XW2B-40G4	None	
				D	None	XW2Z-□□□BU	XW2D-40C6	None	
				F	2	XW2Z-□□□D	XW2D-20G6 (2 Units)	None	
				F	2	XW2Z-□□□D	XW2B-20G5 (2 Units)	None	
				F	2	XW2Z-□□□D	XW2B-20G4 (2 Units)	None	
				F	2	XW2Z-□□□D	XW2C-20G6-IO16 (2 Units)	Yes	A-82
				F	2	XW2Z-□□□D	XW2C-20G5-IN16 (2 Units)*1	Yes	
				F	2	XW2Z-□□□D	XW2E-20G5-IN16 (2 Units)*1	Yes	
				F	2	XW2Z-□□□D	XW2F-20G7-IN16 (2 Units)*1	Yes	
				F	2	XW2Z-□□□D	XW2N-20G8-IN16 (2 Units)*1	Yes	
	32 outputs	1 Fujitsu	NPN	D	None	XW2Z-□□□B	XW2D-40G6		A-81
	30.000	connector		D	None	XW2Z-□□□B	XW2B-40G5	1	
				D	None	XW2Z-□□□B	XW2B-40G4		
				D	None	XW2Z-□□□BU	XW2D-40C6		
				F	2	XW2Z-□□□L	XW2D-20G6 (2 Units)		
				F	2	XW2Z-□□□L	XW2B-20G5 (2 Units)		
				F	2	XW2Z-□□□L	XW2B-20G4 (2 Units)	None	
				F	2	XW2Z-□□□L	XW2C-20G6-IO16 (2 Units)	Yes	A-82
				F	2	XW2Z-□□□L	XW2F-20G7-OUT16 (2 Units)	Yes	

^{*1} The inputs are NPN. For PNP inputs, reverse the polarity of the external power supply connections to the power supply terminals on the Connector-Terminal Block Conversion Unit.

^{*2} Bleeder resistance (5.6 k Ω) is built in.

Unit	I/O capac- ity	Number of con- nectors	Polarity	Connec- tion pat- tern	Number of branches	Connecting Cable	Connector-Terminal Block Conversion Unit	Common terminal	Connection diagram
CJ1W-	32 inputs	1 MIL con-	NPN/PNP	D	None	XW2Z-□□□K	XW2D-40G6	None	A-83
MD263	3	nector		D	None	XW2Z-□□□K	XW2D-40G6-RM*2	None	
				D	None	XW2Z-□□□K	XW2B-40G5	None	
				D	None	XW2Z-□□□K	XW2B-40G4	None	
				F	2	XW2Z-□□□N	XW2D-20G6 (2 Units)	None	
				F	2	XW2Z-□□□N	XW2B-20G5 (2 Units)	None	
				F	2	XW2Z-□□□N	XW2B-20G4 (2 Units)	None	
				F	2	XW2Z-□□□N	XW2C-20G6-IO16 (2 Units)	None	A-84
				F	2	XW2Z-□□□N	XW2C-20G5-IN16 (2 Units)*1	Yes	
				F	2	XW2Z-□□□N	XW2E-20G5-IN16 (2 Units)*1	Yes	
				F	2	XW2Z-□□□N	XW2F-20G7-IN16 (2 Units)*1	Yes	
				F	2	XW2Z-□□□N	XW2N-20G8-IN16 (2 Units)*1	Yes	
	32 outputs	1 MIL con- nector	NPN	D	None	XW2Z-□□□K	XW2D-40G6	None	A-83
				D	None	XW2Z-□□□K	XW2B-40G5	None	
				D	None	XW2Z-□□□K	XW2B-40G4	None	
				F	2	XW2Z-□□□L	XW2D-20G6 (2 Units)	None	
				F	2	XW2Z-□□□L	XW2B-20G5 (2 Units)	None	
				F	2	XW2Z-□□□L	XW2B-20G4 (2 Units)	None	
				F	2	XW2Z-□□□L	XW2C-20G6-IO16 (2 Units)	Yes	A-84
				F	2	XW2Z-□□□L	XW2F-20G7-OUT16 (2 Units)	Yes	
CJ1W-	· ·	ts 1 MIL con- nector		D	None	XW2Z-□□□K	XW2D-40G6	None	A-85
MD563				D	None	XW2Z-□□□K	XW2D-40G6-RM*2	None	
				D	None	XW2Z-□□□K	XW2B-40G5	None	
				D	None	XW2Z-□□□K	XW2B-40G4	None	
				F	2	XW2Z-□□□N	XW2D-20G6 (2 Units)	None	
				F	2	XW2Z-□□□N	XW2B-20G5 (2 Units)	None	
				F	2	XW2Z-□□□N	XW2B-20G4 (2 Units)	None	
	32 outputs	1 MIL con- nector	NPN	D	None	XW2Z-□□□K	XW2D-40G6	None	A-85
				D	None	XW2Z-□□□K	XW2B-40G5	None	
				D	None	XW2Z-□□□K	XW2B-40G4	None	
				F	2	XW2Z-□□□N	XW2D-20G6 (2 Units)	None	
				F	2	XW2Z-□□□N	XW2B-20G5 (2 Units)	None	
				F	2	XW2Z-□□□N	XW2B-20G4 (2 Units)	None	

^{*1} The inputs are NPN. For PNP inputs, reverse the polarity of the external power supply connections to the power supply terminals on the Connector-Terminal Block Conversion Unit.

^{*2} Bleeder resistance (5.6 k Ω) is built in.

● Connections to I/O Relay Terminals

Unit	I/O capacity	Number of connectors	Polarity	Connection pattern	Number of branches	Connecting Cable	I/O Relay Terminal	Connection diagram
CJ1W-ID231	32 inputs	1 Fujitsu con-	NPN	Α	2	G79-I□C-□	G7TC-ID16	A-86
		nector		Α	2	G79-I□C-□	G7TC-IA16	
CJ1W-ID232	32 inputs	1 MIL con-	NPN	Α	2	G79-O□-□-D1	G7TC-ID16	
		nector		Α	2	G79-O□-□-D1	G7TC-IA16	
CJ1W-ID233	32 inputs	1 MIL con-	NPN	Α	2	G79-O□-□-D1	G7TC-ID16	
		nector		Α	2	G79-O□-□-D1	G7TC-IA16	
CJ1W-ID261	64 inputs	2 Fujitsu con-	NPN	В	2	G79-I□C-□	G7TC-ID16	
		nectors		В	2	G79-I□C-□	G7TC-IA16	
CJ1W-ID262	64 inputs	2 MIL con-	NPN	В	2	G79-O□-□-D1	G7TC-ID16	
		nectors		В	2	G79-O□-□-D1	G7TC-IA16	
CJ1W-OD231	32 outputs	1 Fujitsu con-	NPN	Α	2	G79-O□C-□	G7TC-OC16	A-90
		nector		Α	2	G79-O□C-□	G7TC-OC08	
				Α	2	G79-O□C-□	G70D-SOC16	A-88
				Α	2	G79-O□C-□	G70D-FOM16	
				Α	2	G79-O□C-□	G70D-VSOC16	A-87
				Α	2	G79-O□C-□	G70D-VFOM16	
				Α	2	G79-O□C-□	G70A-ZOC16-3 and Relay	A-92
				Α	2	G79-O□C-□	G70R-SOC08	A-89
				Α	2	G79-O□C-□	G70D-SOC08	A-88
CJ1W-OD232	32 outputs	1 MIL con-	PNP	Α	2	G79-I□-□-D1	G7TC-OC16-1	A-91
		nector		Α	2	G79-O□-□-D1	G70D-SOC16-1	
				Α	2	G79-O□-□-D1	G70D-FOM16-1	
				Α	2	G79-O□-□-D1	G70A-ZOC16-4 and Relay	
CJ1W-OD233	32 outputs	1 MIL con-	NPN	Α	2	G79-O□-□-D1	G7TC-OC16	A-90
		nector		Α	2	G79-O□-□-D1	G7TC-OC08	†
				Α	2	G79-O□-□-D1	G70D-SOC16	A-88
				Α	2	G79-O□-□-D1	G70D-FOM16	
				Α	2	G79-O□-□-D1	G70D-VSOC16	A-87
				Α	2	G79-O□-□-D1	G70D-VFOM16	
				Α	2	G79-O□-□-D1	G70A-ZOC16-3 and Relay	A-92
				A	2	G79-O□-□-D1	G70R-SOC08	A-89
				Α	2	G79-O□-□-D1	G70D-SOC08	A-88
CJ1W-OD234	32 outputs	1 MIL con-	NPN	A	2	G79-O□-□-D1	G7TC-OC16	A-90
		nector		A	2	G79-O□-□-D1	G7TC-OC08	1
				A	2	G79-O□-□-D1	G70D-SOC16	A-88
				Α	2	G79-O□-□-D1	G70D-FOM16	
				A	2	G79-O□-□-D1	G70D-VSOC16	A-87
				A	2	G79-O□-□-D1	G70D-VFOM16	
				A	2	G79-O□-□-D1	G70A-ZOC16-3 and Relay	A-92
				A	2	G79-O□-□-D1	G70R-SOC08	A-92 A-89
				A	2	G79-O□-□-D1	G70D-SOC08	A-88


Unit	I/O capacity	Number of connectors	Polarity	Connection pattern	Number of branches	Connecting Cable	I/O Relay Terminal	Connection diagram
CJ1W-OD261	64 outputs	2 Fujitsu con-	NPN	В	2	G79-O□C-□	G7TC-OC16	A-90
		nectors		В	2	G79-O□C-□	G7TC-OC08	
				В	2	G79-O□C-□	G70D-SOC16	A-88
				В	2	G79-O□C-□	G70D-FOM16	
				В	2	G79-O□C-□	G70D-VSOC16	A-87
				В	2	G79-O□C-□	G70D-VFOM16	
				В	2	G79-O□C-□	G70A-ZOC16-3 and Relay	A-92
				В	2	G79-O□C-□	G70R-SOC08	A-89
				В	2	G79-O□C-□	G70D-SOC08	A-88
CJ1W-OD262	64 outputs	2 MIL con-	PNP	В	2	G79-I□-□-D1	G7TC-OC16-1	A-91
		nectors		В	2	G79-O□-□-D1	G70D-SOC16-1	
				В	2	G79-O□-□-D1	G70D-FOM16-1	
				В	2	G79-O□-□-D1	G70A-ZOC16-4 and Relay	
CJ1W-OD263	64 outputs	2 MIL con-	NPN	В	2	G79-O□-□-D1	G7TC-OC16	A-90
		nectors		В	2	G79-O□-□-D1	G7TC-OC08	
				В	2	G79-O□-□-D1	G70D-SOC16	A-88
				В	2	G79-O□-□-D1	G70D-FOM16	
				В	2	G79-O□-□-D1	G70D-VSOC16	A-87
				В	2	G79-O□-□-D1	G70D-VFOM16	
				В	2	G79-O□-□-D1	G70A-ZOC16-3 and Relay	A-92
				В	2	G79-O□-□-D1	G70R-SOC08	A-89
				В	2	G79-O□-□-D1	G70D-SOC08	A-88
CJ1W-MD231	16 inputs	1 Fujitsu con-	NPN	F	None	G79-□C	G7TC-ID16	A-86
		nector		F	None	G79-□C	G7TC-IA16	
	16 outputs	1 Fujitsu con-	NPN	F	None	G79-□C	G7TC-OC16	A-90
		nector		F	None	G79-□C	G7TC-OC08	
				F	None	G79-□C	G70D-SOC16	A-88
				F	None	G79-□C	G70D-FOM16	
				F	None	G79-□C	G70D-VSOC16	A-87
				F	None	G79-□C	G70D-VFOM16	
				F	None	G79-□C	G70A-ZOC16-3 and Relay	A-92
				F	None	G79-□C	G70R-SOC08	A-89
				F	None	G79-□C	G70D-SOC08	A-88
CJ1W-MD232	16 outputs	1 MIL con-	PNP	F	None	G79-O□C	G7TC-OC16-1	A-91
	·	nector		F	None	G79-I□C	G70D-SOC16-1	
				F	None	G79-I□C	G70D-FOM16-1	
				F	None	G79-I□C	G70A-ZOC16-4 and Relay	
CJ1W-MD233	16 inputs	1 MIL con-	NPN	E	None	G79-O□C	G7TC-ID16	A-86
00111 1112200	10 mpato	nector		E	None	G79-O□C	G7TC-IA16	- 7.00
	16 outputs	1 MIL con-	NPN	E	None	G79-O□C	G7TC-OC16	A-90
		nector		E	None	G79-O□C	G7TC-OC08	1
				E	None	G79-O□C	G70D-SOC16	A-88
				E	None	G79-O□C	G70D-FOM16	
				E	None	G79-O□C	G70D-VSOC16	A-87
				E	None	G79-O□C	G70D-VFOM16	A-07
				E	None	G79-O□C	G70A-ZOC16-3 and Relay	A-92
				E	None	G79-O□C G79-O□C	G70A-20C16-3 and Relay	A-92 A-89
				E	None	G79-O□C	G70R-SOC08	A-89 A-88
	<u> </u>	<u> </u>		1-	140116	4700⊔0	4700 00000	

Unit	I/O capacity	Number of connectors	Polarity	Connection pattern	Number of branches	Connecting Cable	I/O Relay Terminal	Connection diagram
CJ1W-MD261	32 inputs	1 Fujitsu con- nector	NPN	В	2	G79-I□C-□	G7TC-ID16	A-86
				В	2	G79-I□C-□	G7TC-IA16	
	32 outputs	1 Fujitsu con-	NPN	В	2	G79-O□C-□	G7TC-OC16	A-90
		nector		В	2	G790□C-□	G7TC-OC08	
				В	2	G79-O□C-□	G70D-SOC16	A-88
				В	2	G79-O□C-□	G70D-FOM16	
				В	2	G79-O□C-□	G70D-VSOC16	A-87
				В	2	G79-O□C-□	G70D-VFOM16	
				В	2	G790□C-□	G70A-ZOC16-3 and Relay	A-92
				В	2	G79-O□C-□	G70R-SOC08	A-89
				В	2	G79-O□C-□	G70D-SOC08	A-88
CJ1W-MD263	32 inputs	1 MIL con- nector	NPN	В	2	G79-O□-□-D1	G7TC-ID16	A-86
				В	2	G79-O□-□-D1	G7TC-IA16	
	32 outputs	1 MIL connector	NPN	В	2	G79-O□-□-D1	G7TC-OC16	A-90
				В	2	G79-O□-□-D1	G7TC-OC08	
				В	2	G79-O□-□-D1	G70D-SOC16	A-88
				В	2	G79-O□-□-D1	G70D-FOM16	
				В	2	G79-O□-□-D1	G70D-VSOC16	A-87
				В	2	G79-O□-□-D1	G70D-VFOM16	
				В	2	G79-O□-□-D1	G70A-ZOC16-3 and Relay	A-92
				В	2	G79-O□-□-D1	G70R-SOC08	A-89
				В	2	G79-O□-□-D1	G70D-SOC08	A-88

Connector-Terminal Block Conversion Unit Connection Diagrams


The applicable terminals on the Connector-Terminal Block Conversion Unit and external connection diagrams are provided below for Basic I/O Unit connections to Connector-Terminal Block Conversion Units.

Inputs

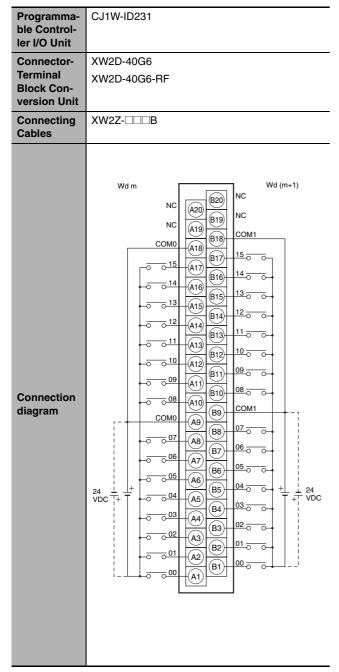

Note 1 The polarity for input power supply connections indicated with dotted lines (----) can be connected in either direction provided that the same polarity is used for the commons for rows A and B.


2 Both COM0 and COM1 have two pins each. They are internally connected inside the Controller, but they must all be wired.

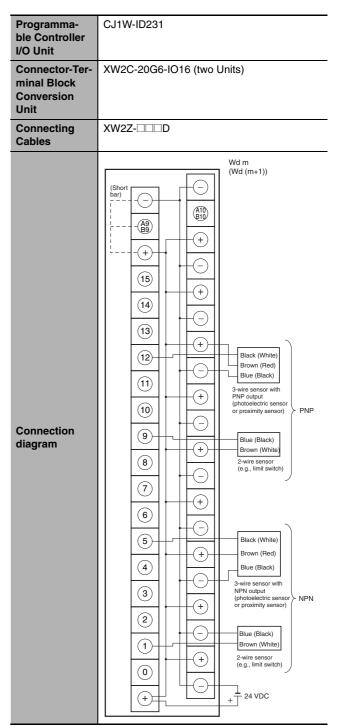

Note 1 Connect the A9/B9 terminal and the $_{\oplus}$ terminal for NPN.


Connect the A9/B9 terminal and the $_{\mbox{\scriptsize \ominus}}$ terminal for PNP.

(Use the enclosed short bar.)

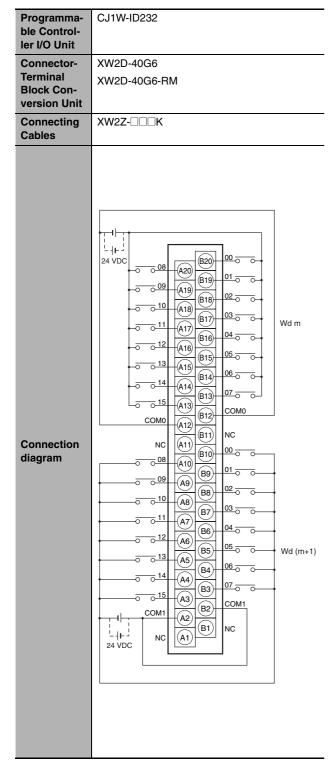

Note 1 The polarity for input power supply connections indicated with dotted lines (----) can be connected in either direction provided that the same polarity is used for the commons.


2 Both COM0 and COM1 have two pins each. They are internally connected inside the Controller, but they must all be wired.

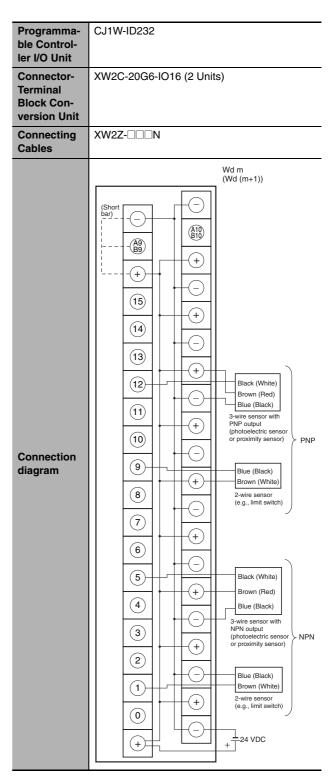

Note 1 Connect the A9/B9 terminal and the ⊕ terminal for


Connect the A9/B9 terminal and the \ominus terminal for PNP.

(Use the enclosed short bar.)

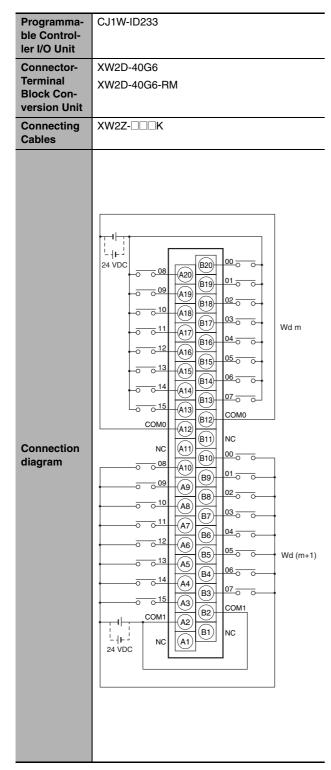

Note 1 The polarity for input power supply connections indicated with dotted lines (----) can be connected in either direction provided that the same polarity is used for the commons.


2 Both COM0 and COM1 have two pins each. They are internally connected inside the Controller, but they must all be wired.

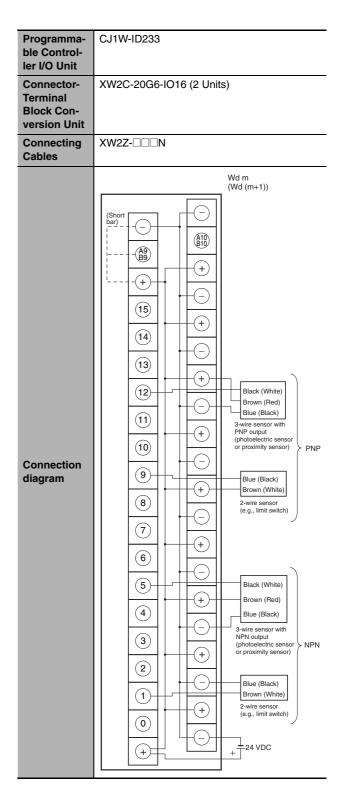

Note 1 Connect the A9/B9 terminal and the ⊕ terminal for NPN


Connect the A9/B9 terminal and the \ominus terminal for PNP.

(Use the enclosed short bar.)

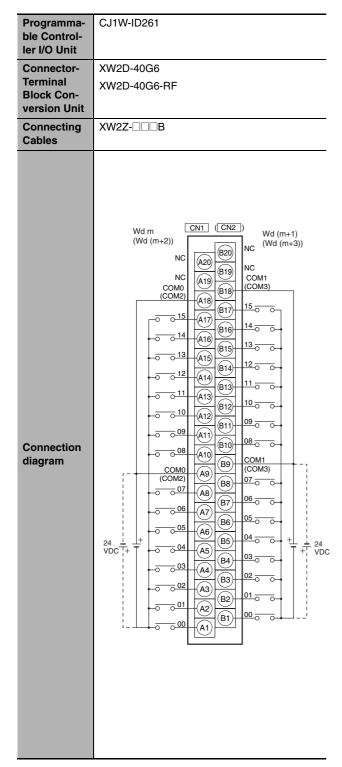

Note 1 The polarity for input power supply connections indicated with dotted lines (-----) can be connected in either direction provided that the same polarity is used for the commons for rows A and B.


2 COM0, COM1, COM2, and COM3 have two pins each. They are internally connected inside the Controller, but they must all be wired.

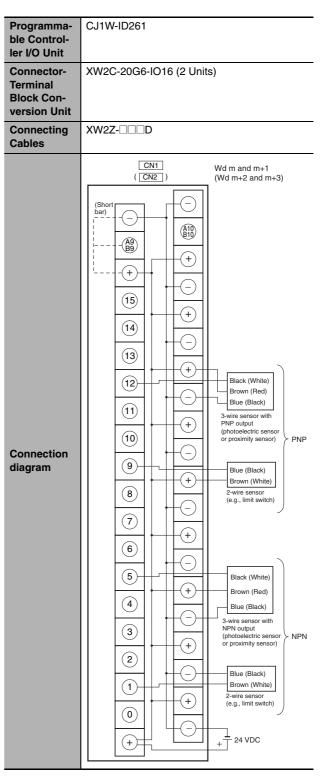

Note 1 Connect the A9/B9 terminal and the ⊕ terminal for NPN


Connect the A9/B9 terminal and the \ominus terminal for PNP.

(Use the enclosed short bar.)

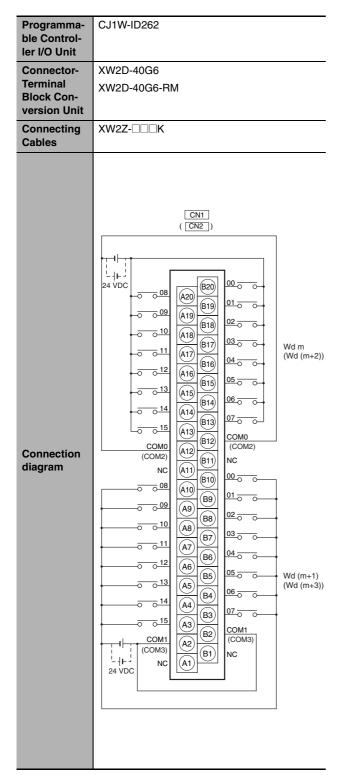

Note 1 The polarity for input power supply connections indicated with dotted lines (----) can be connected in either direction provided that the same polarity is used for the commons.

2 COM0, COM1, COM2, and COM3 have two pins each. They are internally connected inside the Controller, but they must all be wired.

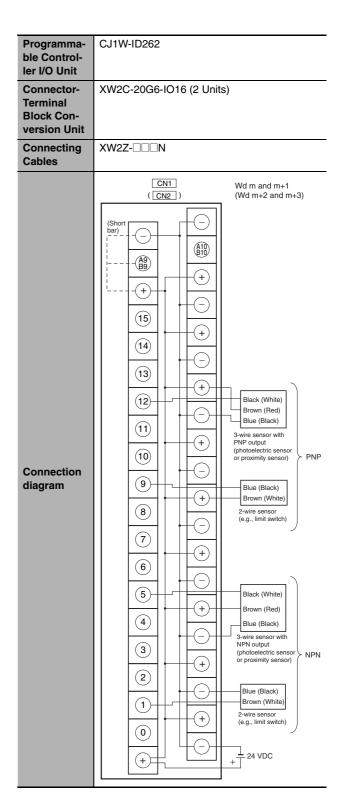


Note 1 Connect the A9/B9 terminal and the ⊕ terminal for NPN


Connect the A9/B9 terminal and the \ominus terminal for PNP.

(Use the enclosed short bar.)

Outputs

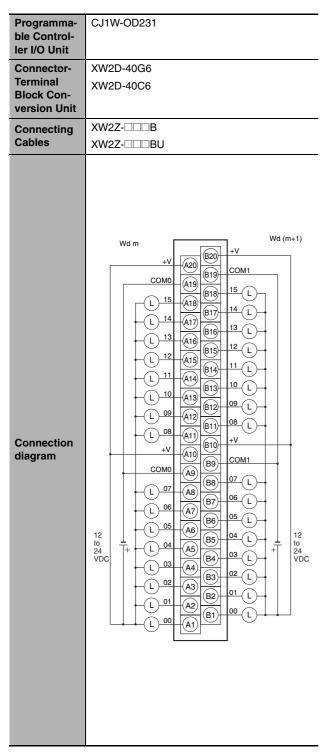


Note The +V terminals and COM terminals are internally connected inside the Controller, but they must all be wired.

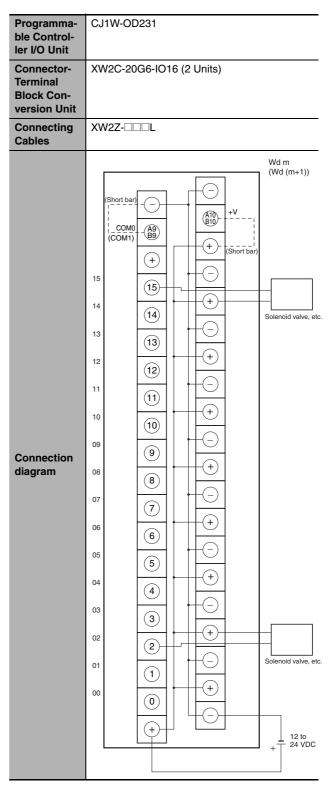

Note 1 Connect the A9/B9 terminal and the \ominus terminal. Connect the A10/B10 terminal and the \oplus terminal. (Use the enclosed short bar.)

Programma- ble Control- ler I/O Unit	CJ1W-OD232
Connector- Terminal Block Con- version Unit	XW2D-40G6
Connecting Cables	XW2Z-□□□K
Connection diagram	


Note The COM (+V) terminals and 0V terminals are internally connected inside the Controller, but they must all be wired.

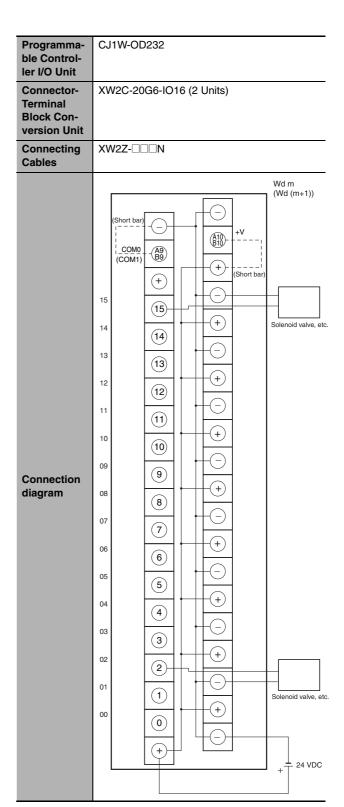


Note 1 Connect the A9/B9 terminal and the ⊖ terminal.

Connect the A10/B10 terminal and the ⊕ terminal.


(Use the enclosed short bar.)

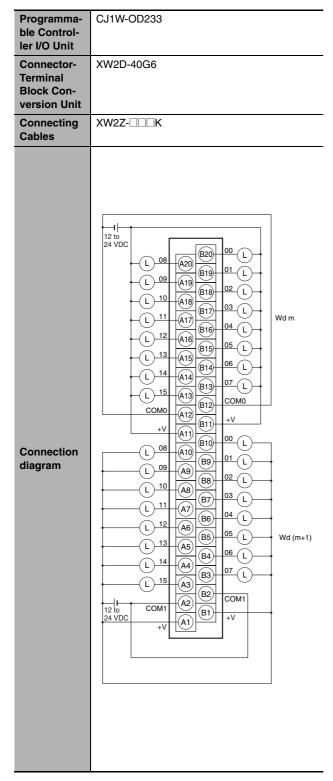


Note The +V terminals and COM terminals are internally connected inside the Controller, but they must all be wired.

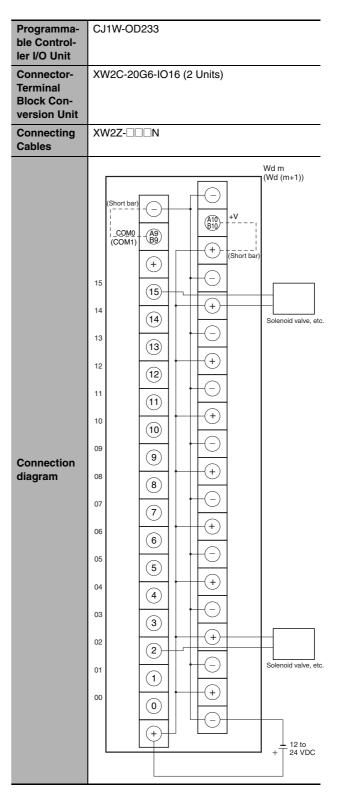

Note 1 Connect the A9/B9 terminal and the \ominus terminal. Connect the A10/B10 terminal and the \oplus terminal. (Use the enclosed short bar.)

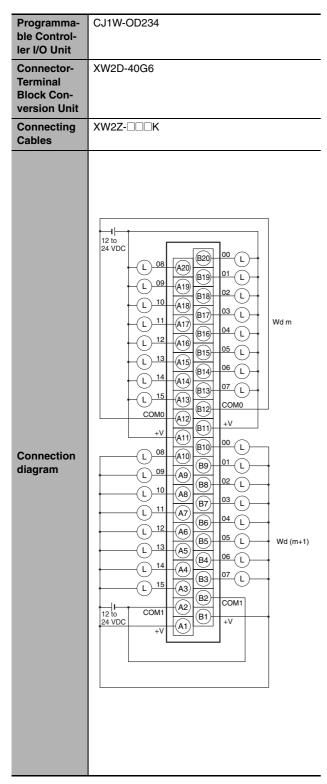


Note The +V terminals and COM terminals are internally connected inside the Controller, but they must all be wired.

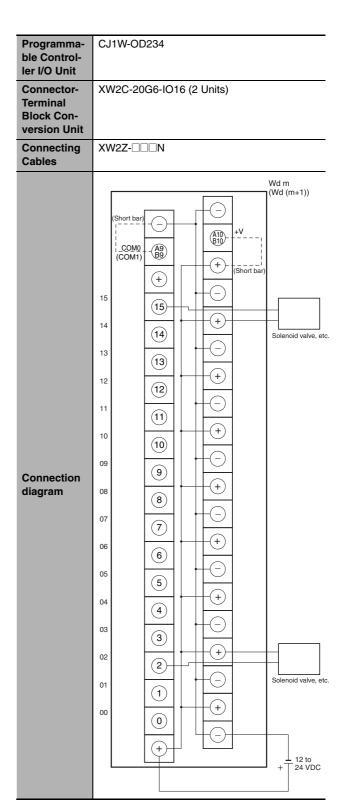

Note 1 Connect the A9/B9 terminal and the \ominus terminal. Connect the A10/B10 terminal and the \oplus terminal. (Use the enclosed short bar.)

Programma- ble Control-	CJ1W-OD261							
ler I/O Unit								
Connector-	XW2D-40G6							
Terminal Block Con- version Unit	XW2D-40C6							
Connecting Cables	XW2Z-□□□B XW2Z-□□□BU							
Connection diagram	Wd m (Wd (m+2))							


Note The +V terminals and COM terminals are internally connected inside the Controller, but they must all be wired.

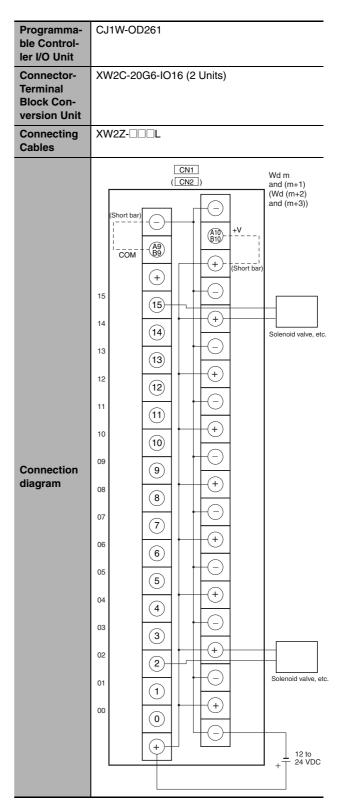

Note 1 Connect the A9/B9 terminal and the \ominus terminal. Connect the A10/B10 terminal and the \oplus terminal. (Use the enclosed short bar.)

Programma- ble Control- ler I/O Unit	CJ1W-OD262
Connector- Terminal Block Con- version Unit	XW2D-40G6
Connecting Cables	XW2Z-□□□K
Connection diagram	CN1 (CN2) L 08


Note The COM (+V) terminals and 0V terminals are internally connected inside the Controller, but they must all be wired.

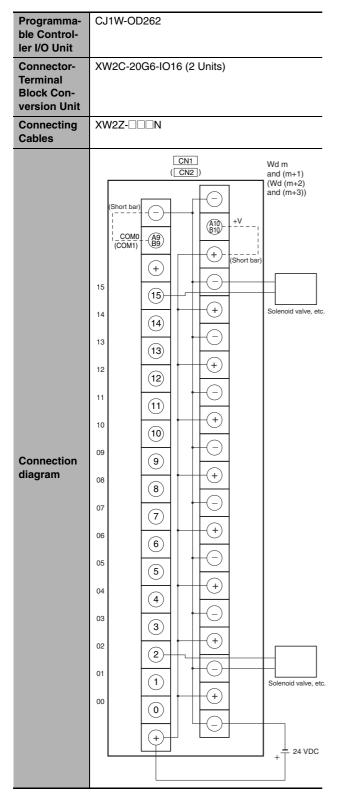

Note 1 Connect the A9/B9 terminal and the \ominus terminal. Connect the A10/B10 terminal and the \oplus terminal. (Use the enclosed short bar.)


Programma- ble Control-	CJ1W-OD263
ler I/O Unit Connector- Terminal Block Con- version Unit	XW2D-40G6
Connecting Cables	XW2Z-□□□K
Connection diagram	CN1 (CN2) 1 12 to 24 VDC

Note The +V terminals and COM terminals are internally connected inside the Controller, but they must all be wired.

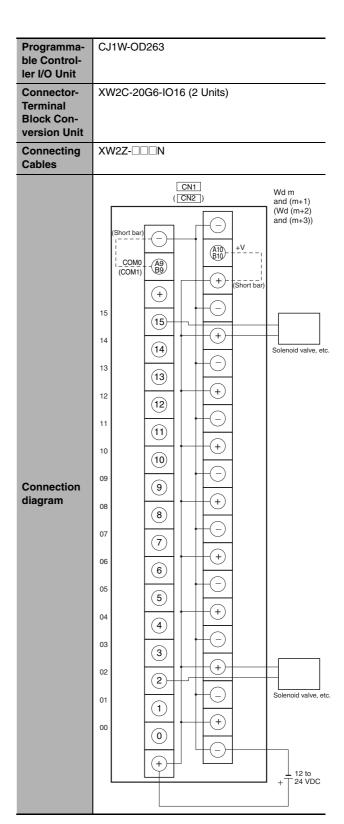


Note 1 Connect the A9/B9 terminal and the ⊝ terminal. Connect the A10/B10 terminal and the \oplus terminal. (Use the enclosed short bar.)

Inputs and Outputs

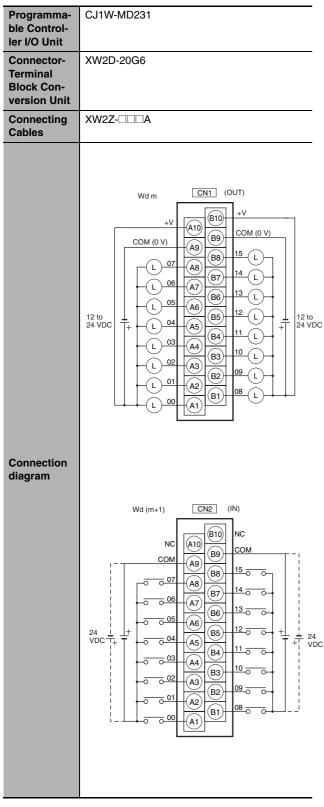

Note 1 The polarity for input power supply connections indicated with dotted lines (----) can be connected in either direction.

2 The COM terminals are internally connected inside the Controller, but they must all be wired.

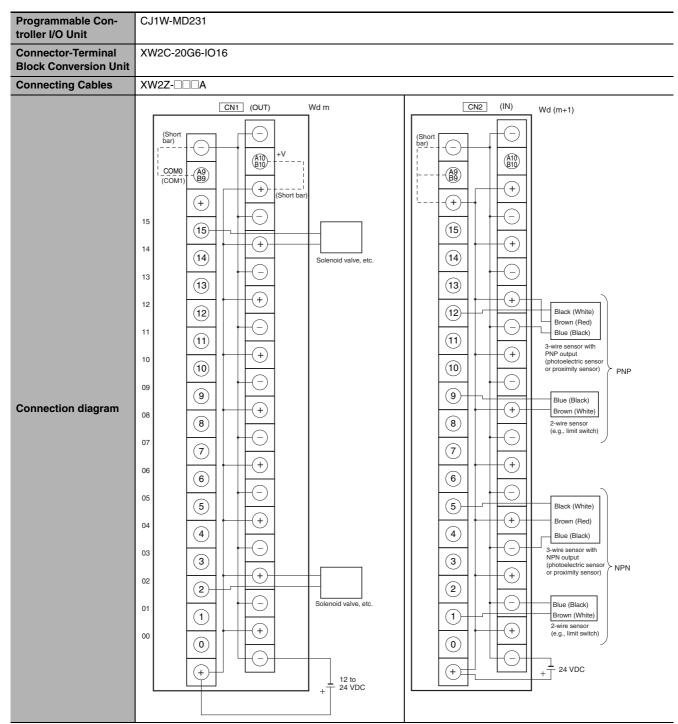

Note 1 Connect the A9/B9 terminal and the ⊝ terminal

Connect the A10/B10 terminal and the \oplus terminal.


(Use the enclosed short bar.)

2 The COM terminals are wired inside the Connector-Terminal Block Conversion Unit.

Note 1 Connect the A9/B9 terminal and the \oplus terminal for NPN.


Connect the A9/B9 terminal and the \ominus terminal for PNP.

(Use the enclosed short bar.)

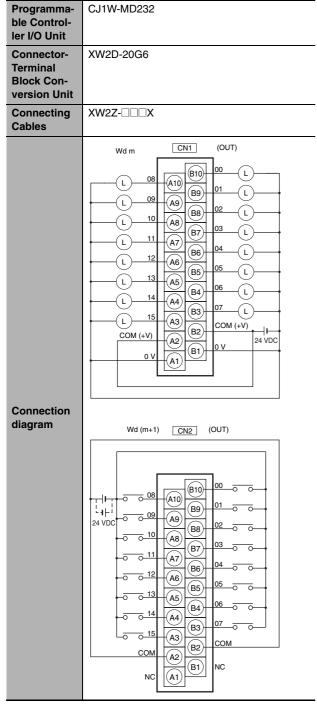


Note 1 The polarity for input power supply connections indicated with dotted lines (____) can be connected in either direction.

2 The COM terminals and 0V terminals are internally connected inside the Controller, but they must all be wired.

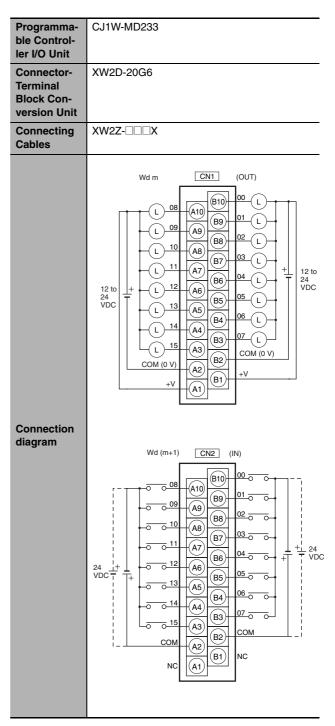


Note 1 The polarity for input power supply connections indicated with dotted lines (_____) can be connected in either direction.

2 The +V terminals and COM terminals are internally connected inside the Controller, but they must all be wired.

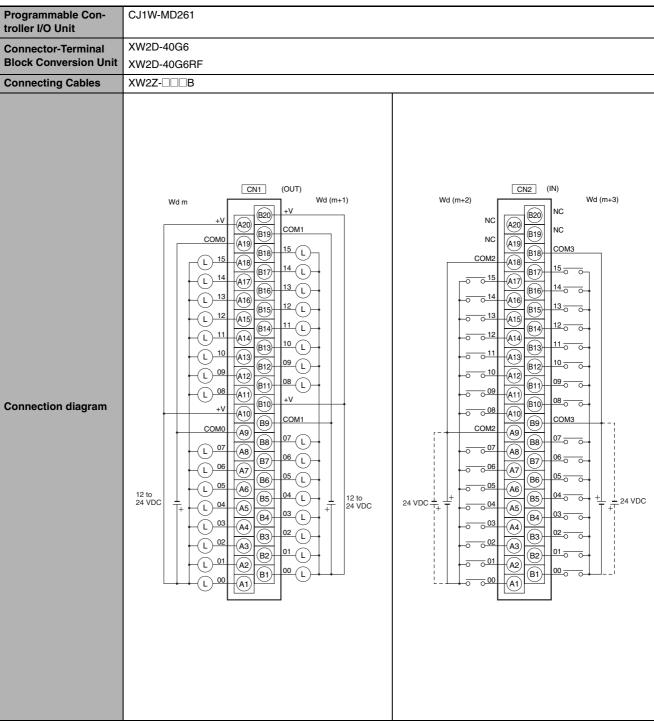

Note The +V terminals and COM terminals are internally connected inside the Controller, but they must all be wired.

- Note 1 The polarity for input power supply connections indicated with dotted lines (_____) can be connected in either direction provided that the same polarity is used for the commons for rows A and B.
 - 2 Both COM0 and COM1 have two pins each. They are internally connected inside the Controller, but they must all be wired.

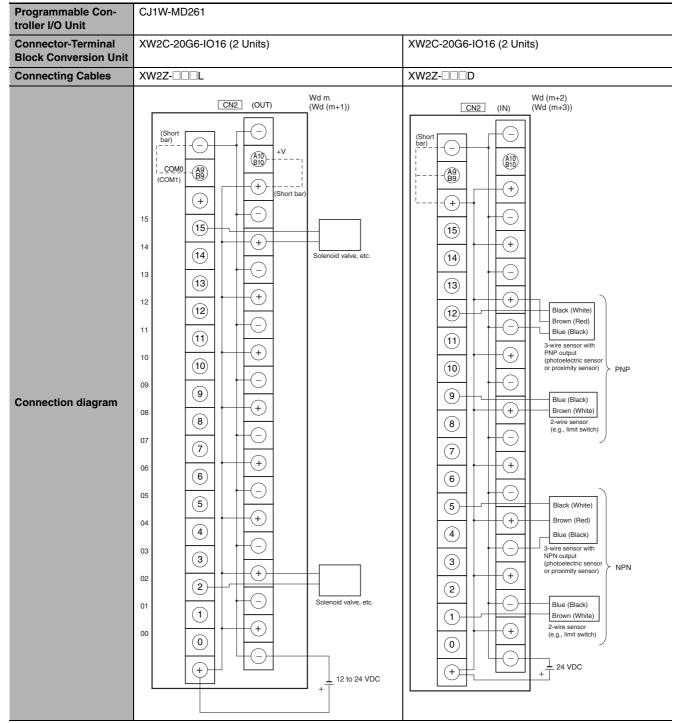

Note 1 Connect the A9/B9 terminal and the \ominus terminal.

Connect the A10/B10 terminal and the \oplus terminal.


(Use the enclosed short bar.)

2 The COM terminals are wired inside the Connector-Terminal Block Conversion Unit.

Note 1 Connect the A9/B9 terminal and the \oplus terminal for NPN.


Connect the A9/B9 terminal and the \ominus terminal for PNP.

(Use the enclosed short bar.)

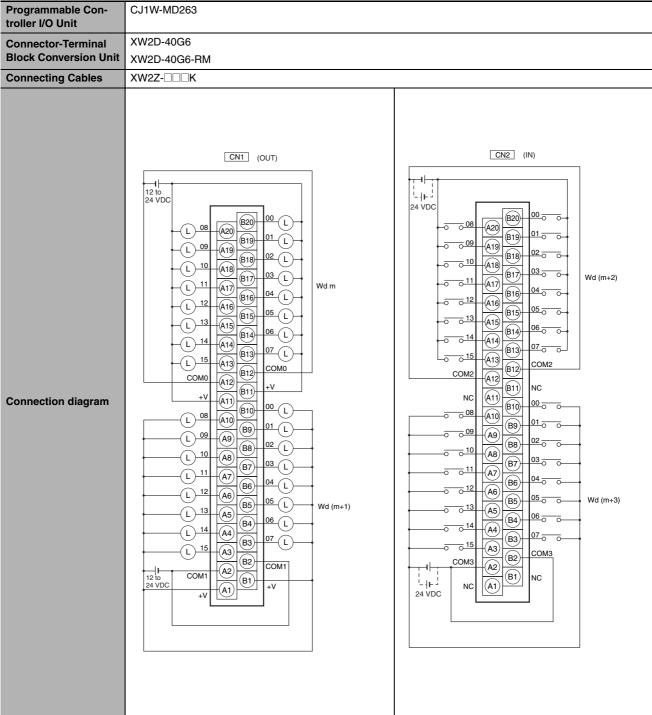

Note The +V terminals and COM terminals are internally connected inside the Controller, but they must all be wired.

- Note 1 The polarity for input power supply connections indicated with dotted lines (_____) can be connected in either direction.
 - 2 Both COM0 and COM1 have two pins each. They are internally connected inside the Controller, but they must all be wired.

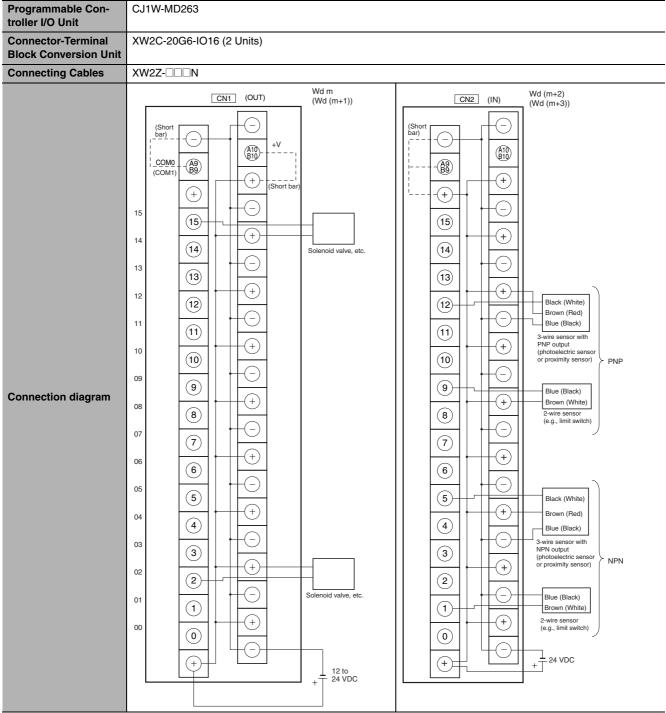

Note 1 Connect the A9/B9 terminal and the ⊝ terminal.

Connect the A10/B10 terminal and the \oplus terminal.


(Use the enclosed short bar.)

2 The COM terminals are wired inside the Connector-Terminal Block Conversion Unit.

Note 1 Connect the A9/B9 terminal and the \oplus terminal for NPN.

Connect the A9/B9 terminal and the \ominus terminal for PNP.

(Use the enclosed short bar.)

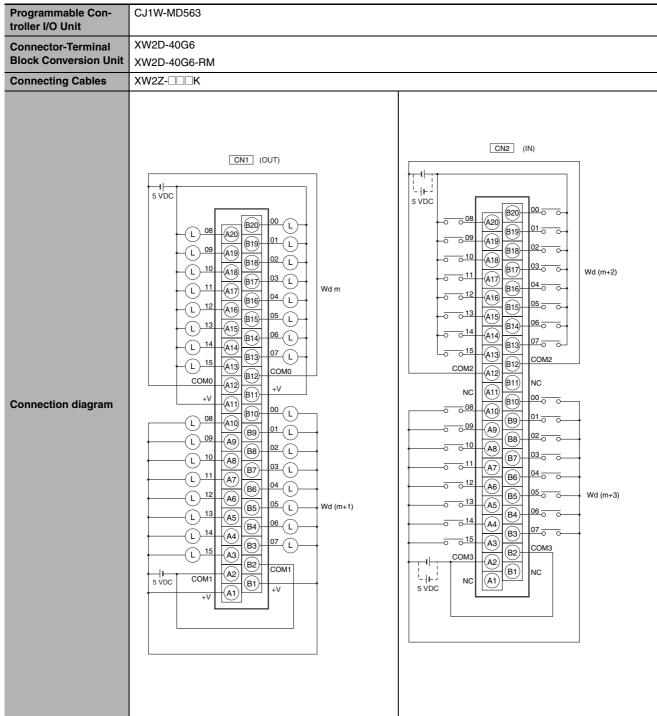


- Note 1 are internally connected inside the Controller, but they must all be wired.
 - 2 The power supply voltage for the CJ1W-MD563 is 5 V.
- The +V terminals and COM terminals Note 1 The COM terminals are internally connected inside the Controller, but they must all be wired.
 - 2 The power supply voltage for the CJ1W-MD563 is 5 V.

Connection Diagrams for I/O Relay Terminals

Connection examples and internal connection diagrams for I/O Relay Terminals connected to Basic I/O Units are shown below.

Inputs

G7TC I/O Relay Terminals

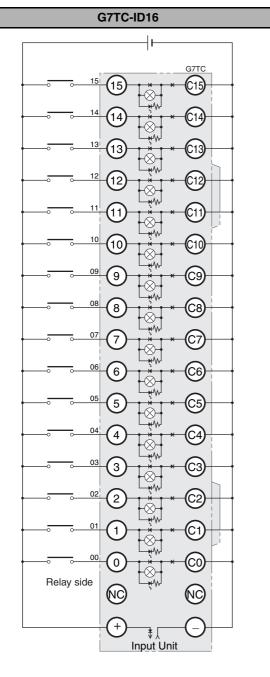

TOP VIEW

- Note 1 Inputs to the Input Units and I/O Relay Terminals use isolated contacts. "00" to "15" are the input bit numbers for the Input Unit and the I/O Relay Terminal.
 - 2 Use the G78-04 short bar to short to the common terminal.

G7TC-IA16

TOP VIEW

Note 1 Inputs to the Input Units and I/O Relay Terminals use isolated contacts. "00" to "15" are the input bit numbers for the Input Unit and the I/O Relay Terminal.


Relay side

2 Use the G78-04 short bar to short to the common terminal.

Input Unit

Outputs


G70D-V Relay Terminals

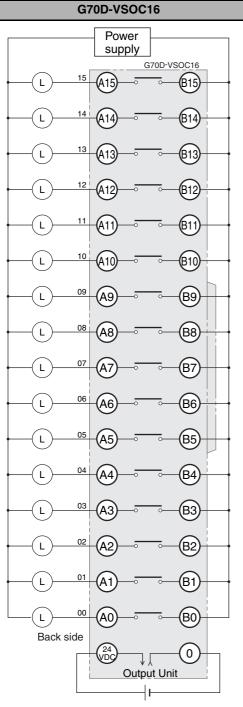

TOP VIEW

- Note 1 They are also isolated from the Output Unit and I/O Relay Terminal. "00" to "15" are the output numbers for the Output Unit and the I/O Relay Terminal.
 - 2 Use the G6D-4-SB short bar to short to the common terminal.

G70D-VSOC16+G70D-ET

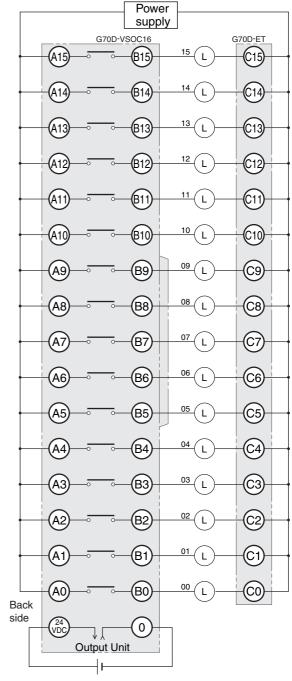


- Note 1 They are also isolated from the Output Unit and I/O Relay Terminal. "00" to "15" are the output numbers for the Output Unit and the I/O Relay Terminal.
 - 2 Use the G6D-4-SB short bar to short to the common terminal.

G70D Relay Terminals

G70D-SOC16

Power supply G70D-SOC16 <u>10</u>(L <u>08</u>(L (B5 <u>06</u>(L (B1) 02(L) Relay side 0 **Output Unit**

G70D-SOC08

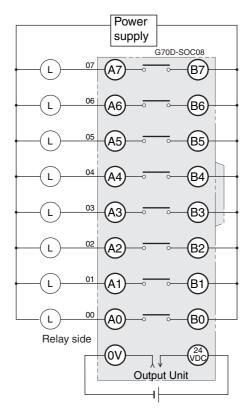


TOP VIEW

Note Every two outputs share a common. The current supplied is 3 A per common. They are also isolated from the Output Unit and I/O Relay Terminal. "00" to "15" are the output numbers for the Output Unit and the I/O Relay Terminal.

- Note 1 All outputs are independent. They are also isolated from the Output Unit and I/O Relay Terminal. "00" to "07" are the output numbers for the Output Unit and the I/O Relay Terminal.
 - 2 Use the G6D-4-SB short bar to short to the common terminal.

G70R Relay Terminals


G70R-SOC08

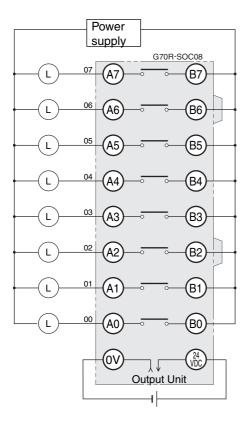

Note 1 All outputs are independent. They are also isolated from the Output Unit and I/O Relay Terminal. "00" and "07" are the output numbers for the Output Unit and the I/O Relay Terminal.

² Use the G6D-4-SB short bar to short to the common terminal.

G7TC I/O Relay Terminals

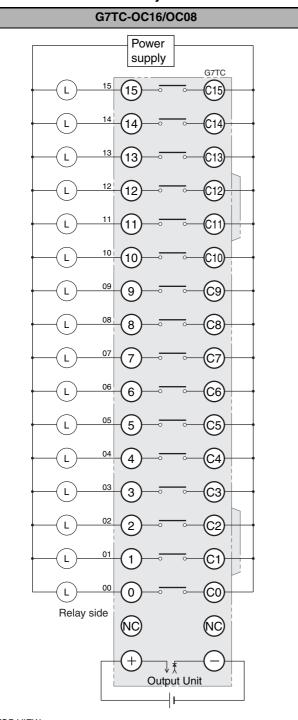

TOP VIEW

Note 1 All outputs are independent. They are also isolated from the Output Unit and I/O Relay Terminal. "00" to "15" are the output numbers for the Output Unit and the I/O Relay Terminal.

- 2 The G7TC-OC08 has only 8 outputs and therefore does not have 8 to 15 and C8 to C15.
- 3 Use the G78-04 short bar to short to the common terminal.

G7TC I/O Relay Terminals

G7TC-OC16-1 Power supply G7TC Relay side ∜ ∫ Output Unit

- Note 1 All outputs are independent. They are also isolated from the Output Unit and I/O Relay Terminal. "00" to "15" are the output numbers for the Output Unit and the I/O Relay Terminal.
 - 2 Use the G78-04 short bar to short to the common terminal.

G70A-ZOC16 Relay Terminal Socket

G70A-ZOC16-3+G2R-1-S (16 Units) Power supply G70A-ZOC16-3 + G2R-1-S (16 Units) (L)<u>15</u> (L)<u>15</u> (L)<u>14</u> (L)<u>14</u> (L)<u>13</u> (L)<u>13</u> (L)<u>12</u> (L)<u>12</u> (L)<u>11</u> L)10 (114) (L)10 (L)<u>09</u> **1** (L)<u>09</u> L)08 (94) (L)<u>08</u> <u>L</u>07 (84) (L)<u>07</u> (L)<u>06</u> (74) (L)<u>06</u> 72) (L)<u>05</u> 64) 62 (L)<u>05</u> L)04 (54) (L)<u>04</u> (L)<u>03</u> (44) (L)<u>03</u> (L)<u>02</u> (34) (L)<u>02</u> (L)<u>01</u> 24) (L)<u>00</u> (14) (L)<u>00</u> Relay side Output Unit

TOP VIEW


Note 1 The above diagram is an example with the G2R-1-S(N) mounted to the G70A-ZOC16-3.


2 All outputs are independent. They are also isolated from the Output Unit and I/O Relay Terminal. "00" to "15" are the output numbers for the Output Unit and the I/O Relay Terminal.

Dimensions A-3

A-3-1 **NJ-series CPU Units**



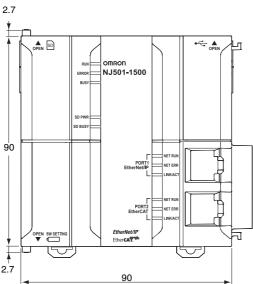


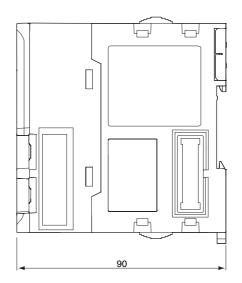


Unit: mm

A-3-2 NJ-series Power Supply Units


NJ-PA3001

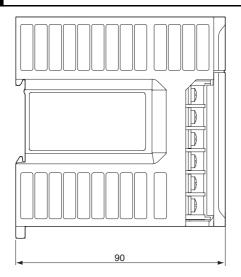


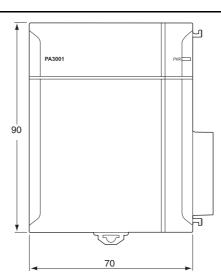

Unit: mm

NJ-PD3001

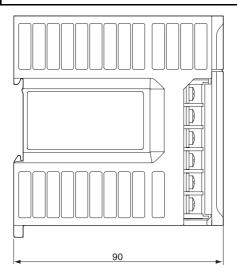


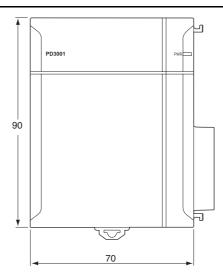

Unit: mm

CJ-series Basic I/O Units A-3-3

8/16-point Units with 18-terminal Terminal Blocks

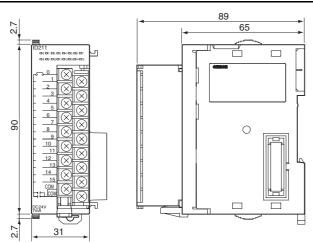


Unit: mm


Unit: mm

32-point Units (Input Units and Output Units)

Units with Fujitsu-compatible Connector (40-pin × 1)

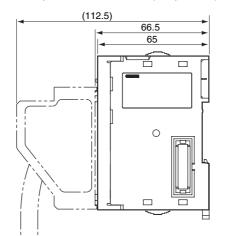


Units with MIL Connector (40-pin × 1)

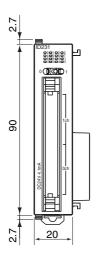

2.7

90


01010203

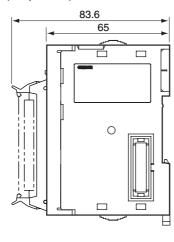


32-point Units (24-VDC Input/Transistor Output Units)


Units with Fujitsu-compatible Connector (24-pin \times 2)

Unit: mm

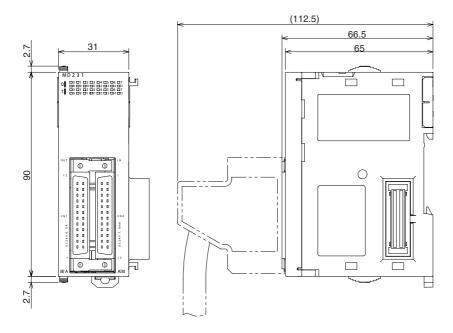

Units with MIL Connector (20-pin \times 2)

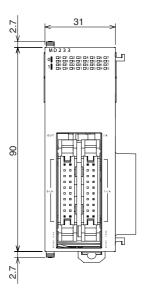


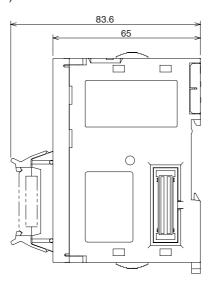


64-point Units (Input Units, Output Units, 24-VDC Input/Transistor Output Units, TTL I/O Units)


Units with Fujitsu-compatible Connector (40-pin \times 2)

Unit: mm

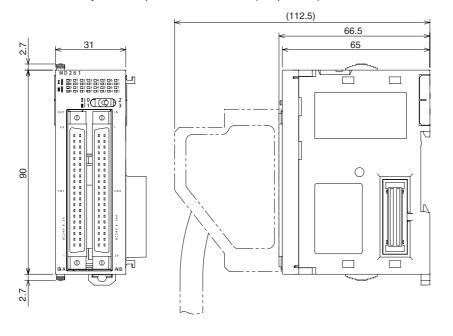

Units with MIL Connector (40-pin × 2)

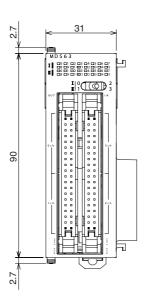


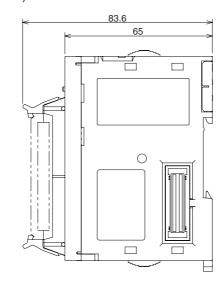


A-3-4 B7A Interface Unit

CJ1W-B7A□□


Unit: mm

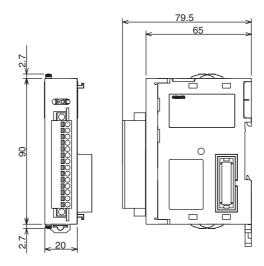

A-3-5 CJ-series I/O Control Unit and I/O Interface Unit

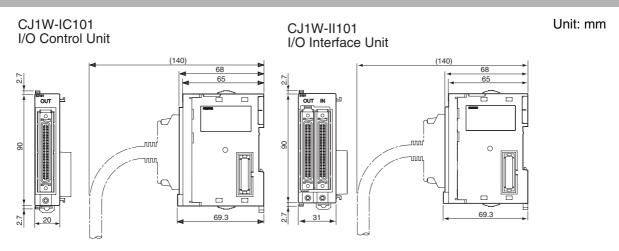

A-3-6 SD Memory Card

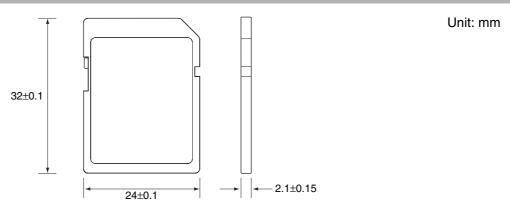


A-4 Load Short-circuit Protection and Line Disconnection Detection for CJseries Basic I/O Units

A-4-1 Load Short-circuit Protection and Line Disconnection Detection for CJ1W-OD202

This section describes the load short-circuit protection and line disconnection detection of the CJ1W-OD202 Output Units.


As shown below, normally when the output bit (OUT) turns ON, the transistor will turn ON and then output current (lout) will flow.

Figure 1 Normal Operation

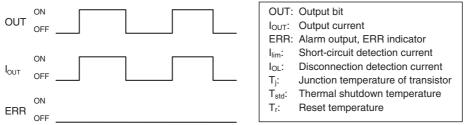


If the output current (lout) exceeds the detection current (llim) when an overload or short-circuit occurs, the output current (lout) will be limited as shown in figure below. When the junction temperature (Tj) of the output transistor reaches the thermal shutdown temperature (Tstd), the output will turn OFF to protect the transistor from being damaged, and the alarm output bit will turn ON to light the ERR indicator. When the junction temperature (Tj) of the transistor drops down to the reset temperature (Tr), the ERR indicator will be automatically reset and the output current will start flowing.

Figure 2 Operation for Overload or Short Circuit

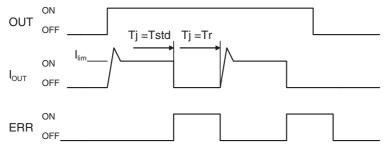

If the line is disconnected and the output current (lout) drops below the line disconnection detection current (IOL), the ERR indicator will light as shown in the following figure.

Figure 3 Operation for Disconnected Line with Output Current below the Line Disconnection Detection Current

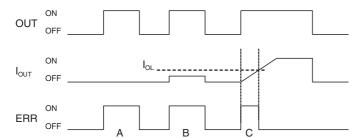

- A: Load not connected or load line broken.
- B: Current to load at or below line disconnection detection current.
- C: Rise of current to load too slow and error detected before the disconnection detection current was reached.

When load L is connected, the ERR indicator may light and the Alarm Output Bit may turn ON for approximately 100 ms. The programming example given in the next section can be used so that an error is not detected in this case.

Operating Restrictions of CJ1W-OD202

Although the CJ1W-OD202 is provided with load short-circuit protection, these are for protecting internal circuits against momentary short-circuiting in the load. As shown in Figure 2, the load short-circuit protection is automatically released when the Tj equals to Tr. Therefore, unless the cause of short-circuit is removed, ON/OFF operations will be repeated in the output. Leaving short-circuits for any length of time will cause internal temperature rise, deterioration of elements, discoloration of the case or PCBs, etc. Therefore, observe the following restrictions.

Restrictions

If a short-circuit occurs in an external load, immediately turn OFF the corresponding output and remove the cause. The CJ1W-OD202 turns ON an alarm output bit that corresponds to the external load output number. There is an alarm output bit for every two outputs.

When an alarm output bit turns ON, use a self-holding bit for the alarm in the user program and turn OFF the corresponding output.

The Alarm Output Bits are allocated in the Basic I/O Unit Information Area system-defined variable. Two output bits are assigned for each slot and rack in which a Unit is mounted.

_CJB_IOUnitInfo[*rack_number*,*slot_number*,*serial_number_in_Unit*]

For example, when the CJ1W-OD202 is mounted in slot 0 of rack 0, _CJB_IOUnitInfo[0,0,0] changes to TRUE if output Ch1Out0 changes to TRUE. When the CJ1W-OD202 is mounted in slot 1 of rack 0, _CJB_IOUnitInfo[0,1,3] changes to TRUE if output Ch1Out7 changed to TRUE.

Programming Example

In this example, CJ1W-OD202 is mounted in slot 0 of rack 0.

This example shows how to change output Jxx_Ch0_Out00 to FALSE immediately if the Alarm Output Bit _CJB_IOUnitInfo[0,0,0] changes to TRUE and how to keep the output FALSE until the cause is removed and the bit is reset with RstOD202.

To prevent the Alarm Output Bit from changing to TRUE momentarily when the inductive load turns ON, the alarm output is not changed to TRUE for 200 ms after input En_OD202 changes to TRUE.

Variable	Data type	Initial value	Address	Comment
OutData	BOOL	FALSE		Output data
NG	BOOL	FALSE		TON_OC202 timer output
ResetOD202	BOOL	FALSE		Reset switch
AlarmOut	BOOL	FALSE		Error flag
J01_Ch1_Out00	BOOL		IOBus://rack#0/slot#0/Ch1_Out/Ch1 _Out00	OC202 output
_CJB_IOUnitInfo	ARRAY[03,09, 07] OF BOOL			Basic I/O Unit information array

```
TON_OD202
_CJB_IOUnitInfo[0.0.0]
                         En_OD202
                                                     TON
                                                                               Tup_TON_OD202
                                             In
                                                       Q ElapTIme
                                 T#200ms
                                             PreTime
                                                          ElapTime
    Tup_TON_OD202
                        RstOD202
                                                                                   En_Alm
     En_Alm
En_OD202
                                                                               Jxx_Ch0_Out00
              En_Alm
```

A-4-2 Load Short-circuit Protection for CJ1W-OD204/OD212/OD232/MD232

As shown below, normally when the output bit turns ON (OUT), the transistor will turn ON and then output current (lout) will flow. If the output current (lout) exceeds the detection current (llim) when an overload or short-circuit occurs, the output current (lout) will be limited as shown in Figure 2. When the junction temperature (Tj) of the output transistor reaches the thermal shutdown temperature (Tstd), the output will turn OFF to protect the transistor from being damaged, and the alarm output bit will turn ON to light the ERR indicator. When the junction temperature (Tj) of the transistor drops down to the reset temperature (Tr), the ERR indicator will be automatically reset and the output current will start flowing.

Figure 1 Normal Operation


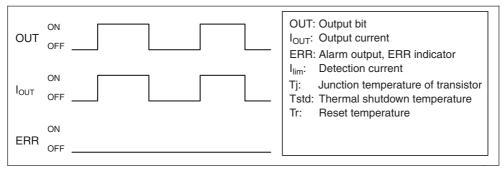


Figure 2 Operation for Overload or Short Circuit

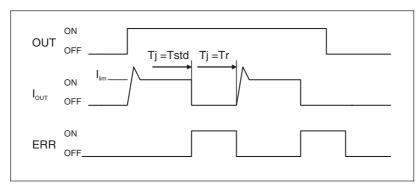

Operating Restrictions for the CJ1W-OD204/OD212/OD232/MD232

Although these Units are provided with load short-circuit protection, these are for protecting internal circuits against momentary short-circuiting in the load. As shown in Figure 2, the load short-circuit protection is automatically released when the Tj equals to Tr. Therefore, unless the cause of short-circuit is removed, ON/OFF operations will be repeated in the output. Leaving short-circuits for any length of time will cause internal temperature rise, deterioration of elements, discoloration of the case or PCBs, etc. Therefore, observe the following restrictions.

Restrictions

If a short-circuit occurs in an external load, immediately turn OFF the corresponding output and remove the cause. An alarm output bit that corresponds to the external load output number is turned ON. There is an alarm output bit for every common.

When an alarm output bit turns ON, use a self-holding bit for the alarm in the user program and turn OFF the corresponding output.

The Alarm Output Bits are allocated in the Basic I/O Unit Information Area system-defined variable. Sixteen output bits are assigned for each slot and rack in which a Unit is mounted.

_CJB_IOUnitInfo[rack_number,slot_number,serial_number_in_Unit]

For example, when the CJ1W-OD212 is mounted in slot 0 of rack 0, _CJB_IOUnitInfo[0,0,0] changes to TRUE if output Ch1Out2 changes to TRUE.

When the CJ1W-OD232 is mounted in slot 1 of rack 2, _CJB_IOUnitInfo[2,1,1] changes to TRUE if output Ch2Out8 changes to TRUE.

A-5 EMC Directive Measures for Relay Outputs

The NJ-series Controllers conform to the Common Emission Standards (EN 61000-6-4 or EN 61131-2) of the EMC Directives. However, noise generated by relay output switching may not satisfy these Standards. In such a case, a noise filter must be connected to the load side or other appropriate countermeasures must be provided external to the Controller.

Countermeasures taken to satisfy the standards vary depending on the devices on the load side, wiring, configuration of machines, etc. Following are examples of countermeasures for reducing the generated noise.

Countermeasures

(Refer to EN61000-6-4 for more details.)

Countermeasures are not required if the frequency of load switching for the whole system with the Controller included is less than 5 times per minute.

Countermeasures are required if the frequency of load switching for the whole system with the Controller included is 5 times or more per minute.


Countermeasure Examples

When switching an inductive load, connect an surge protector, diodes, etc., in parallel with the load or contact as shown below.

Circuit	Cur	rent	Characteristic	Required element		
Circuit	AC	DC	Cital acteristic	nequired element		
CR method C exitoning paol	Yes	Yes	If the load is a relay or solenoid, there is a delay in the resetting time. If the supply voltage is 24 or 48 V, insert the surge protector in parallel with the load. If the supply voltage is 100 to 200 V, insert the surge protector between the contacts.	The capacitance of the capacitor should be approx. 1 to 0.5 μF per contact current of 1 A and resistance of the resistor should be approx. 0.5 to 1 Ω per contact voltage of 1 V. These values, however, vary with the load and the characteristics of the relay. Decide these values from experiments, and take into consideration that the capacitance suppresses spark discharge when the contacts are separated and the resistance limits the current that flows into the load when the circuit is closed again. The dielectric strength of the capacitor must be 200 to 300 V. If		
				the circuit is an AC circuit, use a capacitor with no polarity.		
Diode method Power supply	No	Yes	The diode connected in parallel with the load changes energy accumulated by the coil into a current, which then flows into the coil so that the current will be converted into Joule heat by the resistance of the inductive load. This delay in the resetting time, caused by this method is longer than that caused by the CR method.	The reversed dielectric strength value of the diode must be at least 10 times as large as the circuit voltage value. The forward current of the diode must be the same as or larger than the load current. The reversed dielectric strength value of the diode may be two to three times larger than the supply voltage if the surge protector is applied to electronic circuits with low circuit voltages.		

Circuit	Current		Characteristic	Required element
Official	AC	DC	Gilaracteristic	nequired element
Varistor method Power supply	Yes	Yes	The varistor method prevents the imposition of high voltage between the contacts by using the constant voltage characteristic of the varistor. There is a delay in the resetting time.	
			If the supply voltage is 24 or 48 V, insert the varistor in parallel with the load. If the supply voltage is 100 to 200 V, insert the varistor between the contacts.	

When switching a load with a high inrush current such as an incandescent lamp, suppress the inrush current as shown below.

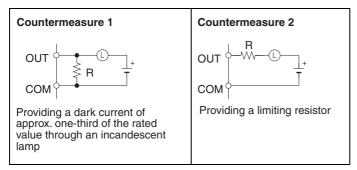

A-6 System-defined Variables

System-defined variables are assigned specific functions by the system. They are registered in the global variable table, or the local variable table for each POU, in advance.

These variables cannot be changed. Some of the variables start with an underbar and some start with "P".

Some of the system-defined variables are read-only and some are read/write.

You read and write the variables with the user program, with communications from external devices, with the Sysmac Studio, or with an NS-series PT.

Basically, system-defined variables are classified according to the function modules. The variables start with the following category names.

Function module	Category name
System-defined variables for the overall NJ-series Controller	None
PLC Function Module	_PLC
	_CJB
Motion Control Function Module	_MC
EtherCAT Master Function Module	_EC
EtherNet/IP Function Module	_EIP

The variables are described in the tables of this appendix as shown below.

Variable name	Meaning	Function	Data type	Range of values	Reference
This is the system- defined variable name. The prefix gives the category name.	This is the meaning of the variable.	The function of the variable is described.	The data type of the variable is given.	The range of values that the variable can take is given.	The page of the individual system- defined vari- able specifi- cations table is given.

A-6-1 System-defined Variables for the Overall NJ-series Controller (No Category)

Functional Classification: Clock

Variable name	Meaning	Function	Data type	Range of values	Reference
CurrentTime	System Time		DATE AND_ TIME	DT#1970-01- 01-00:00:00 to DT#2106-02- 06-23:59:59	page A-127

• Functional Classification: Tasks

Variable name	Meaning	Function	Data type	Range of values	Reference
_ <i>TaskName_</i> Active	Task Active Flag	TRUE during task execution. FALSE when task execution is not in progress.	BOOL	TRUE or FALSE	page A-127
		Note You cannot use this system-defined variable in the user program. It is used only to access task status for data tracing from the Sysmac Studio.			
_ <i>TaskName_</i> LastExecTime	Last Task Execution Time	Contains the task execution time the last time the task was executed (unit: 0.1 μ s).	TIME	Depends on data type.	page A-128
		Note You cannot use this system-defined variable in the user program. It is used only to access task status for data tracing from the Sysmac Studio.			
_ <i>TaskName_</i> MaxExecTime	Maximum Task Execution Time	Contains the maximum value of the task execution time (unit: 0.1 μ s).	TIME	Depends on data type.	page A-128
		Note You cannot use this system-defined variable in the user program. It is used only to access task status for data tracing from the Sysmac Studio.			
_ <i>TaskName</i> _ MinExecTime	Minimum Task Execution Time	Contains the minimum value of the task execution time (unit: 0.1 µs).	TIME	Depends on data type.	page A-128
		Note You cannot use this system-defined variable in the user program. It is used only to access task status for data tracing from the Sysmac Studio.			
_ <i>TaskName</i> _ ExecCount	Task Execution Count	Contains the number of executions of the task.	UDINT	Depends on data type.	page A-128
		If 4294967295 is exceeded, the value returns to 0 and counting is continued.			
		Note You cannot use this system-defined variable in the user program. It is used only to access task status for data tracing from the Sysmac Studio.			
_ <i>TaskName</i> _ Exceeded	Task Exceeded Flag	TRUE if the task period was exceeded. FALSE if task execution was completed within	BOOL	TRUE or FALSE	page A-129
	0	the task period.			
		Note You cannot use this system-defined variable in the user program. It is used only to access task status for data tracing from the Sysmac Studio.			
_ <i>TaskName_</i> ExceedCount	Task Period Exceeded Count	Contains the number of times that the period was exceeded.	UDINT	Depends on data type.	page A-129
		If the present value exceeds the maximum value of the data type, the present value returns to 0 and the count is continued.			
		If 4294967295 is exceeded, the value returns to 0 and counting is continued.			
		Note You cannot use this system-defined variable in the user program. It is used only to access task status for data tracing from the Sysmac Studio.			

• Functional Classification: Errors

Variable name	Meaning	Function	Data type	Range of val- ues	Reference
_ErrSta	Controller Error Status	TRUE if there is a Controller error. FALSE if there is no Controller error. Note Do not use this variable in the user program. There may be a delay in updating it and concurrency problems in relation to the error status of the function module. Use this variable only to access status through communications from an external device. Refer to information on the meanings of the error status bits at the end of this appendix for details.	WORD	16#0000 to 16#C0F0	page A-129
_AlarmFlag	User-defined Error Status	The bit corresponding to the event level is TRUE while there is a user-defined error. Bits 00 to 07 correspond to user fault levels 1 to 8. This variable contains 0000 hex when there is no user-defined error.	WORD	16#0000 to 16#00FF	page A-130

• Functional Classification: SD Memory Card

Variable name	Meaning	Function	Data type	Range of values	Reference
_Card1Ready	SD Memory Card Ready Flag	TRUE when the SD Memory Card is recognized. FALSE when the SD Memory Card is not recognized. TRUE: The Card can be used. FALSE: The Card cannot be used.	BOOL	TRUE or FALSE	page A-130
_Card1Protect	SD Memory Card Write Protected Flag	TRUE when the SD Memory Card is write-protected with the LOCK switch. TRUE: Write protected. FALSE: Not write protected.	BOOL	TRUE or FALSE	page A-130
_Card1Err	SD Memory Card Error Flag	TRUE when an unusable SD Memory Card is inserted or a format error occurs. TRUE: There is an error FALSE: There is no error	BOOL	TRUE or FALSE	page A-130
_Card1Access	SD Memory Card Access Flag	TRUE during SD Memory Card access. TRUE: Card is being accessed. FALSE: Card is not being accessed. The system updates the flag every 100 ms. Because of this, access to the SD Memory Card is shown by this flag with a delay of up to 100 ms. We therefore do not recommend the use of this variable in the user program.	BOOL	TRUE or FALSE	page A-131
_Card1Deteriorated	SD Memory Card Life Warning Flag	TRUE when the life of the SD Memory Card is exceeded. TRUE: The life of the Card has been exceeded. FALSE: The Card can still be used.	BOOL	TRUE or FALSE	page A-131
_Card1PowerFail	SD Memory Card Power Interrup- tion Flag	TRUE when the power supply to the CPU Unit was interrupted during access to the SD Memory Card. TRUE: Power was interrupted during SD Memory Card access. FALSE: Normal	BOOL	TRUE or FALSE	page A-131

• Functional Classification: Power Supply

Variable name	Meaning	Function	Data type	Range of values	Reference
_PowerOnHour	Total Power ON Time	Contains the total time that the power has been ON.	UDINT	0 to 4294967295	page A-131
		Contains the total time that the CPU Unit has been ON in 1-hour increments.			
		To reset this value, overwrite the current value with 0.			
		The value is not updated after it reaches 4294967295.			
		This variable is not initialized at startup.			
_PowerOnCount	Power Interruption Count	Contains the number of times that the power supply has been interrupted. The value is incremented by 1 each time the power supply is interrupted after the first time that the power was turned ON.	UDINT	0 to 4294967295	page A-132
		To reset this value, overwrite the current value with 0.			
		The value is not updated after it reaches 4294967295.			
		This variable is not initialized at startup.			
_RetainFail	Retention Failure Flag	TRUE at the following time (failure of retention during power interruptions).	BOOL	TRUE or FALSE	page A-132
		When an error is detected in the battery- backup memory check at startup.			
		FALSE at the following times (no failure of retention during power interruptions).			
		When no error is detected in the battery- backup memory check at startup.			
		When the user program is downloaded. When the Clear All Memory operation is performed.			
		Note When the encoder home offset data is not retained, the status is given in the error status of the axis variable, and not in this flag.			

• Functional Classification: Programming

Variable name	Meaning	Function	Data type	Range of values	Reference
P_On	Always TRUE Flag	This flag is always TRUE.	BOOL	TRUE	page A-132
P_Off	Always FALSE Flag	This flag is always FALSE.	BOOL	FALSE	page A-132
P_CY	Carry Flag	This flag is updated by some instructions.	BOOL	TRUE or FALSE	page A-132
P_First_RunMode	First RUN Period Flag	TRUE for one task period when PROGRAM mode changes to RUN mode.	BOOL	TRUE or FALSE	page A-133
		Use this flag to perform initial processing when the CPU Unit begins operation.			
P_PRGER	Instruction Error Flag	This flag changes to and remains TRUE when an instruction error occurs. It remains TRUE until changed to FALSE from the user program.	BOOL	TRUE or FALSE	page A-133

• Functional Classification: Communications

Variable name	Meaning	Function	Data type	Range of values	Reference
_Port_numUsingPort	Number of Used Ports	Gives the number of internal logical ports that are currently used. You can use this variable when you debug the user program.	USINT	0 to 32	page A-133
_Port_isAvailable	Network Commu- nications Instruc- tion Enabled Flag	Indicates whether there is an available internal logical port. TRUE when an internal logical port is available. Otherwise FALSE.	BOOL	FALSE or TRUE	page A-133
_FINSTCPConnSta	FINS/TCP Con- nection Status	Gives the FINS/TCP connection status.	WORD	16#0000 to 16#FFFF	page A-133

A-6-2 PLC Function Module, Category Name: _PLC

• Functional Classification: Debugging

Variable name Member	Meaning	Function	Data type	Range of values	Reference
_PLC_TraceSta[03]			_sTRACE_ STA		page A-134
.lsStart	Trace Busy Flag	TRUE when a trace starts. Note You cannot use this system-defined variable in the user program. It is used only to monitor the status of data tracing from the Sysmac Studio.	BOOL	TRUE or FALSE	page A-134
.lsComplete	Trace Completed Flag	Note You cannot use this system-defined variable in the user program. It is used only to monitor the status of data tracing from the Sysmac Studio.	BOOL	TRUE or FALSE	page A-134
.lsTrigger	Trace Trigger Monitor Flag	TRUE when the trigger condition is met. FALSE when the next trace starts. Note You cannot use this system-defined variable in the user program. It is used only to monitor the status of data tracing from the Sysmac Studio.	BOOL	TRUE or FALSE	page A-134
.ParamErr	Trace Parameter Error Flag	TRUE when a trace starts, but there is an error in the trace settings. FALSE when the settings are normal. Note You cannot use this system-defined variable in the user program. It is used only to monitor the status of data tracing from the Sysmac Studio.	BOOL	TRUE or FALSE	page A-135

• Functional Classification: Errors

Variable name	Meaning	Function	Data type	Range of values	Reference
_PLC_ErrSta	PLC Function Module Error Sta-	TRUE when there is a Controller error that involves the PLC Function Module.	WORD	16#0000 to 16#00F0	page A-135
	tus	FALSE when there is no Controller error that involves the PLC Function Module.			
		Refer to information on the meanings of the error status bits at the end of this appendix for details.			

A-6-3 PLC Function Module, Category Name: _CJB

• Functional Classification: I/O Bus Status

Variable name	Meaning	Function	Data type	Range of values	Reference
_CJB_MaxRackNo	Largest Rack Number	Contains the largest rack number of the Expansion Racks that are detected by the Controller.	UINT	0 to 3 0: Only CPU Rack.	page A-135
_CJB_MaxSlotNo	Largest Slot Number	Contains one higher than the largest slot number with a CJ-series Unit on each of the Racks that are detected by the Controller.	ARRAY [03] OF UINT	0 to 10 0: No CJ- series Unit mounted.	page A-135

• Functional Classification: I/O Bus Errors

Variable name	Meaning	Function	Data type	Range of values	Reference
_CJB_ErrSta	I/O Bus Error Status	Rote Note Do not use this variable in the user program. There may be a delay in updating it. Use this variable only to access status through communications from an external device. Refer to information on the meanings of the error status bits at the end of this appendix for details.	WORD	16#0000 to 16#C0F0	page A-136
_CJB_MstrErrSta	I/O Bus Master Error Status	Note Do not use this variable in the user program. There may be a delay in updating it. Use this variable only to access status through communications from an external device. Refer to information on the meanings of the error status bits at the end of this appendix for details.	WORD	16#0000 to 16#00F0	page A-136
_CJB_UnitErrSta	I/O Bus Unit Error Status	Gives the error status of the I/O Bus Unit. Note Do not use this variable in the user program. There may be a delay in updating it. Use this variable only to access status through communications from an external device. Refer to information on the meanings of the error status bits at the end of this appendix for details.	ARRAY [03, 09] OF WORD	16#0000 to 16#80F0	page A-136
_CJB_InRespTm	Basic Input Unit Input Response Times	Contains the response times of the Basic Input Units.	ARRAY [03, 09] OF UNIT	0 to 320	page A-136

• Functional Classification: Auxiliary Area Bits for CJ-series Units

Variable name	Meaning	Function	Data type	Range of values	Reference
_CJB_IOUnitInfo	Basic I/O Unit Information	Shows the status of the Basic I/O Unit alarm output (load short-circuit protection). TRUE: Load short-circuit FALSE: No load short-circuit	ARRAY [03, 09, 07] OF BOOL	TRUE or FALSE	page A-137
_CJB_CBU00InitSta to	CPU Bus Unit Initializing Flags	The corresponding variable is TRUE during initialization of the CPU Bus Unit.	BOOL	TRUE or FALSE	page A-137
_CJB_CBU15InitSta		The corresponding variable changes to FALSE when the initialization is completed. The numbers in the variables indicate the unit			
		numbers of the applicable Units.			
_CJB_SIO00InitSta to	Special I/O Unit Initializing Flags	The corresponding variable is TRUE during initialization of the Special I/O Unit.	BOOL	TRUE or FALSE	page A-137
_CJB_SIO95InitSta		The corresponding variable changes to FALSE when the initialization is completed.			
		The numbers in the variables indicate the unit numbers of the applicable Units.			
_CJB_CBU00Restart to _CJB_CBU15Restart	CPU Bus Unit Restart Bits	The CPU Bus Unit is restarted when the cor- responding variable changes to TRUE. (It is changed to FALSE by the system after the CPU Bus Unit is restarted.)	BOOL	TRUE or FALSE	page A-138
		The numbers in the variables indicate the unit numbers of the applicable Units.			
		If you change the Restart Flag to TRUE with an instruction, the restart process begins from refresh processing in the next task period.			
_CJB_SIO00Restart to _CJB_SIO95Restart	Special I/O Unit Restart Bits	The Special I/O Unit is restarted when the corresponding variable changes to TRUE. (It is changed to FALSE by the system after the Special I/O Unit is restarted.)	BOOL	TRUE or FALSE	page A-138
		The numbers in the variables indicate the unit numbers of the applicable Units.			
		If you change the Restart Flag to TRUE with an instruction, the restart process begins from refresh processing in the next task period.			
_CJB_SCU00P1ChgSta to _CJB_SCU00P2ChgSta	Serial Communications Unit 0, Port 1/2 Settings Changing Flags	TRUE when the parameters of the specified port are being changed. TRUE when the Change Serial Communications Parameter (SerialSetup) instruction is being executed.	BOOL	TRUE or FALSE	page A-139
_CJB_SCU15P1ChgSta to _CJB_SCU15P2ChgSta	Serial Communications Units 1 to 15, Port 1/2 Settings Changing Flags	FALSE after the parameters are changed. It is also possible for the user to indicate a change in serial port settings by turning ON the corresponding flag through the execution of an instruction or a user operation.	BOOL	TRUE or FALSE	page A-139

A-6-4 **Motion Control Function Module, Category Name: _MC**

• Functional Classification: Motion Control Functions

Variable name	Meaning	Function	Data type	Range of values	Reference
_MC_ErrSta	Motion Control Function Module Error Status	Shows the status of errors that are detected in the Motion Control Function Module. You can use this variable directly in the user program. Refer to information on the meanings of the error status bits at the end of this appendix for details.	WORD	16#0000 to 16#40F0	page A-139
_MC_ComErrSta	Common Error Status	Shows the status of errors that are detected in common processing for motion control. You can use this variable directly in the user program. Refer to information on the meanings of the error status bits at the end of this appendix for details.	WORD	16#0000 to 16#00F0	page A-139
_MC_AX_ErrSta	Axis Error Status	Shows the error status for each axis. The status of up to 64 axes is shown. You can use this variable directly in the user program. Refer to information on the meanings of the error status bits at the end of this appendix for details.	ARRAY [063] OF WORD	16#0000 to 16#00F0	page A-140
_MC_GRP_ErrSta	Axes Group Error Status	Shows the error status for each axes group. The error status for up to 32 axes groups is shown. You can use this variable directly in the user program. Refer to information on the meanings of the error status bits at the end of this appendix for details.	ARRAY [031] OF WORD	16#0000 to 16#00F0	page A-140
_MC_COM	Common Variable	Shows the status that is common to the Motion Control Function Module. Refer to the <i>NJ-series Motion Control Instructions Reference Manual</i> (Cat. No. W508) for details on structure members.	_sCOMMO N_REF		page A-140
_MC_GRP[32]	Axes Group Variables	Used to specify axes groups and shows multi-axes coordinated control status, and multi-axes coordinated control settings for motion control instructions. Normally, you use an Axes Group Variable with a different name. When you create an axes group on the System Studio, a user-defined axes group variable with a different name is created. Refer to the <i>NJ-series Motion Control Instructions Reference Manual</i> (Cat. No. W508) for details on structure members.	_sGROUP_ REF		page A-140
_MC_AX[64]	Axis Variables	Used to specify axes and shows single-axis control status, and single-axis control settings for motion control instructions. When you create an axis on the System Studio, a user-defined axis variable with a different name is created. Normally, you use an Axis Variable with a different name. Refer to the <i>NJ-series Motion Control Instructions Reference Manual</i> (Cat. No. W508) for details on structure members.	_sAXIS_ REF		page A-141

A-6-5 EtherCAT Master Function Module, Category Name: _EC

• Functional Classification: EtherCAT Communications Errors

Variable name	Meaning	Function	Data type	Range of values	Reference
_EC_ErrSta	Built-in EtherCAT Error	This system-defined variable provides the collective status of errors in the EtherCAT Master Function Module. Refer to information on the meanings of the error status bits at the end of this appendix for details.	WORD	16#0000 to 16#00F0	page A-141
_EC_PortErr	Communications Port Error	details. This system-defined variable provides the collective status of errors in the communications ports for the EtherCAT master. Refer to information on the meanings of the error status bits at the end of this appendix for details.	WORD	16#0000 to 16#00F0	page A-141
_EC_MstrErr	Master Error	This system-defined variable provides the collective status of EtherCAT master errors and slave errors detected by the EtherCAT master. Refer to information on the meanings of the error status bits at the end of this appendix for details.	WORD	16#0000 to 16#00F0	page A-141
_EC_SlavErr	Slave Error	This system-defined variable provides the collective status of all the error status for Ether-CAT slaves. Refer to information on the meanings of the error status bits at the end of this appendix for details.	WORD	16#0000 to 16#00F0	page A-142
_EC_SlavErrTbl	Slave Error Table	This system-defined variable gives the error status for each EtherCAT slave. The error status is given for each slave in the actual system configuration. This variable array indicates slaves in which there are errors. Status is provided for each EtherCAT slave node address (1 to 192). Refer to information on the meanings of the error status bits at the end of this appendix for details.	ARRAY [1192] OF WORD	16#0000 to 16#00F0	page A-142
_EC_MacAdrErr	MAC Address Error	TRUE if there is an illegal MAC address.	BOOL	TRUE or FALSE	page A-142
_EC_LanHwErr	Communications Controller Error	TRUE if there is a communications controller hardware error.	BOOL	TRUE or FALSE	page A-142
_EC_LinkOffErr	Link OFF Error	TRUE if the communications controller link is not established.	BOOL	TRUE or FALSE	page A-142
_EC_NetCfgErr	Network Configuration Information Error	TRUE if there is illegal network configuration information.	BOOL	TRUE or FALSE	page A-143
_EC_NetCfgCmpErr	Network Configuration Verification Error	TRUE if the network configuration information does not match the actual network configuration.	BOOL	TRUE or FALSE	page A-143
_EC_NetTopologyErr	Network Configuration Error	TRUE if there is a network configuration error (too many devices connected or ring connection).	BOOL	TRUE or FALSE	page A-143
_EC_PDCommErr	Process Data Communications Error	TRUE if there is an unexpected slave disconnection or connection or if a slave WDT error is detected during process data communications.	BOOL	TRUE or FALSE	page A-143
_EC_PDTimeoutErr	Process Data Reception Timeout	TRUE if a timeout occurs while receiving process data.	BOOL	TRUE or FALSE	page A-143

Variable name	Meaning	Function	Data type	Range of values	Reference
_EC_PDSendErr	Process Data Transmission Error	TRUE if there is a process data transmission error (cannot send within the process data communications cycle or transmission jitter is over the limit).	BOOL	TRUE or FALSE	page A-143
_EC_SlavAdrDupErr	Slave Node Address Duplicated Error	TRUE if the same node address is set for more than one slave.	BOOL	TRUE or FALSE	page A-144
_EC_SlavInitErr	Slave Initialization Error	TRUE if there is an error in an initialization command addressed to a slave.	BOOL	TRUE or FALSE	page A-144
_EC_SlavAppErr	Slave Application Error	TRUE if there is an error in the slave's application status register.	BOOL	TRUE or FALSE	page A-144
_EC_MsgErr	EtherCAT Message Error	TRUE when a message is sent to a slave that does not support messages or when there is an error in the format of the response to a message that was sent to a slave.	BOOL	TRUE or FALSE	page A-144
_EC_SlavEmergErr	Emergency Mes- sage Detected	TRUE if the master detects an emergency message that was sent by a slave.	BOOL	TRUE or FALSE	page A-144
_EC_CommErrTbl	Communications Error Slave Table	Slaves are given in the table in the order of slave node addresses. The corresponding slave element is TRUE if the master detected an error for the slave.	ARRAY [1192] OF BOOL	TRUE or FALSE	page A-145



Additional Information

Typical Relationships for the Built-in EtherCAT Error Flags

Variable Name	Meaning	Variable Name	Meaning	Variable Name	Meaning	Event level						
_EC_ErrSta	Built-in	_EC_PortErr	Communi-	_EC_MacAdrErr	MAC Address Error	Partial fault						
	EtherCAT Error		cations Port Error	_EC_LanHwErr	Communications Controller Error	level						
				_EC_LinkOffErr	Link OFF Error	Minor fault						
		_EC_MstrErr	Master Error	_EC_NetCfgErr	Network Configura- tion Information Error	level						
				_EC_NetCfgCmpErr	Network Configura- tion Verification Error							
				_EC_NetTopologyErr	Network Configura- tion Error							
				_EC_PDCommErr	Process Data Com- munications Error							
							_EC_PDTimeoutErr	Process Data Reception Timeout				
				_EC_PDSendErr	Process Data Trans- mission Error							
				_EC_SlavAdrDupErr	Slave Node Address Duplicated Error							
				_EC_SlavInitErr	Slave Initialization Error							
				_EC_SlavAppErr	Slave Application Error							
										_EC_CommErrTbl	Communications Error Slave Table	
				_EC_MsgErr	EtherCAT Message Error	Observation						
				_EC_SlavEmergErr	Emergency Message Detected							
		_EC_SlavErr	Slave Error	_EC_SlavErrTbl	Slave Error Table	Defined by the slave.						

Note The values of all system-defined variables that are related to errors in EtherCAT communications do not change until the cause of the error is removed and then the error in the Controller is reset with the trouble-shooting functions of the Sysmac Studio or the ResetECError instruction.

• Functional Classification: EtherCAT Communications Status

Variable name	Meaning	Function	Data type	Range of values	Reference
_EC_RegSlavTbl	Registered Slave Table	This table indicates the slaves that are registered in the network configuration information. Slaves are given in the table in the order of slave node addresses. The element for a slave is TRUE if the corresponding slave is registered.	ARRAY [1192] OF BOOL	TRUE or FALSE	page A-145
_EC_EntrySlavTbl	Network Connected Slave Table	This table indicates which slaves are connected to the network. Slaves are given in the table in the order of slave node addresses. The element for a slave is TRUE if the corresponding slave has entered the network.	ARRAY [1192] OF BOOL	TRUE or FALSE	page A-145
_EC_MBXSlavTbl	Message Communications Enabled Slave Table	This table indicates the slaves that can perform message communications. Slaves are given in the table in the order of slave node addresses. The element for a slave is TRUE if message communications are enabled for it (pre-operational, safe-operation, or operational state). Note Use this variable to confirm that message communications are possible for the relevant slave before you execute message communications with an EtherCAT slave.	ARRAY [1192] OF BOOL	TRUE or FALSE	page A-145
_EC_PDSlavTbl	Process Data Communicating Slave Table	This table indicates the slaves that are performing process data communications. Slaves are given in the table in the order of slave node addresses. The element for a slave is TRUE if process data of the corresponding slave is enabled (operational) for both slave inputs and outputs. Note Use this variable to confirm that the data for the relevant slave is valid before controlling an EtherCAT slave.	ARRAY [1192] OF BOOL	TRUE or FALSE	page A-146
_EC_DisconnSlavTbl	Disconnected Slave Table	Slaves are given in the table in the order of slave node addresses. The element for a slave is TRUE if the corresponding slave was disconnected.	ARRAY [1192] OF BOOL	TRUE or FALSE	page A-146
_EC_DisableSlavTbl	Disabled Slave Table	Slaves are given in the table in the order of slave node addresses. The element for a slave is TRUE if the corresponding slave is disabled.	ARRAY [1192] OF BOOL	TRUE or FALSE	page A-146
_EC_PDActive	Process Data Communications Status	TRUE when process data communications are performed with all slaves.	BOOL	TRUE or FALSE	page A-146
_EC_PktMonStop	Packet Monitoring Stopped	TRUE when packet monitoring is stopped.	BOOL	TRUE or FALSE	page A-147
_EC_LinkStatus	Link Status	TRUE if the communications controller link status is Link ON.	BOOL	TRUE or FALSE	page A-147
_EC_PktSaving	Saving Packet Data File	Shows whether a packet data file is being saved. TRUE: Packet data file being saved. FALSE: Packet data file not being saved.	BOOL	TRUE or FALSE	page A-147
_EC_InDataInvalid	Input Data Invalid	TRUE when process data communications are not normal and the input data is not valid.	BOOL	TRUE or FALSE	page A-147

Note All system-defined variables that are related to the status of EtherCAT communications give the current status.

A-6-6 EtherNet/IP Function Module, Category Name: _EIP

• Functional Classification: EtherNet/IP Communications Errors

Variable name	Meaning	Function	Data type	Range of values	Reference
_EIP_ErrSta	Built-in EtherNet/IP Error	This is the error status variable for the built-in EtherNet/IP port. It represents the following error flags. • _EIP_PortErr (Communications Port Error) • _EIP_CipErr (CIP Communications Error) • _EIP_TcpAppErr (TCP Application Communications Error) Note Refer to information on the meanings of the error status bits at the end of this appendix for details.	WORD	16#0000 to 16#00F0	page A-148
_EIP_PortErr	Communications Port Error	This is the error status variable for the communications port. It represents the following error flags. • _EIP_MacAdrErr (MAC Address Error) • _EIP_LanHwErr (Communications Controller Error) • _EIP_EtnCfgErr (Basic Ethernet Setting Error) • _EIP_IPAdrCfgErr (TCP/IP Basic Setting Error) • _EIP_IPAdrDupErr (IP Address Duplication Error) • _EIP_BootpErr (BOOTP Server Error) • _EIP_IPRTblErr (TCP/IP Advanced Setting Error) Note If a Link OFF or Built-in EtherNet/IP Processing Error occurs, it is recorded in the event log and then the corresponding bit turns ON. Refer to information on the meanings of the error status bits at the end of this appendix for details.	WORD	16#0000 to 16#00F0	page A-148

Variable name	Meaning	Function	Data type	Range of values	Reference
_EIP_CipErr	CIP Communications Error	This is the error status variable for CIP communications. It represents the following error flags. • _EIP_IdentityErr (Identity Error) • _EIP_TDLinkCfgErr (Tag Data Link Setting Error) • _EIP_TDLinkOpnErr (Tag Data Link Connection Failed) • _EIP_TDLinkErr (Tag Data Link Communications Error) • _EIP_TagAdrErr (Tag Name Resolution Error) • _EIP_MultiSwONErr (Multiple Switches ON Error) Note If a Tag Resolution Error occurs, it is recorded in the event log and this variable changes to TRUE. Refer to information on the meanings of the error status bits at the end of this appendix for details.	WORD	16#0000 to 16#00F0	page A-149
_EIP_TcpAppErr	TCP Application Com- munications Error	This is the error status variable for TCP application communications. It represents the following error flags. • _EIP_TopAppCfgErr (TCP/IP Setting Error) • _EIP_NTPSrvErr (NTP Server Connection Error) • _EIP_DNSSrvErr (DNS Server Connection Error) Note Refer to information on the meanings of the error status bits at the end of this appendix for details.	WORD	16#0000 to 16#00F0	page A-149
_EIP_MacAdrErr	MAC Address Error	Indicates that an error occurred when the MAC address was read at startup. TRUE: Error FALSE: Normal	BOOL	TRUE or FALSE	page A-149
_EIP_LanHwErr	Communications Controller Error	TRUE: The communications controller failed. FALSE: Normal	BOOL	TRUE or FALSE	page A-149
_EIP_EtnCfgErr	Basic Ethernet Setting Error	TRUE: The Ethernet communications speed setting (Speed/Duplex) is incorrect. Or, a read operation failed. FALSE: Normal	BOOL	TRUE or FALSE	page A-150
_EIP_IPAdrCfgErr	TCP/IP Basic Setting Error	TRUE: • There is an illegal IP address setting. • A read operation failed. • The IP address obtained from the BOOTP server is inconsistent. • The DNS settings are not correct. FALSE: Normal	BOOL	TRUE or FALSE	page A-150
_EIP_IPAdrDupErr	IP Address Duplication Error	TRUE: The same IP address is assigned to more than one node. FALSE: Other than the above.	BOOL	TRUE or FALSE	page A-150
_EIP_BootpErr	BOOTP Server Error	TRUE: There was a failure to connect to the BOOTP server (timeout). FALSE: The BOOTP is not enabled, or BOOTP is enabled and an IP address was normally obtained from the BOOTP server.	BOOL	TRUE or FALSE	page A-150

Variable name	Meaning	Function	Data type	Range of values	Reference	
_EIP_IPRTblErr	TCP/IP Advanced Setting Error	TRUE: There is an error in one of the following settings. Or, a read operation failed. • IP router table settings • Hosts settings FALSE: Normal	BOOL	TRUE or FALSE	page A-150	
_EIP_IdentityErr	Identity Error	TRUE: The identity information (which you cannot overwrite) is not correct. Or, a read operation failed. FALSE: Normal	BOOL	TRUE or FALSE	page A-151	
_EIP_TDLinkCfgErr	Tag Data Link Setting Error	TRUE: The tag data link settings are incorrect. Or, a read operation failed. FALSE: Normal	BOOL	TRUE or FALSE	page A-151	
_EIP_TDLinkOpnErr	Tag Data Link Connection Failed	TRUE: The connection was not established because the remote node information in the tag data link parameters was different from the actual node information.	BOOL	TRUE or FALSE	page A-151	
		Note This variable does not change to TRUE if there is no remote node when the power is turned ON. FALSE: Other than the above.				
_EIP_TDLinkErr	Tag Data Link Communications Error	TRUE: A timeout occurred in a tag data link connection. FALSE: Other than the above.	BOOL	TRUE or FALSE	page A-151	
_EIP_TagAdrErr	Tag Name Resolution Error	TRUE: Tag resolution failed (i.e., the address could not be identified from the tag name). The following causes are possible.	BOOL	TRUE or FALSE	page A-151	
		 The size of the network-published variable does not agree with the tag setting. The I/O direction that is set in the tag data link settings does not agree with the I/O direction of the variable in the CPU Unit. There is no network-published variable in the CPU Unit that corresponds to the tag 				
		setting. FALSE: Other than the above.				
_EIP_MultiSwONErr	Multiple Switches ON Error	TRUE: More than one data link start/stop switch changed to TRUE at the same time. FALSE: Other than the above.	BOOL	TRUE or FALSE	page A-152	
_EIP_TcpAppCfgErr	TCP/IP Setting Error	TRUE: At least one of the set values for a TCP/IP application (FTP, NTP, SNMP) is incorrect. Or, a read operation failed. FALSE: Normal	BOOL	TRUE or FALSE	page A-152	
_EIP_NTPSrvErr	NTP Server Connection Error	TRUE: The NTP client failed to connect to the server (timeout). FALSE: NTP is not set or the connection was successful.	BOOL	TRUE or FALSE	page A-152	
_EIP_DNSSrvErr	DNS Server Con- nection Error	TRUE: The DNS client failed to connect to the server (timeout). FALSE: DNS is not enabled. Or, DNS is	BOOL	TRUE or FALSE	page A-152	
		enabled and the connection was successful.				



Additional Information

Typical Relationships for the Built-in EtherNet/IP Error Flags

Variable name	Meaning	Variable name	Meaning	Variable name	Meaning	Event level	
_EIP_ErrSta	Built-in	_EIP_PortErr	_	_EIP_MacAdrErr	MAC Address Error	Partial	
	EtherNet/IP Error		tions Port Error	_EIP_LanHwErr	Communications Controller Error	fault level	
				_EIP_EtnCfgErr	Basic Ethernet Set- ting Error		
				_EIP_IPAdrCfgErr	TCP/IP Basic Set- ting Error		
				_EIP_IPAdrDupErr	IP Address Duplication Error		
				_EIP_BootpErr	BOOTP Server Error		
				_EIP_IPRTblErr	TCP/IP Advanced Setting Error	Minor fault level	
		_EIP_CipErr	CIP Commu-	_EIP_IdentityErr	Identity Error	Minorfault	
		nication Error			_EIP_TDLinkCfgErr	Tag Data Link Set- ting Error	level
				_EIP_TDLinkOpnErr	Tag Data Link Con- nection Failed		
				_EIP_TDLinkErr	Tag Data Link Com- munications Error		
				_EIP_TagAdrErr	Tag Name Resolution Error		
				_EIP_MultiSwONErr	Multiple Switches ON Error	Observa- tion	
		_EIP_TcpAp	TCP Applica-	_EIP_TcpAppCfgErr	TCP/IP Setting Error	Minor fault	
	pErr		tion Commu- nications Error	_EIP_NTPSrvErr	NTP Server Connection Error	level	
			Liioi	_EIP_DNSSrvErr	DNS Server Con- nection Error		



Additional Information

Relationships between the Target Node Information Tables

Registered Tar- get Node Infor- mation	Registered Target Node Information Valid only when _EIP_RegTargetSta is TRUE	Normal Target Node Information Valid only when _EIP_EstbTargetSta is TRUE	Registered Target Node Information Valid only when _EIP_RegTargetStais TRUE	Description
(_EIP_RegTarget Sta)	Normal Target Node Information (_EIP_EstbTargetSta)	Target PLC Error Information (_EIP_EIP_TargetPLC Err)	Target Node Error Information (_EIP_TargetNodeErr)	
TRUE	TRUE	FALSE	FALSE	A connection with the target node was established nor- mally and there is no error in the tar- get PLC.
		TRUE	TRUE	A connection with the target node was established but there is an error in the target PLC.
	FALSE	Disabled	TRUE	A connection with the target node was not established nor- mally.
FALSE	Disabled	Disabled	Disabled	The information is not valid because the target node is not registered.

• Functional Classification: EtherNet/IP Communications Status

Variable name	Meaning	Function	Data type	Range of values	Reference
_EIP_EtnOnlineSta	Online	TRUE: The built-in EtherNet/IP port's communications can be used. (The link is ON and IP address is defined. Also, there are no errors.)	BOOL	TRUE or FALSE	page A-152
		FALSE: The built-in EtherNet/IP port's communications is disabled due to an error in initial processing or restart processing.			
_EIP_TDLinkRunSta	Tag Data Link Communications Status	TRUE: At least one connection is in normal operation. FALSE: Other than the above.	BOOL	TRUE or FALSE	page A-153
_EIP_TDLinkAllRunSta	All Tag Data Link Communications Status	k TRUE: Tag data links are communicating in B		TRUE or FALSE	page A-153
_EIP_RegTargetSta [255]	Registered Target Node Information	This variable gives a list of nodes for which built-in EtherNet/IP connections are registered. This variable is valid only when the built-in EtherNet/IP port is the originator.	ARRAY [0255] OF BOOL	TRUE or FALSE	page A-153
		Array[x] is TRUE: The connection to the node with a target node ID of x is registered.			
		Array[x] is FALSE: The connection to the node with a target node ID of x is not registered.			
_EIP_EstbTargetSta [255]	Normal Target Node Information	This variable gives a list of nodes that have normally established built-in EtherNet/IP connections.	ARRAY [0255] OF BOOL	TRUE or FALSE	page A-153
		Array[x] is TRUE: The connection to the node with a target node ID of x was established normally.			
		Array[x] is FALSE: The connection to the node with a target node ID of x was not established, or an error occurred.			
_EIP_TargetPLCModeSta [255]	Target PLC Operating Mode	This variable shows the operating status of the target node Controllers that are connected with the built-in EtherNet/IP port as the originator.	ARRAY [0255] OF BOOL	TRUE or FALSE	page A-153
		The array elements are valid only when the corresponding Normal Target Node Information is TRUE. If the corresponding Normal Target Node Information is FALSE, the Target Node Controller Operating Information indicates the previous operating status.			
		Array[x] is TRUE: This is the operating state of the target Controller with a node address of x.			
		Array[x] is FALSE: Other than the above.			

Variable name	Variable name Meaning Function		Data type	Range of values	Reference
_EIP_TargetPLCErr [255]	Target PLC Error Information	This variable shows the error status (logical OR of fatal and non-fatal errors) of the target node Controllers that are connected with the built-in EtherNet/IP ports as the originator. The array elements are valid only when the corresponding Normal Target Node Information is TRUE. The immediately preceding value is retained if this variable is FALSE.	ARRAY [0255] OF BOOL	TRUE or FALSE	page A-154
		Array[x] is TRUE: A fatal or non-fatal error occurred in the target Controller with a target node ID of x. Array[x] is FALSE: Other than the above.			
_EIP_TargetNodeErr [255]	Target Node Error Information	This variable indicates that the connection for the Registered Target Node Information was not established or that an error occurred in the target Controller. The array elements are valid only when the Registered Target Node Information is TRUE.	ARRAY [0255] OF BOOL	TRUE or FALSE	page A-154
		Array[x] is TRUE: A connection was not normally established with the target node for a target node ID of x (the Registered Target Node Information is TRUE and the Normal Target Node Information is FALSE), or a connection was established with the target node but an error occurred in the target Controller.			
		Array[x] is FALSE: The target node is not registered for a target node ID of x (the Registered Target Node Information is FALSE), or a connection was normally established with the target node (the Registered Target Node Information is TRUE and the Normal Target Node Information is TRUE). An error occurred in the target Controller (the Target PLC Error Information is TRUE.).			
_EIP_NTPResult	NTP Operation Information	Use the GetNTPStatus instruction to read the NTP operation information from the user program. Direct access is not possible.	_sNTP_ RESULT		page A-154
.ExecTime	NTP Last Operation Time	Gives the last time that NTP processing ended normally. The time that was obtained from the NTP server is stored when the time is obtained normally. The time is not stored if it is not obtained from the NTP server normally.	DATE_ AND_ TIME	Depends on data type.	page A-154
		Note Do not use this variable in the user program. There may be a delay in updating it. Use this variable only to access status through communications from an external device.			
.ExecNormal	NTP Operation Result	TRUE: Indicates an NTP normal end. FALSE: Indicates that NTP operation ended in an error or has not been executed even once. Note Do not use this variable in the user program. There may be a delay in	BOOL	TRUE or FALSE	page A-155
		updating it. Use this variable only to access status through communications from an external device.			

Functional Classification: EtherNet/IP Communications Switches

Variable name	Meaning	Function	Data type	Range of values	Reference
_EIP_TDLinkStartCmd	Tag Data Link Communications Start Switch	This is the start switch for data links.	BOOL	TRUE or FALSE	page A-155
_EIP_TDLinkStopCmd	Tag Data Link Communications Stop Switch	This is the stop switch for data links.	BOOL	TRUE or FALSE	page A-155

A-6-7 **Meanings of Error Status Bits**


The meanings of the individual bits in the following error status are the same.

- ErrSta (Controller Error Status)
- PLC ErrSta (PLC Function Module Error Status)
- _CJB_ErrSta (I/O Bus Error Status)
- _CJB_MstrErrSta (I/O Bus Master Error Status)
- _CJB_UnitErrSta (I/O Bus Unit Error Status)
- MC ErrSta (Motion Control Function Module Error Status)
- _MC_ComErrSta (MC Common Error Status)
- _MC_AX_ErrSta (Axis Error Status)
- _MC_GRP_ErrSta (Axes Group Error Status)
- _EC_ErrSta (Built-in EtherCAT Error)
- _EC_PortErr (Communications Port Error)
- _EC_MstrErr (Master Error)
- _EC_SlavErr (Slave Error)
- EC SlavErrTbl (Slave Error Table)
- _EIP_ErrSta (Built-in EtherNet/IP Error)
- _*EIP_PortErr* (Communications Port Error)
- EIP CipErr (CIP Communications Error)
- _EIP_TcpAppErr (TCP Application Communications Error)

The meaning of the bits are shown in the following table.

However, do not use the following variables in the user program: ErrSta (Controller Error Status), _CJB_ErrSta (I/O Bus Error Status), _CJB_MstrErrSta (I/O Bus Master Error Status), and _CJB_UnitErrSta (I/O Bus Master Unit Status). There may be a delay in updating them and concurrency problems in relation to the error status of the function module.

Use these variables only to access status through communications from an external device.

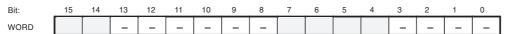

Bit	Meaning
15	Master-detected error: This bit indicates whether the master detected a Controller error in the Unit/slave for the error status of the Controller error.
	TRUE: The master detected a Controller error.
	FALSE: The master has not detected a Controller error. (Valid for _CJB_U_ErrSta and _EC_SlvErrTbl.)
14	Collective slave error status: This bit indicates if a Controller error was detected for levels (e.g., a Unit, slave, axis, or axes group) that are lower than the event source (i.e., for a function module).
	TRUE: A Controller error has occurred at a lower level.
	FALSE: A Controller error has not occurred at a lower level. (Valid for _CJB_ErrSta, _MC_ErrSta, and _EC_ErrSta.)
8 to 13	Not used.

Bit	Meaning
7	This bit indicates whether a major fault level Controller error has occurred.
	TRUE: A major fault level Controller error has occurred.
	FALSE: A major fault level Controller error has not occurred.
6	This bit indicates whether a partial fault level Controller error has occurred.
	TRUE: A partial fault level Controller error has occurred.
	FALSE: A partial fault level Controller error has not occurred.
5	This bit indicates whether a minor fault level Controller error has occurred.
	TRUE: A minor fault level Controller error has occurred.
	FALSE: A minor fault level Controller error has not occurred.
4	This bit indicates whether an observation level Controller error has occurred.
	TRUE: An observation level Controller error has occurred.
	FALSE: An observation level Controller error has not occurred.
0 to 3	Not used.

A-7 Specifications for Individual Systemdefined Variables

The specifications for each system-defined variable are given as described below.

Variable name	This is the system-defined variable name. The prefix gives the category name.			Members	The member names are given for structure variables.
Meaning	This is the meaning of the variable.			Global/local	Global: Global variable, Local: Local variable
Function	The function of the	e variable is describ	oed.		
Data type	The data type of t	The data type of the variable is given.			The range of values that the variable can take is given.
R/W access	R: Read only, RW: Read/write	Retained	The Retain attribute of the variable is given.	Network Publish	The Network Publish attribute of the variable is given.
Usage in user program	Whether you	Related instruc-	The instructions t	hat are related to th	e variable are given.
	can use the variable directly in the user program is specified.	tions	If you cannot use the variable directly in the user program, the instruction that access the variable are given.		

A-7-1 System-defined Variables for the Overall NJ-series Controller (No Category)

Functional Classification: Clock

Variable name	_CurrentTime	CurrentTime						
Meaning	System Time			Global/local	Global			
Function	This variable cont	This variable contains the CPU Unit's internal clock data.						
Data type	DATE_AND_TIME			Range of values	DT#1970-01-01-00:00:00 to DT#2106-02-06-23:59:59			
R/W access	R	Retained	Not retained.	Network Publish	Published.			
Usage in user program	Possible.	Related instructions	Clock instructions					

Functional Classification: Tasks

Variable name	_ <i>TaskName</i> _Activ	_ <i>TaskName</i> _Active						
Meaning	Task Active Flag			Global/local	Global			
Function	TRUE during task	execution.						
	FALSE when task	FALSE when task execution is not in progress.						
	Note You cannot use this system-defined variable in the user program. It is used only to access task status for data tracing from the Sysmac Studio.							
Data type	BOOL			Range of values	TRUE or FALSE			
R/W access	R	Retained	Not retained.	Network Publish	Not published.			
Usage in user program	Not possible.	Related instruc-	ActEventTask					
		tions	You can access this variable from the user program only with the follow instruction.					
			Task_IsActive					

Variable name	_TaskName_LastExecTime					
Meaning	Last Task Executi	on Time		Global/local	Global	
Function	Contains the task	execution time the	last time the task w	as executed (unit: 0).1 μs).	
		use this system-de from the Sysmac		ne user program. It	is used only to access task status for	
Data type	TIME			Range of values	Depends on data type.	
R/W access	R	Retained	Not retained.	Network Publish	Not published.	
Usage in user program	Not possible.	Not possible. Related instructions You can access this variable from the user program only with the instruction. • GetMyTaskStatus				
Variable name	_ <i>TaskName</i> _Max	ExecTime				
Meaning	Maximum Task Ex			Global/local	Global	
Function			ask execution time		Global	
Tunction	Note You cannot		efined variable in th	,	is used only to access task status for	
Data type	TIME			Range of values	Depends on data type.	
R/W access	R	Retained	Not retained.	Network Publish	Not published.	
Usage in user program	Not supported.	Related instructions	You can access the instruction.	nis variable from the	user program only with the following	
			GetMyTaskStati	us		
	•		•			
Variable name	_ <i>TaskName</i> _MinE	xecTime			_	
Meaning	Minimum Task Ex	ecution Time		Global/local	Global	
Function	Contains the mini	mum value of the ta	ask execution time ((unit: 0.1 μs).		
		use this system-de		e user program. It	is used only to access task status for	
Data type	TIME			Range of values	Depends on data type.	
R/W access	R	Retained	Not retained.	Network Publish	Not published.	
Usage in user program	Not possible.	Related instructions	You can access the instruction.	nis variable from the	user program only with the following	
			GetMyTaskState	us		
Variable name	_TaskName_Exec	Count				
Meaning	Task Execution Co	ount		Global/local	Global	
Function	Contains the num	ber of executions o	f the task.			
	If 4294967295 is	exceeded, the value	e returns to 0 and c	ounting is continued	d.	
	Note You cannot use these system-defined variables in the user program. It is used only to access task status fo data tracing from the Sysmac Studio.					
Data type	UDINT			Range of values	Depends on data type.	
R/W access	R	Retained	Not retained.	Network Publish	Not published.	
Usage in user program	Not possible. Related instructions Related instruction. You can access this variable from the user program only with the following instruction. • GetMyTaskStatus					
	1					

Variable name	_TaskName_Exceeded					
Meaning	Task Exceeded Flag			Global/local	Global	
Function	TRUE if the task period was exceeded. FALSE if task execution was completed within the task period. Note You cannot use this system-defined variable in the user program. It is used only to access task status for data tracing from the Sysmac Studio.					
Data type	BOOL			Range of values	TRUE or FALSE	
R/W access	R	Retained	Not retained.	Network Publish	Not published.	
Usage in user program	Not possible.	Related instructions	You can access this variable from the user program only with the following instruction. • GetMyTaskStatus			

Variable name	_TaskName_ExceedCount					
Meaning	Task Period Excee	eded Count		Global/local	Global	
Function	Contains the num	ber of times that the	e period was excee	ded.		
	If the present value exceeds the maximum value of the data type, the present value returns to 0 and the count is continued.					
	If 4294967295 is exceeded, the value returns to 0 and counting is continued.					
	Note You cannot use this system-defined variable in the user program. It is used only to access task status for data tracing from the Sysmac Studio.					
Data type	UDINT			Range of values	Depends on data type.	
R/W access	R	Retained	Not retained.	Network Publish	Not published.	
Usage in user program	Not possible.	Related instructions	You can access this variable from the user program only with the following instruction. • GetMyTaskStatus			

• Functional Classification: Errors

Variable name	_ErrSta	_ErrSta					
Meaning	Controller Error S	tatus		Global/local	Global		
Function	TRUE if there is a	Controller error.					
	FALSE if there is a	no Controller error.					
	Note Do not use this variable in the user program. There may be a delay in updating it and concurrency problems in relation to the status of the function module. Use this variable only to access status through communications from an external device. Refer to <i>A-6-7 Meanings of Error Status Bits</i> for the meanings of the error status bits.						
Data type	WORD			Range of values	16#0000 to 16#C0F0		
R/W access	R	Retained	Not retained.	Network Publish	Published.		
Usage in user program	Not possible.	Related instructions	Not retained. Network Publish Published. ResetPLCError ResetCJBError ResetMCError MC_Reset MC_GroupReset You can access this variable from the user program only with the following instructions. GetPLCError GetCJBError GetECError GetMCError GetBIPError GetEIPError				

Variable name	_AlarmFlag						
Meaning	User-defined Error Status			Global/local	Global		
Function	The bit correspond	ed error.					
	Bits 00 to 07 corre	Bits 00 to 07 correspond to user fault levels 1 to 8.					
	This variable contains 0000 hex when there is no user-defined error.						
Data type	WORD			Range of values	16#0000 to 16#00FF		
R/W access	R	Retained	Not retained.	Network Publish	Published.		
Usage in user program	Possible.	Related instructions	SetAlarm ResetAlarm GetAlarm				

• Functional Classification: SD Memory Card

Variable name	_Card1Ready						
Meaning	SD Memory Card Ready Flag			Global/local	Global		
Function	TRUE when the S	D Memory Card is	recognized.				
	FALSE when an S	D Memory Card is	not recognized.				
	TRUE: The Card	an be used.					
	FALSE: The Card	cannot be used.					
Data type	BOOL			Range of values	TRUE or FALSE		
R/W access	R	Retained	Retained.	Network Publish	Published.		
Usage in user program	Possible.	Related instruc- tions					
Variable name	_Card1Protect	_Card1Protect					
Meaning	SD Memory Card	Write Protected Fla	ag	Global/local	Global		
Function	TRUE when the S	D Memory Card is	write-protected with	the LOCK switch.			
	TRUE: Write protected.						
	FALSE: Not write protected.						
Data type	BOOL			Range of values	TRUE or FALSE		
R/W access	R	Retained	Retained.	Network Publish	Published.		
Usage in user program	Possible.	Related instructions					
	-	-					
Variable name	_Card1Err						
Meaning	SD Memory Card	Error Flag		Global/local	Global		
Function	TRUE when an ur	usable SD Memor	y Card is inserted o	r a format error occ	urs.		
	TRUE: There is ar	n error					
	FALSE: There is no error						
Data type	BOOL			Range of values	TRUE or FALSE		
R/W access	R	Retained	Retained. Network Publish Published.				
Usage in user program	Possible.	Related instruc-					

Variable name	_Card1Access						
Meaning	SD Memory Card Access Flag			Global/local	Global		
Function	TRUE during SD N	Memory Card acces	SS.				
	TRUE: Card is bei	TRUE: Card is being accessed.					
	FALSE: Card is no	FALSE: Card is not being accessed.					
	The system updates the flag every 100 ms. Because of this, access to the SD Memory Card is shown by this flag with a delay of up to 100 ms. We therefore do not recommend the use of this variable in the user program.						
Data type	BOOL			Range of values	TRUE or FALSE		
R/W access	R	Retained	Retained.	Network Publish	Published.		
Usage in user program	Possible.	Related instructions					

Variable name	_Card1Deteriorated						
Meaning	SD Memory Card Life Warning Flag			Global/local	Global		
Function	TRUE when the lit	TRUE when the life of the SD Memory Card is exceeded.					
	If this variable cha	If this variable changed to TRUE, replace the SD Memory Card.					
	Read/write operation may fail if the SD Memory Card is not replaced.						
	TRUE: The life of the Card has been exceeded.						
	FALSE: The Card can still be used.						
Data type	BOOL			Range of values	TRUE or FALSE		
R/W access	R	Retained	Retained.	Network Publish	Published.		
Usage in user program	Possible.	Related instruc- tions					

Variable name	_Card1PowerFail					
Meaning	SD Memory Card Power Interruption Flag			Global/local	Global	
Function	TRUE when the power supply to the CPU Unit was interrupted during access to the SD Memory Card.					
	TRUE: Power was	TRUE: Power was interrupted during SD Memory Card access.				
	FALSE: Normal.					
Data type	BOOL			Range of values	TRUE or FALSE	
R/W access	RW	Retained	Retained.	Network Publish	Published.	
Usage in user program	Possible.	Related instructions				

• Functional Classification: Power Supply

Variable name	_PowerOnHour	_PowerOnHour					
Meaning	Total Power ON Time			Global/local	Global		
Function	Contains the total	Contains the total time that the power has been ON.					
	Contains the total time that the CPU Unit has been ON in 1-hour increments.						
	To reset this value, overwrite the current value with 0.						
	The value is not updated after it reaches 4294967295.						
	This variable is not initialized at startup.						
Data type	UDINT			Range of values	0 to 4294967295		
R/W access	RW	Retained	Retained.	Network Publish	Published.		
Usage in user program	Possible.	Related instruc-					
		tions					

Variable name	_PowerOnCount					
Meaning	Power Interruption	Count		Global/local	Global	
Function	Contains the num	ber of times that th	e power supply has	been interrupted.		
	The value is incre turned ON.	mented by 1 each t	time the power supp	oly is interrupted af	ter the first time that the power was	
	To reset this value	, overwrite the curr	rent value with 0.			
	The value is not u	pdated after it reac	hes 4294967295.			
	This variable is no	t initialized at start	up.			
Data type	UDINT			Range of values	0 to 4294967295	
R/W access	R/W	Retained	Retained.	Network Publish	Published.	
Usage in user program	Possible.	Related instruc- tions				
Variable name	_RetainFail					
Meaning	Retention Failure	Flag		Global/local	Global	
Function	TRUE at the following times (failure of retention during power interruptions).					
	When an error is detected in the battery-backup memory check at startup.					
	FALSE at the following times (no failure of retention during power interruptions).					
	When no error is detected in the battery-backup memory check at startup.					
	When the user program is downloaded.					
	When the Clear All Memory operation is performed.					
	Note When the encoder home offset data is not retained, the status is given in the error status of the axis var able, and not in this flag.					
Data type	BOOL			Range of values	TRUE or FALSE	
R/W access	R	Retained	Not retained.	Network Publish	Not published.	
Usage in user program	Possible.	Related instructions				
• Funct	ional Classi	fication: Pro	gramming			
Variable name	P_On				T	
Meaning	Always TRUE Flag			Global/local	Global	
Function	This flag is always TRUE.					

variable name	F_0II				
Meaning	Always TRUE Flag			Global/local	Global
Function	This flag is always	TRUE.			
Data type	BOOL			Range of values	TRUE
R/W access	R	Retained	Not retained.	Network Publish	Not published.
Usage in user program	Possible.	Related instructions			
Variable name	P_Off				
Meaning	Always FALSE Fla	ag		Global/local	Global
Function	This flag is always	FALSE.			
Data type	BOOL			Range of values	FALSE
R/W access	R	Retained	Not retained.	Network Publish	Not published.
Usage in user program	Possible.	Related instructions			
Variable name	P_CY				
Meaning	Carry Flag			Global/local	Local
Function	This flag is update	ed by some instruct	ions.		
Data type	BOOL			Range of values	TRUE or FALSE
R/W access	R	Retained	Not retained.	Network Publish	Not published.
Usage in user program	Possible.	Related instructions			

Variable name	P_First_RunMode)			
Meaning	First RUN Period Flag		Global/local	Local	
Function	TRUE for one task period when PROGRAM mode change			ges to RUN mode.	_
	Use this flag to pe	erform initial proces	sing when the CPU	Unit begins operati	ion.
Data type	BOOL			Range of values	TRUE or FALSE
R/W access	R	Retained	Not retained.	Network Publish	Not published.
Usage in user program	Possible.	Related instructions			

Variable name	P_PRGER				
Meaning	Instruction Error Flag		Global/local	Local	
Function	This flag changes	to and remains TR	UE when an instruc	ction error occurs.	
	It remains TRUE ι	until changed to FA	LSE from the user p	orogram.	
Data type	BOOL			Range of values	TRUE or FALSE
R/W access	RW	Retained	Not retained.	Network Publish	Not published.
Usage in user program	Possible.	Related instructions			

• Functional Classification: Communications

Variable name	_Port_numUsingF	ort				
Meaning	Number of Used Ports G		Global/local	Global		
Function	Gives the number	of internal logical p	orts that are currer	ntly used.		
	You can use this v	ariable when you d	ebug the user prog	ram.		
Data type	USINT			Range of values	0 to 32	
R/W access	R	Retained	Not retained.	Network Publish	Not published.	
Usage in user program	Possible.	Related instructions	Communications Rcv, and SendCm	,	MCR, SerialSend, SerialRcv, Send,	

Variable name	_Port_isAvailable				
Meaning	Network Communications Instruction Enabled Flag			Global/local	Global
Function	Indicates whether there is an available internal logical port.				
	TRUE when an in	ternal logical port is	available. Otherwi	se FALSE.	
Data type	BOOL			Range of values	TRUE or FALSE
R/W access	R	Retained	Not retained.	Network Publish	Not published.
Usage in user program	Possible.	Related instructions	Communications Rcv, and SendCm	`	MCR, SerialSend, SerialRcv, Send,

Variable name	_FINSTCPConnS	ta			
Meaning	FINS/TCP Connection Status			Global/local	Global
Function	Gives the FINS/To	CP connection state	us.		
Data type	WORD			Range of values	16#0000 to 16#FFFF
R/W access	R	Retained	Not retained.	Network Publish	Not published.
Usage in user program	Possible.	Related instructions			

A-7-2 PLC Function Module, Category Name: _PLC

• Functional Classification: Debugging

Variable name	_PLC_TraceSta[0	3]		Members	.lsStart
Meaning	Trace Busy Flag			Global/local	Global
Function	TRUE when a trac	e starts.			
		use these system-or from the Sysmac S		the user program.	It is used only to monitor the status of
Data type	Structure: _sTRAG	CE_STA, Members:	BOOL	Range of values	TRUE or FALSE
R/W access	R	Retained	Retained.	Network Publish	Not published.
Usage in user program	Not possible.	Related instruc-	 TraceTrig 		
		tions	TraceSamp		
			You can access the instruction.	nis variable from the	user program only with the following
			 GetTraceStatus 		
Variable name	_PLC_TraceSta[0	3]		Members	.lsComplete
Meaning	Trace Completed	Flag		Global/local	Global
Function	TRUE when a trac	ce is completed.			
		use this system-de from the Sysmac S		ne user program. It	is used only to monitor the status of
Data type	Structure: _sTRA	CE_STA, Members:	BOOL	Range of values	TRUE or FALSE
R/W access	R	Retained	Retained.	Network Publish	Not published.
Usage in user program	Not possible.	Related instruc-	TraceTrig	•	
		tions	TraceSamp		
			You can access tr instruction.	nis variable from the	user program only with the following
			GetTraceStatus		
Variable name	_PLC_TraceSta[0	3]		Members	.lsTrigger
Meaning	Trace Trigger Mon	itor Flag		Global/local	Global
Function	TRUE when the tr	igger condition is m	net.		
	FALSE when the I	next trace starts.			
		use these system-		the user program.	It is used only to monitor the status of
Data type	Structure: _sTRA	CE_STA, Members:	BOOL	Range of values	TRUE or FALSE
R/W access	R	Retained	Retained.	Network Publish	Not published.
Usage in user program	Not possible.	Related instructions	TraceTrig TraceSamp		
			·	nis variable from the	user program only with the following
			GetTraceStatus		
	l				

Variable name	_PLC_TraceSta[0.	3]		Members	.ParamErr
Meaning	Trace Parameter E	ace Parameter Error Flag			Global
Function	FALSE when the s	settings are normal	defined variables in	ŭ	It is used only to monitor the status of
Data type	Structure: _sTRA0	CE_STA, Members:	BOOL	Range of values	TRUE or FALSE
R/W access	R	Retained	Retained.	Network Publish	Not published.
Usage in user program	Not possible.	Related instructions	You can access the instruction. • GetTraceStatus	is variable from the	user program only with the following

• Functional Classification: Errors

Variable name	_PLC_ErrSta				_	
Meaning	PLC Function Mod	dule Error Status		Global/local	Global	
Function	TRUE when there	is a Controller erro	r that involves the F	PLC Function Module.		
	FALSE when there	FALSE when there is no Controller error that involves the PLC Function Module.				
	Refer to A-6-7 Me	anings of Error Sta	<i>tus Bits</i> for the mea	nings of the error st	tatus bits.	
Data type	WORD			Range of values	16#0000 to 16#00F0	
R/W access	R	Retained	Not retained.	Network Publish	Published.	
Usage in user program	Possible.	Related instruc-	GetPLCError	•		
		tions	You can use the fo	ollowing instruction	to clear this variable.	
			ResetPLCError			

PLC Function Module, Category Name: _CJB A-7-3

• Functional Classification: I/O Bus Status

Variable name	_CJB_MaxRackN	0				
Meaning	Largest Rack Number		Global/local	Global		
Function	Contains the large	Contains the largest rack number of the Expansion Racks that are detected by the Controller.				
Data type	UINT			Range of values	0 to 3	
					0: Only CPU Rack.	
R/W access	R	Retained	Not retained.	Network Publish	Published.	
Usage in user program	Possible.	Related instructions				

Variable name	_CJB_MaxSlotNo				
Meaning	Largest Slot Number G		Global/local	Global	
Function	Contains one high the Controller.	er than the largest	slot number with a	CJ-series Unit on ea	ach of the Racks that are detected by
Data type	ARRAY [03] OF	UINT		Range of values	0 to 10
					0: No CJ-series Unit mounted.
R/W access	R	Retained	Not retained.	Network Publish	Published.
Usage in user program	Possible.	Related instructions			

• Functional Classification: I/O Bus Errors

Variable name	_CJB_ErrSta				
Meaning	I/O Bus Error Stat	us		Global/local	Global
Function	Gives the I/O bus	error status.			
	lems may o	ccur. Use this varia		status through com	in updating it and concurrency prob- munications from an external device. error status bits.
Data type	WORD			Range of values	16#0000 to 16#00F0
R/W access	R	Retained	Not retained.	Network Publish	Published.
Usage in user program	Not possible.	Related instructions	instruction. • GetCJBError		user program only with the following to clear this variable.
	Г				
Variable name	_CJB_MstrErrSta				
Meaning	I/O Bus Master Er	ror Status		Global/local	Global
Function	Gives the I/O bus	master error status	S.		
	lems may o	occur. Use these v	ariables only to ac	ccess status throug	in updating it and concurrency prob- gh communications from an external s of the error status bits.
Data type	WORD			Range of values	16#0000 to 16#00F0
R/W access	R	Retained	Not retained.	Network Publish	Published.
Usage in user program	Not possible.	Related instructions	instruction. • GetCJBError		user program only with the following to clear this variable.
V	0.15.11.11.5.01				
Variable name	_CJB_UnitErrSta	0			Lace
Meaning	I/O Bus Unit Error			Global/local	Global
Function	Note Do not use lems may o	ccur. Use this varia	user program. The	status through come meanings of the	in updating it and concurrency prob- munications from an external device. error status bits.
Data type	ARRAY [03, 09]	OF WORD		Range of values	16#0000 to 16#80F0
R/W access	R	Retained	Not retained.	Network Publish	Published.
Usage in user program	Not possible.	Related instructions	instruction. • GetCJBError	nis variable from the	e user program only with the following
Variable name	_CJB_InRespTm				
Meaning	Basic Input Unit Ir	nput Response Tim	es	Global/local	Global
Function	Contains the resp	onse times of the E	Basic I/O Units.		
Data type	ARRAY [03, 09]	OF UINT		Range of values	0 to 320
R/W access	R	Retained	Not retained.	Network Publish	Published.
Usage in user program	Possible.	Related instructions			_

• Functional Classification: Auxiliary Area Bits for CJ-series Units

obal/local ort-circuit protect inge of values twork Publish obal/local ne CPU Bus Unialization is com	TRUE or FALSE Not published. Global	
inge of values itwork Publish	TRUE or FALSE Not published. Global	
obal/local	Not published.	
obal/local ne CPU Bus Un	Global	
ne CPU Bus Un		
	it.	
e applicable Un		
inge of values	TRUE or FALSE	
twork Publish	Published.	
obal/local	Global	
n of the Special I/O Unit. he initialization is completed. s of the applicable Units.		
ange of values	TRUE or FALSE	
twork Publish	Published.	
e un ol	bal/local e Special I/O Lalization is con	

Variable na	me	_CJB_CBU00Restart							
		to	to						
		_CJB_CBU15Res	_CJB_CBU15Restart						
Meaning		CPU Bus Unit Res	start Bits		Global/local	Global			
Function The CPU Bus Unit is restarted when the correspond system after the CPU Bus Unit is restarted.)					ariable changes to	TRUE. (It is changed to FALSE by the			
		The numbers in th	e variables indicate	the unit numbers of	of the applicable Ur	nits.			
		If you change the the next task period	•	JE with an instruction	on, the restart proc	ess begins from refresh processing in			
Data type		BOOL			Range of values	TRUE or FALSE			
R/W access	3	RW	Retained	Not retained.	Network Publish	Published.			
Usage in us	ser program	Possible.	Related instruc- tions	ResetUnit					
Auxiliary	Words	A501							
Area addresses	Bits	A501.00 to A501.	15						
Variable na	me	_CJB_SIO00Rest	art						
		to							
		_CJB_SIO95Rest	art						
Meaning		Special I/O Unit R	estart Bits		Global/local	Global			
Function			nit is restarted whe ne CPU Bus Unit is		g variable changes	to TRUE. (It is changed to FALSE by			
		The numbers in the variables indicate the unit numbers of the applicable Units.							
		If you change the the next task period		JE with an instruction	on, the restart proce	ess begins from refresh processing in			
Data type		BOOL			Range of values	TRUE or FALSE			
R/W access	3	RW	Retained	Not retained.	Network Publish	Published.			
Usage in us	ser program	Possible.	Related instructions	ResetUnit					
Auxiliary	Words	A502 to A507							
Area addresses	Bits	A502.00 to A507.	15						

Variable na	me	_CJB_SCU00P1C	_CJB_SCU00P1ChgSta						
		_CJB_SCU00P2ChgSta							
		to	to						
		_CJB_SCU15P1C	ChgSta						
		_CJB_SCU15P2C	hgSta						
Meaning	Serial Communications Unit 0, Port 1/2 Settings Changing Flags			Global/local	Global				
		Serial Communications Units 1 to 15, Port 1/2 Settings Changing Flags							
Function		· ·	•	ecified port are being execut	-	when the Change Serial Communica-			
		FALSE after the p	arameters are char	nged.					
				ate a change in ser on or a user operatio	, ,	turning ON the corresponding flag			
Data type		BOOL			Range of values	TRUE or FALSE			
R/W access	S	RW	Retained	Not retained.	Network Publish	Published.			
Usage in us	ser program	Possible.	Possible. Related instructions • SerialSetUp						
Auxiliary	Words	Port on Serial Communications Unit with unit number 0: A620							
Area		Ports on Serial Co	mmunications Unit	with unit numbers	1 to 15: A621 to A6	35			
addresses	Bits	Port on Serial Cor	nmunications Unit	with unit number 0:	A620.01 to A620.0	2			
		Ports on Serial Co	mmunications Unit	with unit numbers	1 to 15: A621.01 to	A635.02			

Motion Control Function Module, Category Name: _MC A-7-4

• Functional Classification: Motion Control Functions

Variable name	_MC_ErrSta							
Meaning	Motion Control Fu	nction Module Erro	r Status	Global/local	Global			
Function	Shows the status of errors that are detected in the Motion Control Function Module. You can use this variable directly in the user program. Refer to A-6-7 Meanings of Error Status Bits for the meanings of the error status bits.							
Data type	WORD			Range of values	16#0000 to 16#40F0			
R/W access	R	Retained	Not retained.	Network Publish	Published.			
Usage in user program	Possible.	Related instructions	GetMCError ResetMCError MC_Reset MC_GroupReset					

Variable name	_MC_ComErrSta							
Meaning	Common Error St	Common Error Status Global/local Global						
Function	Shows the status	Shows the status of errors that are detected in common processing for motion control.						
	You can use this v	You can use this variable directly in the user program.						
	Refer to A-6-7 Me	Refer to A-6-7 Meanings of Error Status Bits for the meanings of the error status bits.						
Data type	WORD			Range of values	16#0000 to 16#00F0			
R/W access	R	Retained	Not retained.	Network Publish	Published.			
Usage in user program	Possible.	Related instruc-	GetMCError					
		tions	ResetMCError					

Variable name	_MC_AX_ErrSta								
Meaning	Axis Error Status			Global/local	Global				
Function	Shows the error status for each axis.								
	The status of up to 64 axes is given.								
	You can use this variable directly in the user program.								
	Refer to A-6-7 Me	Refer to A-6-7 Meanings of Error Status Bits for the meanings of the error status bits.							
Data type	ARRAY [063] OF	WORD		Range of values	16#0000 to 16#00F0				
R/W access	R	Retained	Not retained.	Network Publish	Published.				
Usage in user program	Possible.	Related instructions	GetMCError ResetMCError MC_Reset						
Variable name	_MC_GRP_ErrSta	a							
Meaning	Axes Group Error			Global/local	Global				
Function		tatus for each axes	group.	J. T. S. T. T. C. C.					
			• .						
	The error status for up to 32 axes groups is shown. You can use this variable directly in the user program.								
		,		anings of the error s	tatus bits.				
Data type	ARRAY [031] OF			Range of values	16#0000 to 16#00F0				
R/W access	R	Retained	Not retained.	Network Publish	Published.				
Usage in user program	Possible.	Related instruc-	GetMCError						
Coago III aco. program	tions • ResetMCError								
	MC_GroupReset								
Variable name	_MC_COM								
Meaning	Common Variable			Global/local	Global				
Function	Shows the status	that is common to t	the Motion Control	Function Module.					
	Refer to the <i>NJ-se</i> members.	eries Motion Contro	l Instructions Refer	rence Manual (Cat. I	No. W508) for details on structure				
Data type	_sCOMMON_REI	=		Range of values					
R/W access	R	Retained	Not retained.	Network Publish	Published.				
Usage in user program	Possible.	Related instructions		1					
Variable name	_MC_GRP[32]								
Meaning	Axes Group Varia	bles		Global/local	Global				
Function	' '	kes groups and sho		dinated control statu	us, and multi-axes coordinated control				
	When you create an axes group on the System Studio, a user-defined axes group variable with a different name is created.								
	Normally, you use	an Axes Group Va	riable with a differe	nt name.					
	Refer to the <i>NJ-series Motion Control Instructions Reference Manual</i> (Cat. No. W508) for details on structure members.								
Data type	_sGROUP_REF			Range of values					
R/W access	R	Retained	Not retained.	Network Publish	Published.				
Usage in user program	Possible.	Related instruc-							

Variable name	_MC_AX[64]							
Meaning	Axis Variables	Axis Variables Global/local Global						
Function	Used to specify axes and shows single-axis control status, and single-axis control settings for motion control instructions.							
	When you create	an axis on the Syst	em Studio, a user-c	defined axis variable	e with a different name is created.			
	Normally, you use an Axis Variable with a different name.							
	Refer to the <i>NJ-se</i> members.	eries Motion Contro	l Instructions Refer	ence Manual (Cat. I	No. W508) for details on structure			
Data type	_sAXIS_REF			Range of values				
R/W access	R	Retained	Not retained. Network Publish Published.					
Usage in user program	Possible.	Related instructions						

A-7-5 EtherCAT Master Function Module, Category Name: _EC

• Functional Classification: EtherCAT Communications Errors

Variable name	_EC_ErrSta							
Meaning	Built-in EtherCAT	Error		Global/local	Global			
Function	This system-define	ed variable provide	s the collective state	us of errors in the E	therCAT Master Function Module.			
	Refer to A-6-7 Me	anings of Error Sta	<i>tus Bits</i> for the mea	nings of the error st	tatus bits.			
Data type	WORD			Range of values	16#0000 to 16#00F0			
R/W access	R	Retained	Not retained.	Network Publish	Published.			
Usage in user program	Possible.	Related instruc-	Get EtherCAT Err	or Status				
		tions	GetECError					
			Reset EtherCAT Controller Error					
			ResetECError					

Variable name	_EC_PortErr							
Meaning	Communications	Port Error		Global/local	Global			
Function	This system-defined variable provides the collective status of errors in the communications ports for the EtherCAT master. Refer to A-6-7 Meanings of Error Status Bits for the meanings of the error status bits.							
Data type	WORD			Range of values	16#0000 to 16#00F0			
R/W access	R	Retained	Not retained.	Network Publish	Published.			
Usage in user program	Possible.	Related instructions	Get EtherCAT Error Status • GetECError Reset EtherCAT Controller Error • ResetECError					

Variable name	_EC_MstrErr							
Meaning	Master Error			Global/local	Global			
Function	,	This system-defined variable provides the collective status of EtherCAT master errors and slave errors detected by the EtherCAT master.						
	Refer to A-6-7 Me	anings of Error Sta	<i>tus Bits</i> for the mea	nings of the error st	tatus bits.			
Data type	WORD			Range of values	16#0000 to 16#00F0			
R/W access	R	Retained	Not retained.	Network Publish	Published.			
Usage in user program	Possible.	Related instruc-	Get EtherCAT Erro	or Status				
		tions	GetECError					
			Reset EtherCAT Controller Error					
			ResetECError					

Variable name	_EC_SlavErr						
Meaning	Slave Error			Global/local	Global		
Function	This system-defin	ed variable provide	s the collective stat	us of all the error status for EtherCAT slaves.			
	Refer to A-6-7 Me	anings of Error Sta	tus Bits for the mea	anings of the error s	tatus bits.		
Data type	WORD			Range of values	16#0000 to 16#00F0		
R/W access	R	Retained	Not retained.	Network Publish	Published.		
Usage in user program	Possible.	Related instruc-	Get EtherCAT Err	or Status			
		tions	GetECError				
			Reset EtherCAT (Controller Error			
			ResetECError				
Variable name	_EC_SlavErrTbl						
Meaning	Slave Error Table			Global/local	Global		
Function	This system-defin	ed variable gives th	e error status for ea	ach EtherCAT slave			
	The error status is	given for each sla	ve in the actual syst	tem configuration.			
			which there are er	rrors. Status is prov	ded for each EtherCAT slave node		
	address (1 to 192		to a Dita familia a sa a		takin kita		
Data has			tus bits for the mea	nings of the error s			
Data type	Array [1192] OF		[a	Range of values	16#0000 to 16#00F0		
R/W access	R	Retained	Not retained.	Network Publish	Published.		
Usage in user program	Possible.	Related instruc- tions	Get EtherCAT Error Status				
			GetECError Baset EtherCAT (Reset EtherCAT Controller Error			
		ResetECError					
		HOUSEDETTO					
	I ===						
Variable name	_EC_MacAdrErr				[a		
Meaning	MAC Address Err			Global/local	Global		
Function		n illegal MAC addre	ess.		Γ=-··= =·· ==		
Data type	BOOL		I	Range of values	TRUE or FALSE		
R/W access	R	Retained	Not retained.	Network Publish	Published.		
Usage in user program	Possible.	Related instruc- tions	Reset EtherCAT (Controller Error			
		tions	ResetECError				
Variable name	_EC_LanHwErr						
Meaning	Communications	Controller Error		Global/local	Global		
Function		communications c	ontroller hardware e				
Data type	BOOL	T		Range of values	TRUE or FALSE		
R/W access	R	Retained	Not retained.	Network Publish	Published.		
Usage in user program	Possible.	Related instruc-	Reset EtherCAT (Controller Error			
		tions	ResetECError				
Variable name	_EC_LinkOffErr						
Meaning	Link OFF Error			Global/local	Global		
Function	TRUE if the comn	nunications controll	er link is not establi	shed.			
Data type	BOOL			Range of values	TRUE or FALSE		
R/W access	R	Retained	Not retained.	Network Publish	Published.		
Usage in user program	Possible.	Related instruc-	Reset EtherCAT (Controller Error	·		
		tions	ResetECError				
	- Hosoteoemor						

Variable name	_EC_NetCfgErr					
Meaning		ation Information E	rror	Global/local	Global	
Function		legal network confi				
Data type	BOOL		9	Range of values	TRUE or FALSE	
R/W access	R	Retained	Not retained.	Network Publish	Published.	
Usage in user program	Possible.					
Variable name	_EC_NetCfgCmp	Err				
Meaning	Network Configur	ation Verification E	ror	Global/local	Global	
Function				match the actual ne	etwork configuration.	
Data type	BOOL			Range of values	TRUE or FALSE	
R/W access	R	Retained	Not retained.	Network Publish	Published.	
Usage in user program	Possible.	Related instructions	Reset EtherCAT (• ResetECError	Controller Error		
			!			
Variable name	_EC_NetTopology	/Err				
Meaning	Network Configura			Global/local	Global	
Function			tion error (too many	devices connected	I or ring connection).	
Data type	BOOL			Range of values	TRUE or FALSE	
R/W access	R	Retained	Not retained.	Network Publish	Published.	
Usage in user program	Possible.	Related instruc-	Reset EtherCAT	Controller Error		
		tions	ResetECError			
Variable name	_EC_PDCommEr	r				
Meaning		nmunications Error		Global/local	Global	
Function		n unexpected slave			ave WDT error is detected during pro-	
Data type	BOOL	Theations.		Range of values	TRUE or FALSE	
R/W access	R	Retained	Not retained.	Network Publish	Published.	
Usage in user program	Possible.	Related instruc-	Reset EtherCAT (Controller Error		
			Ticocizoznoi			
Variable name	_EC_PDTimeout	=rr				
Meaning		ception Timeout Eri	or	Global/local	Global	
Function		occurs while recei		Siobal/iodai	J	
Data type	BOOL	. Coours writte recer	ving process data.	Range of values	TRUE or FALSE	
R/W access	R	Retained	Not retained.	Network Publish	Published.	
Usage in user program	Possible.	Related instruc-	Reset EtherCAT		i ubiloticu.	
Osage in user program	rossible.	tions	ResetECError	Controller Error		
Variable name	_EC_PDSendErr					
Meaning	Process Data Trai	nsmission Error		Global/local	Global	
Function		process data trans ter is over the limit)	•	not send within the	process data communications period	
Data type	BOOL			Range of values	TRUE or FALSE	
R/W access	R	Retained	Not retained.	Network Publish	Published.	
Usage in user program	Possible.	Related instructions	Reset EtherCAT (• ResetECError			

Variable name	_EC_SlavAdrDupErr					
Meaning	Slave Node Addre	ess Duplicated Erro	r	Global/local	Global	
Function		· · · · · · · · · · · · · · · · · · ·	et for more than one	e slave.		
Data type	BOOL			Range of values	TRUE or FALSE	
R/W access	R	Retained	Not retained.	Network Publish	Published.	
Usage in user program	Possible.	Related instruc-	Reset EtherCAT 0	Controller Error		
		tions	ResetECError			
Variable name	_EC_SlavInitErr					
Meaning	Slave Initialization	Error		Global/local	Global	
Function	TRUE if there is a	n error in an initializ	zation command ad	dressed to a slave.	•	
Data type	BOOL			Range of values	TRUE or FALSE	
R/W access	R	Retained	Not retained.	Network Publish	Published.	
Usage in user program	Possible.	Related instruc-	Reset EtherCAT C	Controller Error		
		tions	ResetECError			
Variable name	_EC_SlavAppErr					
Meaning	Slave Application	Error		Global/local	Global	
Function	TRUE if there is a	n error in the slave	s application status	register.		
Data type	BOOL			Range of values	TRUE or FALSE	
R/W access	R	Retained	Not retained.	Network Publish	Published.	
Usage in user program	Possible.	Related instruc-	Reset EtherCAT (Controller Error		
		tions	ResetECError			
Variable name	_EC_MsgErr					
Meaning	EtherCAT Messag	ge Error		Global/local	Global	
Function		ssage is sent to a so		support messages	or when there is an error in the format	
Data type	BOOL			Range of values	TRUE or FALSE	
R/W access	R	Retained	Not retained.	Network Publish	Published.	
Usage in user program	Possible.	Related instruc-	CoE messages (F		<u> </u>	
		tions	• EC_CoESDOR			
			CoE messages (V	Write CoE SDO)		
			• EC_CoESDOW			
Variable name	_EC_SlavEmergE					
Meaning	Emergency Mess			Global/local	Global	
Function	TRUE if the maste	er detects an emerç	gency message that	t was sent by a slav	/e.	
Data type	BOOL			Range of values	TRUE or FALSE	
R/W access	R	Retained	Not retained.	Network Publish	Published.	
Usage in user program	Possible.	Related instruc-	Reset EtherCAT (
		tions	ResetECError	-		
	- Deseredential					

Variable name	_EC_CommErrTbl						
Meaning	Communications Error Slave Table			Global/local	Global		
Function	Slaves are given in the table in the order of slave node addresses.						
	The corresponding slave element is TRUE if the master detected an error for the slave.						
Data type	Array [1192] OF	BOOL		Range of values	TRUE or FALSE		
R/W access	R	Retained	Not retained.	Network Publish	Published.		
Usage in user program	Possible.	Related instruc-	Reset EtherCAT Controller Error				
		tions	ResetECError				

Note The values of all system-defined variables that are related to errors in EtherCAT communications do not change until the cause of the error is removed and then the error in the Controller is reset with the troubleshooting functions of the Sysmac Studio or the ResetECError instruction.

• Functional Classification: EtherCAT Communications Status

Variable name	_EC_RegSlavTbl	_EC_RegSlavTbl					
Meaning	Registered Slave Table			Global/local	Global		
Function	This table indicate	on information.					
	Slaves are given i	Slaves are given in the table in the order of slave node addresses.					
	The element for a slave is TRUE if the corresponding slave is registered.						
Data type	Array [1192] OF	BOOL		Range of values	TRUE or FALSE		
R/W access	R	Retained	Not retained.	Network Publish	Published.		
Usage in user program	Possible.	Related instructions					

Variable name	_EC_EntrySlavTbl							
Meaning	Network Connected Slave Table			Global/local	Global			
Function	This table indicate	This table indicates which slaves are connected to the network.						
	Slaves are given i	Slaves are given in the table in the order of slave node addresses.						
	The element for a slave is TRUE if the corresponding slave has entered the network.							
Data type	Array [1192] OF	BOOL		Range of values	TRUE or FALSE			
R/W access	R	Retained	Not retained.	Network Publish	Published.			
Usage in user program	Possible.	Related instructions			_			

Variable name	_EC_MBXSlavTbl						
Meaning	Message Commu	nications Enabled	Slave Table	Global/local	Global		
Function	This table indicates the slaves that can perform message communications.						
	Slaves are given in the table in the order of slave node addresses.						
	The element for a slave is TRUE if message communications are enabled for it (pre-operational, safe-operation, or operational state).						
	Note Use this variable to confirm that message communications are possible for the relevant slave before you execute message communications with an EtherCAT slave.						
Data type	Array [1192] OF	BOOL		Range of values	TRUE or FALSE		
R/W access	R	Retained	Not retained.	Network Publish	Published.		
Usage in user program	Possible.	Related instruc-	Disconnect Ether	CAT Slave			
		tions	EC_DisconnectSlave				
			Connect EtherCAT Slave				
			EC_ConnectSla	ive			

Variable name	_EC_PDSlavTbl						
Meaning	Process Data Cor	nmunicating Slave	Table	Global/local	Global		
Function	This is a table that	t indicates the slave	es that are performi	ng process data co	mmunications.		
	Slaves are given in	n the table in the or	der of slave node a	ddresses.			
		The element for a slave is TRUE if process data of the corresponding slave is enabled (operational) for both slainputs and outputs.					
	Note Use this var	riable to confirm tha	at the data for the re	levant slave is valid	before controlling an EtherCAT slave.		
Data type	Array [1192] OF	BOOL		Range of values	TRUE or FALSE		
R/W access	R	Retained	Not retained.	Network Publish	Published.		
Usage in user program	Possible.	Related instruc-	Disconnect Ether	CAT Slave			
		tions	EC_Disconnects	Slave			
			Connect EtherCA	T Slave			
			EC_ConnectSlave				
Variable name	_EC_DisconnSlav	Tbl					
Meaning	Disconnected Slav	ve Table		Global/local	Global		
Function	Slaves are given in	n the table in the or	der of slave node a	ddresses.			
	The element for a	The element for a slave is TRUE if the corresponding slave was disconnected.					
Data type	Array [1192] OF	BOOL		Range of values	TRUE or FALSE		
R/W access	R	Retained	Not retained.	Network Publish	Published.		
Usage in user program	Possible.	Related instruc-	Disconnect Ether(CAT Slave			
		tions	EC_DisconnectSlave				
			Connect EtherCAT Slave				
			EC_ConnectSla	ive			
Variable name	_EC_DisableSlav	Tbl					
Meaning	Disabled Slave Ta	ble		Global/local	Global		
Function	Slaves are given in	n the table in the or	der of slave node a	ddresses.			
	The element for a	slave is TRUE if th	e corresponding sla	ave is disabled.			
Data type	Array [1192] OF	BOOL		Range of values	TRUE or FALSE		
R/W access	R	Retained	Not retained.	Network Publish	Published.		
Usage in user program	Possible.	Related instructions			-		
Variable name	_EC_PDActive						
		nmunications Statu		Global/local	Global		
Meaning			ations are performe		Global		
Function		ess data communic	ations are performe		TDUE or EALCE		
Data type	BOOL	Detained	Not voto:	Range of values	TRUE or FALSE		
R/W access	R	Retained	Not retained.	Network Publish	Published.		
Usage in user program	Possible.	Related instruc- tions	Disconnect Ether				
			EC_Disconnect Connect Ether CA				
			Connect EtherCAT Slave • EC_ConnectSlave				
			LO_COMMECICIO	***			

Variable name	EC PktMonStop					
Meaning	Packet Monitoring			Global/local	Global	
Function		et monitoring is stop	oped.			
Data type	BOOL			Range of values	TRUE or FALSE	
R/W access	R	Retained	Not retained.	Network Publish	Published.	
Usage in user program	Possible.	Related instruc-	Stop Packet Moni	tor		
		tions	EC_StopMon			
			Start Packet Moni	tor		
			EC_StartMon			
Variable name	_EC_LinkStatus					
Meaning	Link Status			Global/local	Global	
Function	TRUE if the comm	TRUE if the communications controller link status is Link ON.				
Data type	BOOL			Range of values	TRUE or FALSE	
R/W access	R	Retained	Not retained.	Network Publish	Published.	
Usage in user program	Possible.	Related instructions				
Variable name	_EC_PktSaving					
Meaning	Saving Packet Da	ta File		Global/local	Global	
Function	Shows whether a	packet data file is b	eing saved.			
	TRUE: Packet dat	a file being saved.				
	FALSE: Packet da	ta file not being sa	ved.			
Data type	BOOL			Range of values	TRUE or FALSE	
R/W access	R	Retained	Not retained.	Network Publish	Published.	
Usage in user program	Possible.	Related instruc-	Saving Packet Da	ta File		
		tions	• EC_SaveMon			
Variable name	_EC_InDataInvalid	_EC_InDataInvalid				

Note All system-defined variables that are related to the status of EtherCAT communications give the current status.

Retained

tions

Related instruc-

TRUE when process data communications are not normal and the input data is not valid.

Not retained.

Global/local

Range of values

Network Publish

Global

TRUE or FALSE

Published.

Input Data Invalid

BOOL

Possible.

R

Meaning

Function

Data type

R/W access

Usage in user program

A-7-6 EtherNet/IP Function Module, Category Name: _EIP

• Functional Classification: EtherNet/IP Communications Errors

Variable name	_EIP_ErrSta					
Meaning	Built-in EtherNet/IP Error			Global/local	Global	
Function	This is the error status variable for the built-in EtherNet/IP port. It represents the following error flags. • _EIP_PortErr (Communications Port Error) • _EIP_CipErr (CIP Communications Error) • _EIP_TcpAppErr (TCP Application Communications Error) Note Refer to A-6-7 Meanings of Error Status Bits for the meanings of the error status bits.					
Data type	WORD			Range of values	16#0000 to 16#00F0	
R/W access	R	Retained	Not retained.	Network Publish	Published.	
Usage in user program	Possible. Related instructions You can access this variable from the user prints instruction. • GetEIPError				e user program with the following	
Variable name	EIP PortErr					
Meaning		Port Frror		Global/local	Global	
Function	Communications Port Error Global/local Global This is the error status variable for the communications port. It represents the following error flags. • _EIP_MacAdrErr (MAC Address Error) • _EIP_LanHwErr (Communications Controller Error) • _EIP_EtnCfgErr (Basic Ethernet Setting Error) • _EIP_IPAdrCfgErr (TCP/IP Basic Setting Error) • _EIP_IPAdrDupErr (IP Address Duplication Error) • _EIP_BootpErr (BOOTP Server Error) • _EIP_IPRTblErr (TCP/IP Advanced Setting Error) Note If a link OFF or Built-in EtherNet/IP Processing Error occurs, it is recorded in the event log and then corresponding bit turns ON. Refer to A-6-7 Meanings of Error Status Bits for the meanings of the error status bits.					
Data type	WORD			Range of values	16#0000 to 16#00F0	
R/W access	R	Retained	Not retained.	Network Publish	Published.	
Usage in user program	Possible. Related instructions Related instruction. Possible. Related instruction.				e user program with the following	

• GetEIPError

Variable name	_EIP_CipErr						
Meaning	CIP Communication	ons Error		Global/local	Global		
Function	This is the error st	atus variable for C	IP communications				
	It represents the fo	ollowing error flags					
	• _EIP_IdentityEr	r (Identity Error)					
	· -	gErr (Tag Data Link	Setting Error)				
	• _EIP_TDLinkOp	onErr (Tag Data Lin	k Connection Faile	d)			
	• _EIP_TDLinkEr	r (Tag Data Link Co	ommunications Erro	or)			
	• _EIP_TagAdrEr	r (Tag Name Resol	ution Error)				
	• _EIP_MultiSwO	nErr (Multiple Swite	ches ON Error)				
				the event log and th ings of the error sta	is variable changes to TRUE. Retus bits.		
Data type	WORD			Range of values	16#0000 to 16#00F0		
R/W access	R	Retained	Not retained.	Network Publish	Published.		
Usage in user program	Possible.	Related instruc-	You can access t	his variable from the	user program with the following		
		tions	instruction.				
			GetEIPError				
Variable name	_EIP_TcpAppErr						
Meaning	TCP Application C	Communications Er	ror	Global/local	Global		
Function	This is the error st	atus variable for To	CP application com	munications.			
	It represents the following error flags.						
	_EIP_TcpAppCfgErr (TCP/IP Setting Error)						
	_EIP_NTPSrvErr (NTP Server Connection Error)						
	_EIP_DNSSrvErr (DNS Server Connection Error)						
	Note Refer to A-6	6-7 Meanings of Er	ror Status Bits for t	he meanings of the	error status bits.		
Data type	WORD			Range of values	16#0000 to 16#00F0		
R/W access	R	Retained	Not retained.	Network Publish	Published.		
Usage in user program	Possible.	Related instruc-	You can access t	his variable from the	user program with the following		
		tions	instruction.				
	GetEIPError						
Variable name	_EIP_MacAdrErr						
Meaning	MAC Address Erro	or		Global/local	Global		
Function	Indicates that an e	error occurred when	n the MAC address	was read at startup).		
	TRUE: Error						
	FALSE: Normal						
Data type	BOOL			Range of values	TRUE or FALSE		
R/W access	R	Retained	Not retained.	Network Publish	Published.		
Usage in user program	Possible.	Related instruc-					
		tions					
Variable name	_EIP_LanHwErr						
Meaning	Communications (Controller Error		Global/local	Global		
Function	TRUE: The comm	unications controlle	er failed.		-		
	FALSE: Normal						

Range of values

Network Publish

TRUE or FALSE

Published.

BOOL

Possible.

Retained

tions

Related instruc-

Not retained.

Data type

R/W access

Usage in user program

Variable name	_EIP_EtnCfgErr						
Meaning	Basic Ethernet Se	etting Error		Global/local	Global		
Function			s speed setting (S	peed/Duplex) is inco	rrect. Or, a read operation failed.		
	FALSE: Normal						
Data type	BOOL			Range of values	TRUE or FALSE		
R/W access	R	Retained	Not retained.	Network Publish	Published.		
Usage in user program	Possible.	Related instructions					
Variable name	_EIP_IPAdrCfgEri	,					
Meaning	TCP/IP Basic Set			Global/local	Global		
Function	A read of	s an illegal IP addre operation failed. address obtained fr	-	erver is inconsistent.			
	The DN FALSE: Normal	S settings are not o	correct.				
Data type	BOOL			Range of values	TRUE or FALSE		
R/W access	R	Retained	Not retained.	Network Publish	Published.		
Usage in user program	Possible.	Related instructions					
Variable name	_EIP_IPAdrDupErr						
Meaning	IP Address Duplic			Global/local	Global		
Function		IP address is assig	ned to more than	one node.			
Data type	BOOL	TRUE or FALSE					
R/W access	R	Retained	Not retained.	Network Publish	Published.		
Usage in user program	Possible.	Related instructions					
Variable name	EID BootnErr						
	_EIP_BootpErr BOOTP Server Er	ror		Global/local	Global		
Meaning Function		a failure to connec	at to the POOTP of		Giobai		
Function				` ,	ss was normally obtained from the		
Data type	BOOL			Range of values	TRUE or FALSE		
R/W access	R	Retained	Not retained.	Network Publish	Published.		
Usage in user program	Possible.	Related instructions					
		_	_				
Variable name	_EIP_IPRTblErr						
Meaning	TCP/IP Advanced Setting Error Global/local Global				Global		
Function	TRUE: There is an error in one of the following settings. Or, a read operation failed. • IP router table settings • Hosts settings FALSE: Normal.						
Data type	BOOL			Range of values	TRUE or FALSE		
R/W access Usage in user program	R Possible.	Retained Related instruc-	Not retained.	Network Publish	Published.		
		tions					

Variable name	_EIP_IdentityErr					
Meaning	Identity Error			Global/local	Global	
Function	TRUE: The identity information (which you cannot overwrite) is not correct. Or, a read operation failed. FALSE: Normal.					
Data type	BOOL			Range of values	TRUE or FALSE	
R/W access	R	Retained	Not retained.	Network Publish	Published.	
Usage in user program	Possible.	Related instructions				
Variable name	_EIP_TDLinkCfgE	Err				
Meaning	Tag Data Link Set			Global/local	Global	
Function		ata link settings are	incorrect. Or, a rea	ad operation failed.		
Data type	BOOL			Range of values	TRUE or FALSE	
R/W access	R	Retained	Not retained.	Network Publish	Published.	
Usage in user program	Possible.	Related instructions				
Variable name	_EIP_TDLinkOpn	Frr				
Meaning	Tag Data Link Cor			Global/local	Global	
Function	TRUE: The connection was not established because the remote node information in the tag data was different from the actual node information.					
	Note This variable does not change to TRUE if there is no remote node when the power is turned ON. FALSE: Other than the above.					
Data type	BOOL			Range of values	TRUE or FALSE	
R/W access	R	Retained	Not retained.	Network Publish	Published.	
Usage in user program	Possible.	Related instructions				
Variable name	_EIP_TDLinkErr	•	*			
			_	01-1-1/11	Louis	
Meaning	<u> </u>	mmunications Error		Global/local	Global	
Function	FALSE: Other tha	occurred in a tag dans n the above.	ata link connection	•		
Data type	BOOL			Range of values	TRUE or FALSE	
R/W access	R	Retained	Not retained.	Network Publish	Published.	
Usage in user program	Possible.	Related instructions				
Variable name	FID Too AdvEvv	•	*			
Variable name	_EIP_TagAdrErr	tion Error		Global/loas!	Global	
Meaning Function	Tag Name Resolu		addrage sould set !	Global/local	Global	
Function	 TRUE: Tag resolution failed (i.e., the address could not be identified from the tag name). The following causes possible. The size of the network-published variable does not agree with the tag setting. The I/O direction that is set in the tag data link settings does not agree with the I/O direction of the vable in the CPU Unit. There is no network-published variable in the CPU Unit that corresponds to the tag setting. FALSE: Other than the above. 					
Data type	BOOL			Range of values	TRUE or FALSE	
R/W access	R	Retained	Not retained.	Network Publish	Published.	
Usage in user program	Possible.	Related instructions				

Variable name	_EIP_MultiSwONErr					
Meaning	Multiple Switches	ON Error		Global/local	Global	
Function	TRUE: More than	one data link start/	stop switch change	d to TRUE at the sa	ame time.	
	FALSE: Other tha	n the above.				
Data type	BOOL			Range of values	TRUE or FALSE	
R/W access	R	Retained	Not retained.	Network Publish	Published.	
Usage in user program	Possible.	Related instruc- tions				
		_				
Variable name	_EIP_TcpAppCfgl				T =	
Meaning	TCP/IP Setting Er			Global/local	Global	
Function	TRUE: At least on failed.	e of the set values	for a TCP/IP applica	ation (FTP, NTP, SN	IMP) is incorrect. Or, a read operation	
	FALSE: Normal.					
Data type	BOOL				TRUE or FALSE	
R/W access	R	Retained	Not retained.	Network Publish	Published.	
Usage in user program	Possible.	Related instructions				
Variable name	_EIP_NTPSrvErr					
Meaning	NTP Server Conn	ection Error		Global/local	Global	
Function	TRUE: The NTP of	lient failed to conne	ect to the server (tin	neout).		
	FALSE: NTP is no	t set or the connec	tion was successfu	l.		
Data type	BOOL			Range of values	TRUE or FALSE	
R/W access	R	Retained	Not retained.	Network Publish	Published.	
Usage in user program	Possible.	Related instruc- tions				
Variable name	_EIP_DNSSrvErr					
Meaning	DNS Server Connection Error			Global/local	Global	
Function	TRUE: The DNS	client failed to conn	ect to the server (tir	neout).		
	FALSE: DNS is no	ot enabled. Or, DNS	is enabled and the	e connection was su	uccessful.	
Data type	BOOL			Range of values	TRUE or FALSE	
R/W access	R	Retained	Not retained.	Network Publish	Published.	
Usage in user program	Possible.	Related instruc- tions				

• Functional Classification: EtherNet/IP Communications Status

Variable name	_EIP_EtnOnlineSta							
Meaning	Online			Global/local	Global			
Function		TRUE: The built-in EtherNet/IP port's communications can be used. (The link is ON and IP address is defined. Also, there are no errors).						
	FALSE: The built- processing.	FALSE: The built-in EtherNet/IP port's communications is disabled due to an error in initial processing or restart processing.						
Data type	BOOL			Range of values	TRUE or FALSE			
R/W access	R	Retained	Not retained.	Network Publish	Published.			
Usage in user program	Possible.	Related instructions						

Variable name	_EIP_TDLinkRuns	Sta			
Meaning	Tag Data Link Cor	nmunications Statu	ıs	Global/local	Global
Function	TRUE: At least on	e connection is in i	normal operation.		
Data type	BOOL	THE GOVE.		Range of values	TRUE or FALSE
R/W access	R	Retained	Not retained.	Network Publish	Published.
Usage in user program	Possible.	Related instruc- tions		Network Fubilisti	T ubilation.
Variable name	EIP TDLinkAllRı	ınÇta			
Meaning		Communications S	tatue	Global/local	Global
Function	TRUE: Tag data li		ating in all connect	ions as the originato	
Data type	BOOL			Range of values	TRUE or FALSE
R/W access	R	Retained	Not retained.	Network Publish	Published.
Usage in user program	Possible.	Related instructions			
Variable name	_EIP_RegTargetS	ta [255]			
Meaning	Registered Target	Node Information		Global/local	Global
Function	This variable gives	s a list of nodes for	which built-in Ethe	erNet/IP connections	are registered.
	This variable is va	lid only when the b	uilt-in EtherNet/IP	port is the originator	
	Array[x] is TRUE:	The connection to	the node with a tar	rget node ID of x is re	egistered.
	Array[x] is FALSE:	The connection to	the node with a ta	arget node ID of x is	not registered.
Data type	ARRAY [0255] O	F BOOL		Range of values	TRUE or FALSE
R/W access	R	Retained	Not retained.	Network Publish	Published.
Usage in user program	Possible.	Related instruc-			
		tions			
			•		
	<u> </u>		•		
Variable name	_EIP_EstbTargetS	Sta [255]			
Meaning	_EIP_EstbTargetS			Global/local	Global
Meaning	Normal Target No This variable gives Array[x] is TRUE:	de Information s a list of nodes tha The connection to	the node with a tar	stablished EtherNet/l rget node ID of x was	
Meaning Function	Normal Target No This variable gives Array[x] is TRUE: Array[x] is FALSE	de Information s a list of nodes tha The connection to The connection to	the node with a tar	stablished EtherNet/l rget node ID of x was	P connections. s established normally.
Meaning Function Data type	Normal Target No This variable gives Array[x] is TRUE: Array[x] is FALSE: occurred.	de Information s a list of nodes tha The connection to The connection to	the node with a tar	stablished EtherNet/I rget node ID of x was arget node ID of x was	P connections. s established normally. s not established, or an error
Variable name Meaning Function Data type R/W access Usage in user program	Normal Target No This variable gives Array[x] is TRUE: Array[x] is FALSE occurred. ARRAY [0255] O	de Information s a list of nodes tha The connection to The connection to	the node with a tar	stablished EtherNet/I rget node ID of x was arget node ID of x was Range of values	P connections. s established normally. s not established, or an error TRUE or FALSE
Meaning Function Data type R/W access Usage in user program	Normal Target No This variable gives Array[x] is TRUE: Array[x] is FALSE: occurred. ARRAY [0255] OR	de Information s a list of nodes that The connection to The connection to F BOOL Retained Related instructions	the node with a tar	stablished EtherNet/I rget node ID of x was arget node ID of x was Range of values	P connections. s established normally. s not established, or an error TRUE or FALSE
Meaning Function Data type R/W access Usage in user program Variable name	Normal Target No This variable gives Array[x] is TRUE: Array[x] is FALSE: occurred. ARRAY [0255] OR Possible.	de Information s a list of nodes that The connection to The connection to F BOOL Retained Related instructions	the node with a tar	stablished EtherNet/I rget node ID of x was arget node ID of x was Range of values	P connections. s established normally. s not established, or an error TRUE or FALSE
Meaning Function Data type R/W access Usage in user program Variable name Meaning	Normal Target No This variable gives Array[x] is TRUE: Array[x] is FALSE occurred. ARRAY [0255] CR Possible. _EIP_TargetPLCM Target PLC Opera	de Information s a list of nodes that The connection to The connection to F BOOL Retained Related instructions ModeSta [255] ting Mode vs the operating sta	Not retained.	rget node ID of x was arget node ID of x was arget node ID of x was Range of values Network Publish Global/local	P connections. s established normally. s not established, or an error TRUE or FALSE Published. Global
Meaning Function Data type R/W access Usage in user program Variable name Meaning	Normal Target No This variable gives Array[x] is TRUE: Array[x] is FALSE occurred. ARRAY [0255] OR Possible. _EIP_TargetPLCN Target PLC Opera This variable show Net/IP port as the The array element indicates the previous Array[x] is TRUE:	de Information s a list of nodes that The connection to	Not retained. atus of the target number the corresponded of the target number the corresponded to the target number the corresponded to the target number the target number the corresponded to the	Range of values Network Publish Global/local ode Controllers that	P connections. s established normally. Is not established, or an error TRUE or FALSE Published. Global are connected with the built-in Etheode Information is TRUE.
Meaning Function Data type R/W access Usage in user program Variable name Meaning Function	Normal Target No This variable gives Array[x] is TRUE: Array[x] is FALSE occurred. ARRAY [0255] OR Possible. _EIP_TargetPLCN Target PLC Opera This variable show Net/IP port as the The array element indicates the previous Array[x] is TRUE:	de Information s a list of nodes that The connection to	Not retained. atus of the target number the corresponded of the target number the corresponded to the target number the corresponded to the target number the target number the corresponded to the	Range of values Network Publish Global/local ode Controllers that ling Normal Target N FALSE, the Target N	P connections. s established normally. Is not established, or an error TRUE or FALSE Published. Global are connected with the built-in Etheode Information is TRUE.
Meaning Function Data type R/W access	Normal Target No This variable gives Array[x] is TRUE: Array[x] is FALSE: occurred. ARRAY [0255] C R Possible. _EIP_TargetPLCN Target PLC Opera This variable show Net/IP port as the The array element If the correspondir indicates the previous Array[x] is TRUE: Array[x] is FALSE:	de Information s a list of nodes that The connection to	Not retained. atus of the target number the corresponded of the target number the corresponded to the target number the corresponded to the target number the target number the corresponded to the	Range of values Network Publish Global/local ode Controllers that ling Normal Target N FALSE, the Target N et Controller with a r	P connections. s established normally. s not established, or an error TRUE or FALSE Published. Global are connected with the built-in Etheode Information is TRUE. lode Controller Operating Information ode address of x.

Variable name	_EIP_TargetPLCErr [255]					
Meaning	Target PLC Error	Information		Global/local	Global	
Function	This variable shows the error status (logical OR of fatal and non-fatal errors) of the target node Controllers that are connected with the built-in EtherNet/IP ports as the originator. The array elements are valid only when the corresponding Normal Target Node Information is TRUE. The immediately preceding value is retained if this variable is FALSE. Array[x] is TRUE: A fatal or non-fatal error occurred in the target Controller with a target node ID of x. Array[x] is FALSE: Other than the above.					
Data type	ARRAY [0255] C	F BOOL		Range of values	TRUE or FALSE	
R/W access	R	Retained	Not retained.	Network Publish	Published.	
Usage in user program	Possible.	Related instructions				
Variable regree	FID Township do	F				
Variable name	_EIP_TargetNode			Global/local	Global	
Meaning Function	an error occurred	ates that the conne in the target Contro	oller.	ered Target Node Ir	I Iformation was not established or that	
	The array elements are valid only when the Registered Target Node Information is TRUE. Array[x] is TRUE: A connection was not normally established with the target node for a target node ID of x (the Registered Target Node Information is TRUE and the Normal Target Node Information is FALSE), or a connection was established with the target node but an error occurred in the target Controller. Array[x] is FALSE: The target node is not registered for a target node ID of x (the Registered Target Node Information is FALSE), or a connection was normally established with the target node (the Registered Target Node Information is TRUE and the Normal Target Node Information is TRUE). An error occurred in the target Controller (the Target PLC Error Information is TRUE).					
Data type	ARRAY [0255] O	F BOOL		Range of values	TRUE or FALSE	
R/W access	R	Retained	Not retained.	Network Publish	Published.	
Usage in user program	Possible.	Related instructions				
Variable name	_EIP_NTPResult			Members	.ExecTime	
Meaning	NTP Last Operation	on Time		Global/local	Global	
Function	Gives the last time that NTP processing ended normally. The time that was obtained from the NTP server is stored when the time is obtained normally. The time is not stored if it is not obtained from the NTP server normally. Note Do not use this variable in the user program. There may be a delay in updating it. Use this variable only to access status through communications from an external device.					
Data type	Structure: _sNTP_ Members: DATE_	_		Range of values	Depends on data type.	
R/W access	R	Retained	Not retained.	Network Publish	Published.	
Usage in user program	Not possible.	Related instructions	You can read the tion.	contents of this vari	iable with the GetNTPStatus instruc-	


Variable name	_EIP_NTPResult			Members	.ExecNormal	
Meaning	NTP Operation Re	esult		Global/local	Global	
Function	This variable show	vs if the NTP opera	tion ended normally	y.		
	TRUE: Indicates a	ın NTP normal end				
	FALSE: Indicates	that NTP operation	ended in an error of	or has not been exe	cuted even once.	
	Note Do not use this variable in the user program. There may be a delay in updating it. Use this variable only to access status through communications from an external device.					
Data type	BOOL	BOOL			TRUE or FALSE	
R/W access	R	Retained	Not retained. Network Publish Published.			
Usage in user program	Not possible	Related instructions	You can read the contents of this variable with the GetNTPStatus instruction.			

• Functional Classification: EtherNet/IP Communications Switches

Variable name	_EIP_TDLinkStartCmd				
Meaning	Tag Data Link Communications Start Switch Global/local				Global
Function	This is the start switch for data links.				
Data type	BOOL			Range of values	TRUE or FALSE
R/W access	RW	Retained	Not retained. Network Publish Published.		
Usage in user program	Possible.	Related instructions			

Variable name	_EIP_TDLinkStopCmd					
Meaning	Tag Data Link Communications Stop Switch Global/local Global				Global	
Function	This is the stop switch for data links.					
Data type	BOOL			Range of values	TRUE or FALSE	
R/W access	RW	Retained	Not retained.	Network Publish	Published.	
Usage in user program	Possible.	Related instructions				

Appendices

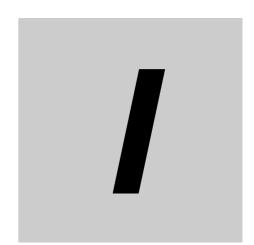

Index

Index

A		_CJB_ErrSta	A-111, A-136
		_CJB_InRespTm	A-111, A-136
abnormal conditions5	-43, 5-44	_CJB_IOUnitInfo	
_TaskName_Active A-10		3-30, A-35, A-37, A-38, A-39, A-	100, A-103, A-112, A-137
		_CJB_MaxRackNo	A-111, A-135
All Tag Data Link Communications Status A-12		_CJB_MaxSlotNo	A-111, A-135
Always FALSE Flag		_CJB_MstrErrSta	A-111, A-136
Always TRUE Flag		_CJB_SCU00P1ChgSta	
assumed causes5-13, 5		to _CJB_SCU00P2ChgSta	A-112
Axes Group Error Status		_CJB_SCU00P1ChgSta,	
Axes Group Variables		_CJB_SCU00P2ChgSta to	
Axis Error Status A-11		_CJB_SCU15P1ChgSta,	
Axis Variables		_CJB_SCU15P2ChgSta	A-139
TAIS VARIABICS	10, 7(141	_CJB_SCU15P1ChgSta	
В		to _CJB_SCU15P2ChgSta	A-112
		_CJB_SIO00InitSta to _CJB_SIO	95InitSta A-112, A-137
DZA communications appoifications	2.06	_CJB_SIO00Restart	
B7A communications specifications		to _CJB_SIO95Restart	A-112, A-138
B7A Interface ports		_CJB_UnitErrSta	
B7A Interface Units		CJ-series Basic I/O Units	
wiring		list	
Basic Ethernet Setting ErrorA-11		wiring models with connectors	
Basic I/O Unit Information		wiring models with terminal blo	
3-30, A-35, A-37, A-38, A-39, A-100, A-103, A-1	12, A-137	CJ-series Configuration Units	
Basic I/O Units		CJ-series CPU Bus Units	
specifications		list	
Basic Input Unit Input Response Times A-11		CJ-series I/O Control Unit	
pasic system configuration		CJ-series I/O Interface Unit	
pattery connector		CJ-series Special I/O Units	
pattery replacement procedure		list	
pattery service life and replacement period		CJ-series Unit Configuration	
Battery Set2-7		CJ-series Unit configuration	
Battery-backup Memory Check Error		Common Error Status	
BOOTP Server ErrorA-11		Common Variable	
Built-in EtherCAT ErrorA-11		Communications Controller Error	·
ouilt-in EtherCAT port		A-	
Built-in EtherNet/IP ErrorA-11		Communications Error Slave Table	
ouilt-in EtherNet/IP port		Communications Port ErrorA-	
BUSY indicator	3-4	connector types	
_		Connector-Terminal Block Conver	
C		connecting	
		connections	•
_Card1AccessA-10	08, A-131		
_Card1Deteriorated3-10, A-10	08, A-131	contact current vs. service life cha	
_Card1ErrA-10	08, A-130	contact protection circuit	A-33
_Card1PowerFailA-10	08, A-131	control panel installation dimensions	4 44
_Card1ProtectA-10	08, A-130		4-11
_Card1ReadyA-10	08, A-130	Controller components	4 4 4
Carry FlagA-10		connecting	
causes5		Controller Error Status	
CIP Communications Error A-11		CPU Bus Unit Initializing Flags	
_CJB_CBU00InitSta	*	CPU Bus Unit Restart Bits	
to _CJB_CBU15InitSta A-11	I2, A-137	CPU Rack	2-5
_CJB_CBU00Restart	,	CPU Unit	
to _CJB_CBU15RestartA-11	I2. A-138	components and functions	
	.,	resetting	5-3

watchdog timer error	5-3	_EIP_IPAdrCfgErr	A-119, A-150
CPU Unit Overheat	5-24	_EIP_IPAdrDupErr	A-119, A-150
CPU Units		_EIP_IPRTblErr	A-120, A-150
CS/CJ-series I/O Connecting Cables	2-11, 4-19	_EIP_LanHwErr	A-119, A-149
current consumptions		_EIP_MacAdrErr	
_CurrentTime	A-106, A-127	_EIP_MultiSwONErr	
_		_EIP_NTPResultA-	
D		_EIP_NTPResult.ExecNormal	
		_EIP_NTPResult.ExecTime	
dimensions	4-22, A-93	_EIP_NTPSrvErr	A-120, A-152
DIN Track	2-7, 4-16, 4-18	_EIP_PortErr	
DIP Switch Setting Error	5-19	_EIP_RegTargetSta[255]	A-123, A-153
DIP switches	3-3, 3-7	_EIP_TagAdrErr	A-120, A-151
Disabled Slave Table	A-117, A-146	_EIP_TargetNodeErr	
Disconnected Slave Table	A-117, A-146	_EIP_TargetNodeErr[255]	A-124
DNS Server Connection Error	A-120, A-152	_EIP_TargetPLCErr[255]	A-124, A-154
Duplicate Unit Number	5-31	_EIP_TargetPLCModeSta[255]	A-123, A-153
		_EIP_TcpAppCfgErr	A-120, A-152
E		_EIP_TcpAppErr	A-119, A-149
		_EIP_TDLinkAllRunSta	A-123, A-153
_EC_CommErrTbl	A-115. A-145	_EIP_TDLinkCfgErr	A-120, A-151
_EC_DisableSlavTbl		_EIP_TDLinkErr	A-120, A-151
_EC_DisconnSlavTbl		_EIP_TDLinkOpnErr	A-120, A-151
_EC_EntrySlavTbl		_EIP_TDLinkRunSta	A-123, A-153
_EC_ErrSta		_EIP_TDLinkStartCmd	A-125, A-155
_EC_InDataInvalid		_EIP_TDLinkStopCmd	A-125, A-155
_EC_LanHwErr		EMC Directive measures for relay output	
_EC_LinkOffErr		Emergency Message Detected	
_EC_LinkStatus		emergency stop circuit example	
_EC_MacAdrErr		EN 61131-2	
_EC_MBXSlavTbl		End Cover	
_EC_MsgErr		End Cover Missing	
_EC_MstrErr		ERROR indicator	3-4
_EC_NetCfgCmpErr		errors	
_EC_NetCfgErr		checking for non-fatal errors	5-8
_EC_NetTopologyErr		indicators	5-8
_EC_PDActive		instructions that read error status	5-10
_EC_PDCommErr		system-defined variables	
_EC_PDSendErr		table	
_EC_PDSlavTbl		troubleshooting with NS-series PT	
_EC_PDTimeoutErr		troubleshooting with Sysmac Studio	
_EC_PktMonStop		_ErrSta	
_EC_PktSaving		EtherCAT Message Error	
_EC_PortErr		EtherCAT network configuration	
_EC_RegSlavTbl		event codes	
_EC_SlavAdrDupErr		event levels	
_EC_SlavAdrDupErr		Event Log Restoration Error	
_EC_SlavEmergErr		event logs	
_EC_SlavErr		event names	
_EC_SlavErrTbl		_TaskName_ExceedCount	
		_TaskName_Exceeded	
_EC_SlavInitErr		_TaskName_ExecCount	
_EIP_BootpErr		Expansion Racks	
_EIP_CipErr			2 0
_EIP_DNSSrvErr		F	
_EIP_ErrSta		-	
_EIP_EstbTargetSta[255]		fail-safe circuits	16
_EIP_EtnCfgErr		fatal errors	
_EIP_EtnOnlineSta		FINS/TCP Connection Status	
_EIP_IdentityErr	A-120, A-151	i iivo/ i oi ouiiiection status	A-110, A-133

_FINSTCPConnSta	A-110, A-133	M	
First RUN Period Flag	A-109, A-133		
Fujitsu connectors	3-23, 4-34	MAC Address ErrorA-114, A-1	19 A-142 A-149
		MAC addresses	
G		Main Memory Check Error	
		Master Error	
GR terminal	3-14. 4-29	_TaskName_MaxExecTime	
grounding		Maximum Task Execution Time	
99		_MC_AX[64]	
1		_MC_AX_ErrSta	
		_MC_COM	
I/O Bus Check Error	5-28	_MC_ComErrSta	
I/O Bus Error Status		_MC_ErrSta	
I/O Bus Master Error Status		_MC_GRP[32]	
I/O Bus Unit Error Status		_MC_GRP_ErrSta	
I/O Connecting Cables		Message Communications Enabled Slave	
I/O Relay Terminals		MIL connectors	
connecting	1-37 A-55	_TaskName_MinExecTime	
connecting		Minimum Task Execution Time	
connections		Motion Control Function Module Error Stat	
I/O Setting Check Error			
ID information label		Multiple Switches ON Error	A-120, A-132
Identity Error	·	N	
Illegal Packet DiscardedIllegal User Program		NET EDD: "	000-
		NET ERR indicator	
Illegal User Program Execution ID Impossible to Access Special Unit		NET RUN indicator	
Incorrect Power Supply Unit Connected e		Network Communications Instruction Enab	pled Flag .A-110
Incorrect Unit/Expansion Rack Connected		A-133	4 5 0 46
indicators		network configuration	
inductive loads	•	Network Configuration Error	
Input Data Invalid		Network Configuration Information Error	
input devices		Network Configuration Verification Error	
inrush current		Network Connected Slave Table	
installation	5-12	non-fatal errors	
cabinets or control panels	/I_Q	Non-volatile Memory Data Corrupted	
dimensions		Non-volatile Memory Life Exceeded	
height		Non-volatile Memory Restored or Formatte	
Instruction Error Flag		Normal Target Node Information	
interlock circuits		NTP Constant Information	
Internal NJ-series Bus Check Error		NTP Operation Information	
Interrupt Input Unit		NTP Operation Result	
IP Address Duplication Error		NTP Server Connection Error	
ii Address Dupilcation Life	A-119, A-130	Number of Used Ports	A-110, A-133
L		0	
<u> </u>		0	
Lorgoot Rook Number	A 111 A 125	0.11	
Largest Slot Number		Online	A-123, A-152
Largest Slot Number Last Task Execution Time		operation	
_TaskName_LastExecTime		before operation-ready status	4-2
LG terminal		output wiring	
line disconnection detection		precautions	4-41
Link OFF Error		В	
Link OFF Error		Р	
LINK/ACT indicator			
		Packet Monitoring Stopped	
load short-circuit protectionlot numbers		P_CY	
		periodic inspection	
Low Battery Voltage	3-23	Peripheral USB port	
		P_First_RunMode	A-109, A-133

PLC Function Module Error Status	A-110, A-135	SD Memory Card Access Flag	. A-108, A-131
_PLC_ErrSta	A-110, A-135	SD Memory Card Access Power OFF Error	5-27
_PLC_TraceSta[03]	A-134, A-135	SD Memory Card connector	3-3
_PLC_TraceSta[03].IsComplete	A-110	SD Memory Card Data Corrupted	5-27
_PLC_TraceSta[03].IsStart	A-110	SD Memory Card Error Flag	A-130
_PLC_TraceSta[03].IsTrigger	A-110	SD Memory Card Invalid Format	5-26
_PLC_TraceSta[03].ParamErr	A-110	SD Memory Card Invalid Type	5-25
P_Off	A-109, A-132	SD Memory Card Life Exceeded	5-25
P_On	A-109, A-132	SD Memory Card Life Warning Flag 3-10,	, A-108, A-131
_Port_isAvailable	A-110, A-133	SD Memory Card Power Interruption Flag	. A-108, A-131
_Port_numUsingPort	A-110, A-133	SD Memory Card Power Supply Switch	3-3
power consumption		SD Memory Card Ready Flag	
calculating	3-19	SD Memory Card Restored or Formatted	
Power Interruption Count	A-109, A-132	SD Memory Card Write Protected Flag	
power OFF detection time		SD Memory Cards	
power OFF operation		SD PWR indicator	
Power OFF Retention Failure Flag		Serial Communications Unit 0, Port 1/2 Setti	
power supply		Flags	
wiring	4-25	Serial Communications Units 1 to 15, Por	
Power Supply Unit		Changing Flags	•
incorrect model	5-3	service life expectancy	
Power Supply Units2-		Slave Application Error	
selecting		Slave Error	
power supply wiring		Slave Error Table	
_PowerOnCount		Slave Initialization Error	
_PowerOnHour		Slave Node Address Duplicated Error	
P_PRGER		sliders	
precautions	A-103, A-133	slots	
output wiring	1-11	Special I/O Unit Initializing Flags	
Process Data Communicating Slave Table		Special I/O Unit Restart Bits	
Process Data Communicating Slave Table		specifications	
Process Data Communications Status		starting	
		Support Software	
Process Data Reception Timeout		Sysmac Studio	
Process Data Reception Timeout Error		System Time	
Process Data Transmission Error		-	. A-106, A-12 <i>1</i>
PWR indicator	3-14	system-defined variables	A 440 A 40=
0		Auxiliary Area bits for CJ-series Units	
Q		clock	
		communications	
Quick-response Input Unit		debugging	
quick-response inputs	3-24	errors A-108, A-110,	
_		EtherCAT communications errors	
R		EtherCAT communications status	
		EtherNet/IP communications errors	
race Parameter Error Flag	A-110	EtherNet/IP communications status	
Real-Time Clock Failed	5-23	EtherNet/IP communications switches	
Real-Time Clock Stopped	5-22	I/O bus errors	•
Registered Slave Table	A-117, A-145	I/O bus status	
Registered Target Node Information	A-123, A-153	meanings of error status bits	
replacement procedure		motion control functions	
_RetainFail4-3,		power supply	
Retention Failure Flag 4-3,		programming	. A-109, A-132
RUN indicator		SD Memory Cards	. A-108, A-130
RUN output3-1		tasks	. A-107, A-127
,	,		
S		T	
Saving Packet Data File	Λ 117 Λ 147	Tag Data Link Communications Error	. A-120. A-151
Saving Packet Data File		Tag Data Link Communications Start Switch	
	.3=:3		-,

Tag Data Link Communications Status	
Tag Data Link Communications Stop Switch	
Tag Data Link Connection Failed	A-120, A-151
Tag Data Link Setting Error	A-120, A-151
Tag Name Resolution Error	A-120, A-151
Target Node Error Information	A-124, A-154
Target PLC Error Information	A-124, A-154
Target PLC Operating Mode	A-123, A-153
Task Active Flag	A-107, A-127
Task Exceeded Flag	A-107, A-129
Task Execution Count	A-107, A-128
Task Period Exceeded Count	A-107, A-129
TCP Application Communications Error	
TCP/IP Advanced Setting Error	
TCP/IP Basic Setting Error	A-119, A-150
TCP/IP Setting Error	A-120, A-152
Too Many I/O Points	
Total Power ON Time	A-109, A-131
Trace Busy Flag	A-110, A-134
Trace Completed Flag	
Trace Parameter Error Flag	A-135
Trace Trigger Monitor Flag	A-110, A-134
transmission delay switch	3-29
troubleshooting	5-11
U	
Unit connector	
Unit current consumption	
calculating	3-16
Units	
Unsupported Unit Detected	
User Program/Controller Configurations ar	
Error	5-34
User-defined Error Status	A-108, A-130
W	
weights	2-6, 2-10, 2-13
wiring ducts	
write protection key	

OMRON Corporation Industrial Automation Company

Tokyo, JAPAN

Contact: www.ia.omron.com

Regional Headquarters OMRON EUROPE B.V.

Wegalaan 67-69-2132 JD Hoofddorp The Netherlands Tel: (31)2356-81-300/Fax: (31)2356-81-388

OMRON ASIA PACIFIC PTE. LTD. No. 438A Alexandra Road # 05-05/08 (Lobby 2), Alexandra Technopark, Singapore 119967

Tel: (65) 6835-3011/Fax: (65) 6835-2711

OMRON ELECTRONICS LLC

One Commerce Drive Schaumburg, IL 60173-5302 U.S.A. Tel: (1) 847-843-7900/Fax: (1) 847-843-7787

OMRON (CHINA) CO., LTD.
Room 2211, Bank of China Tower,
200 Yin Cheng Zhong Road,
PuDong New Area, Shanghai, 200120, China
Tel: (86) 21-5037-2222/Fax: (86) 21-5037-2200

Authorized Distributor:

© OMRON Corporation 2011 All Rights Reserved. In the interest of product improvement, specifications are subject to change without notice.

Cat. No. W500-E1-01

0711